



Installation, Operation, and Maintenance Manual

2026



M2 Series

Modular Indoor Air Handling Units & Self Contained Units

The information in this document is subject to change. Printed versions may not reflect the most current updates. Please ensure that you have the most recent version prior to referencing any information within the document. Visit (Website) to confirm your version is up to date, or to download the most recent version.



This Page Intentionally Left Blank



TABLE OF CONTENTS

1. SAFETY	1
2. NOTES, WARNINGS, AND CAUTIONS	2
3. FEATURE STRING NOMENCLATURE	9
3.1. Base Model Options Description	10
3.2. Fan Module Description	11
3.3. Filter Module Description	13
3.4. Mixing Box Module Description	14
3.5. Heat Module Description	15
3.6. Blank Module Description	17
3.7. Coil Module Description	18
3.8. Coil Module Description	19
3.9. Controls Module Description	20
3.10. Energy Recovery Module Description	21
3.11. Water-Source Heat Pump Module Description	22
4. UNIT ORIENTATION	24
5. GENERAL INFORMATION	25
5.1. Codes and Ordinances	26
5.2. Receiving Unit	26
5.3. Storage	27
5.4. Direct Expansion (DX) Units	27
5.5. Electric Heating	28
5.6. Wiring Diagrams	29
5.7. Condensate Drain Pan	29
6. INSTALLATION	30
6.1. Locating Units	30
6.2. Lifting the Assembled Unit	31
6.3. Lifting the Individual Modules	34
6.4. Floor Mounted Units	34
6.5. Module Assembly	35
6.6. Evaporator Coils	39
6.7. Hot Gas Reheat	40
6.8. Hot Gas Bypass	40
7. REFRIGERANT-TO-WATER HEAT EXCHANGER	41
7.1. Open Loop Applications	41
7.2. Freezing Water in the Heat Exchanger	42



7.3. Water Piping	42
7.4. Heat Exchanger Safeties.....	44
8. WATERSIDE ECONOMIZER.....	45
9. HEATING COILS.....	47
10. CHILLED WATER COILS.....	48
11. CONDENSATE DRAIN PIPING	49
12. BLOWER WHEELS	51
13. FAN SET SCREW ADJUSTMENT	52
13.1. Banded Wheel Air Adjustment.....	52
14. ELECTRIC HEATING.....	54
15. ELECTRICAL	55
15.1. Cutting Electrical Openings.....	56
15.2. Fuses and Circuit Breakers.....	57
15.3. Thermostat Control Wiring	58
16. ENERGY RECOVERY UNITS	59
16.1. Initial Mechanical Check and Setup.....	59
16.2. Routine Maintenance and Handling.....	60
16.3. Cleaning	61
16.4. Wheel Drive Components.....	62
16.5. Startup Procedure.....	63
16.6. Service.....	63
17. STARTUP	66
17.1. Filters	66
17.2. Check Out.....	66
17.3. Commissioning.....	68
17.4. Operation.....	68
17.5. Refrigerant Detection System.....	69
17.6. Adjusting Refrigerant Charge	70
17.7. Refrigeration Troubleshooting.....	76
18. MAINTENANCE.....	77
18.1. Fan Assembly	77
18.2. Indoor Coils.....	77
18.3. Refrigeration Cycle	77
18.4. Brazed Plate Heat Exchanger Cleaning	78
18.5. E-Coated Coil Cleaning	78
18.6. Electric Heating.....	79
18.7. Steam or Hot Water Heating.....	80



18.8. Cleaning	80
18.9. Chilled Water	80
18.10. DX Water Source Cooling	80
18.11. Refrigerant Removal and Evacuation	80
18.12. Condensate Drain Pans	81
18.13. Lubrication	81
18.14. Phase and Brownout Protection Module	82
18.15. Replacement Parts	82
18.16. AAON Technical Support	82
18.17. Warranty	83
18.18. Filter Replacement	84
18.19. Decommissioning	84
19. APPENDIX A: UNIT SAFETY HIERARCHY	87
20. APPENDIX B: HEAT EXCHANGER CORROSION RESISTANCE	88
21. APPENDIX C: M2 SERIES START-UP FORM	109
21.1. Pre Start-up Checklist	109
21.2. Ambient Temperature	110
21.3. Supply Fan Assembly	110
21.4. Energy Recovery Wheel Assembly	110
21.5. Power Exhaust Fan Assembly	110
21.6. Power Return Fan Assembly	110
21.7. Outside Air/Economizer Dampers	111
21.8. Unit Configuration	111
21.9. Compressors/DX Cooling	111
21.10. Refrigeration System 1 - Cooling Mode	111
21.11. Refrigeration System 2 - Cooling Mode	111
21.12. Refrigeration System 3 - Cooling Mode	112
21.13. Refrigeration System 4 - Cooling Mode	112
21.14. Refrigeration System 1 - Heating Mode (Heat Pump Only)	112
21.15. Refrigeration System 2 - Heating Mode (Heat Pump Only)	112
21.16. Refrigeration System 3 - Heating Mode (Heat Pump Only)	112
21.17. Refrigeration System 4 - Heating Mode (Heat Pump Only)	112
21.18. Air-Cooled Condenser Fans	113
21.19. Water/Glycol System	113
21.20. Electric Heating	113
21.21. Electric Preheating	114
21.22. A2L Mitigation Board	114



22. APPENDIX D: MAINTENANCE LOG	115
23. LITERATURE CHANGE HISTORY	116

TABLE OF FIGURES

Figure 1: Typical M2 Series Selection.....	9
Figure 2: Unit Orientation	24
Figure 3: Lockable Handle	27
Figure 4: Service Access Clearance.....	30
Figure 5: M2 Series Unit Four Point Lifting	32
Figure 6: M2 Series Unit Eight Point Lifting	33
Figure 7: M2 Series Individual Module Bottom Tier Lifting	34
Figure 8: M2 Series Individual Module Top Tier Lifting.....	34
Figure 9: Ceiling Suspended Mounting Frame.....	34
Figure 10: Module Assembly Schematic	36
Figure 11: Bolted Base Rail	37
Figure 12: Bar Clamp	37
Figure 13: Self-Tapping Screw.....	37
Figure 14: Strap Types	38
Figure 15: Strap Locations	38
Figure 16: Strap Positioning.....	38
Figure 17: Strap Installation	38
Figure 18: Power and Control Wiring	38
Figure 19: Quick Connects.....	38
Figure 20: A2L Safety Vent Tube	39
Figure 21: TXV Bulb Position	39
Figure 22: Water-Source Heat Pump Water Piping.....	42
Figure 23: Water-Cooled Only Water Piping.....	43
Figure 24: Waterside Economizer Piping.....	45
Figure 25: Steam Distributing Piping	47
Figure 26: Hot Water Piping.....	47
Figure 27: Chill Water Piping.....	48
Figure 28: Draw-Through Drain Trap.....	49
Figure 29: Blow-Through Drain Trap	50
Figure 30: Plenum Fan Gap Tolerances.....	52
Figure 31: Supply Fan Banding.....	53
Figure 32: Energy Recovery Wheel.....	59
Figure 33: Cross Section of Air Seal Structure	60
Figure 34: Lifting Hole Locations.....	61
Figure 35: Avoid Racking of Cassette Frame.....	62

Figure 36: Diameter Seal Adjustment.....	63
Figure 37: Hub Seal Adjustment.....	63
Figure 38: Segment Retainer	64
Figure 39: Segment Installation	64
Figure 40: Belt Replacement.....	65
Figure 41: Refrigerant Charge of Largest Circuit	70
Figure 42: PBO.....	82
Figure 43: Filter Layout (Viewed from the Upstream Side of the Cooling Coil)	86
Figure 44: Unit Safety Hierarchy	87
Figure 45: A2L Priority Jumper	87
Figure 46: Building Smoke Control Priority Jumper.....	87
Figure 47: A/C Split System Piping, Suction Down.....	91
Figure 48: A/C Split System Piping, Suction Up.....	92
Figure 49: A/C with LAC Split System Piping, Suction Down.....	93
Figure 50: A/C with LAC Split System Piping, Suction Up.....	94
Figure 51: A/C with Modulating Hot Gas Reheat Split System Piping, Suction Down	95
Figure 52: A/C with Modulating Hot Gas Reheat Split System Piping, Suction Up	96
Figure 53: A/C with Hot Gas Bypass Split System Piping, Suction Down	97
Figure 54: A/C with Hot Gas Bypass Split System Piping, Suction Up.....	98
Figure 55: A/C with Modulating Hot Gas Reheat and Hot Gas Bypass Split System Piping, Suction Down.....	99
Figure 56: A/C with Modulating Hot Gas Reheat and Hot Gas Bypass Split System Piping, Suction Up.....	100
Figure 57: Heat Pump Split System Piping, Suction Down	101
Figure 58: Heat Pump Split System Piping, Suction Up.....	102
Figure 59: Heat Pump with Modulating Hot Gas Reheat Split System Piping, Suction Down.....	103
Figure 60: Heat Pump with Modulating Hot Gas Reheat Split System Piping, Suction Up.....	104
Figure 61: Heat Pump with Hot Gas Bypass Split System Piping, Suction Down	105
Figure 62: Heat Pump with Hot Gas Bypass Split System Piping, Suction Up	106
Figure 63: Heat Pump with Modulating Hot Gas Reheat and Hot Gas Bypass Split System Piping, Suction Down.....	107
Figure 64: Heat Pump with Modulating Hot Gas Reheat and Hot Gas Bypass Split System Piping, Suction Up.....	108



TABLE OF TABLES

Table 1: Minimum Clearances.....	30
Table 2: Glycol Freezing Points.....	42
Table 3: Standard Water-Source Connections	43
Table 4: Steam Distributing Coil Sweat Connection Sizes (OD)	47
Table 5: Hot Water Coil Sweat Connection Sizes (OD).....	47
Table 6: Chilled Water Coil Sweat Connection Sizes (OD).....	48
Table 7: Draw-Through and Blow-Through Drain Trap Dimensions (Metric)	49
Table 8: Draw-Through and Blow-Through Drain Trap Dimensions (Imperial)	49
Table 9: Plenum Fan Set Screw Specifications	52
Table 10: Electric Heating Capacities.....	54
Table 11: Nameplate Voltage Markings.....	55
Table 12: 35 KAIC Fuse Sizing	57
Table 13: 65 KAIC Fuse Sizing	57
Table 14: Control Wiring	58
Table 15: Acceptable Refrigeration Circuit Values (Metric)	71
Table 16: Acceptable Refrigeration Circuit Values (Imperial).....	71
Table 17: Acceptable Water-Cooled Refrigeration Circuit Values (Metric).....	71
Table 18: Acceptable Water-Cooled Refrigeration Circuit Values (Imperial)	71
Table 19: Minimum Circulation Airflow and Room Area for a Given Charge.....	73
Table 20: R-454B Refrigerant Temperature-Pressure Chart (Metric)	74
Table 21: R-454B Refrigerant Temperature-Pressure Chart (Imperial).....	75
Table 22: Refrigeration Problems, Causes, and Solutions	76
Table 23: Min and Max Water Pressures and Temps	80
Table 24: Fan Bearing Lubrication Schedule	82
Table 25: M2-018 Filters	85
Table 26: M2-026 Filters	85
Table 27: M2-036 Filters	85
Table 28: Filter Conversion	85
Table 29: Heat Exchanger Corrosion Resistance	89
Table 30: Chloride Content	90



This Page Intentionally Left Blank



1. SAFETY

Startup and service must be performed by a Factory Trained Service Technician competent in working with flammable refrigerants.

The unit is for indoor use only. See General Information section for more unit information.

The supply and return air ducts must be derived from the same space. It is recommended that ducts be provided with access panels to allow inspection for duct tightness. When a down flow duct is used with electric heat, the exhaust duct should be an L shaped duct.

For ducted applications, supply and return must be ducted directly to the space served by the unit. If plenum return is to be utilized, the return plenum must be provided with a refrigerant detection system or ventilation in accordance with ASHRAE 15 requirements.

Install this appliance in accordance with local codes. In the absence of local codes, install in accordance with ASHRAE 15, ASHRAE 15.2, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52.

Clean duct and components upon completion of the construction setup.

Every unit has a unique equipment nameplate with electrical, operational, and unit clearance specifications. Always refer to the unit nameplate for specific ratings unique to the model you have purchased.

READ THE ENTIRE INSTALLATION, OPERATION, AND MAINTENANCE MANUAL. OTHER IMPORTANT SAFETY PRECAUTIONS ARE PROVIDED THROUGHOUT THIS MANUAL.

Keep this manual and all literature safeguarded near or on the unit.

2. NOTES, WARNINGS, AND CAUTIONS

Attention Must be paid to the following statements.

Note: Notes are intended to clarify the unit installation, operation, and maintenance.



CAUTION

Caution statements are given to prevent actions that may result in equipment damage, property damage, or personal injury.



WARNING

Warning statements are given to prevent actions that could result in equipment damage, property damage, personal injury, or death.



DANGER

Danger statements are given to prevent actions that will result in equipment damage, property damage, and severe personal injury or death.



WARNING

Electric Shock, Fire or Explosion Hazard

Failure to follow safety warnings exactly could result in dangerous operation, serious injury, death, or property damage.

Improper servicing could result in dangerous operation, serious injury, death, or property damage.

- Before servicing, disconnect all electrical power to the furnace. More than one disconnect may be provided.
- When servicing controls, label all wires prior to disconnecting. Reconnect wires correctly.
- Verify proper operation after servicing. Secure all doors with key-lock or nut and bolt.



WARNING

Qualified Installer

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Startup and service must be performed by a Factory Trained Service Technician. A copy of this IOM should be kept with the unit.



WARNING

Electric shock hazard. Before servicing, shut off all electrical power to the unit, including remote disconnects, to avoid shock hazard or injury from rotating parts. Follow proper Lockout-Tagout procedures.



CAUTION

What To Do If You Smell Gas

- Do not try to turn on unit.
- Shut off main gas supply.
- Do not touch any electric switch.
- Do not use any phone in the building.
- Leave the building immediately.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.



WARNING

During installation, testing, servicing, and troubleshooting of the equipment it may be necessary to work with live electrical components. Only a qualified licensed electrician or individual properly trained in handling live electrical components shall perform these tasks.

Standard NFPA-70E, an OSHA regulation requiring an Arc Flash Boundary to be field established and marked for identification of where appropriate Personal Protective Equipment (PPE) be worn, should be followed.



WARNING

Fire, Explosion Or Carbon Monoxide Poisoning Hazard

Failure to replace proper controls could result in fire, explosion or carbon monoxide poisoning. Failure to follow safety warnings exactly could result in serious injury, death or property damage. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this appliance.



WARNING

Rotating Components

Unit contains fans with moving parts that can cause serious injury. Do not open door containing fans until the power to the unit has been disconnected and the fan wheel has stopped rotating.



WARNING

Variable Frequency Drives

Do not leave VFDs unattended in hand mode or manual bypass. Damage to personnel or equipment can occur if left unattended. When in hand mode or manual bypass mode VFDs will not respond to controls or alarms



WARNING

Grounding Required

All field installed wiring must be completed by qualified personnel. Field installed wiring must comply with NEC/CEC, local, and state electrical code requirements. Failure to follow code requirements could result in serious injury or death. Provide proper unit ground in accordance with these code requirements.



CAUTION

Electric motor over-current protection and overload protection may be a function of the Variable Frequency Drive to which the motors are wired. Never defeat the VFD motor overload feature. The overload ampere setting must not exceed 115% of the electric motors FLA rating as shown on the motor nameplate.



CAUTION

Rotation must be checked on all MOTORS AND COMPRESSORS of 3 phase units at startup by a qualified service technician. Scroll compressors are directional and can be damaged if rotated in the wrong direction. Compressor rotation must be checked using suction and discharge gauges. Fan motor rotation should be checked for proper operation. Alterations should only be made at the unit power connection



WARNING

Unit Handling

To prevent injury or death lifting equipment capacity shall exceed unit weight by an adequate safety factor. Always test-lift unit not more than

61 cm (24 inches) high to verify proper center of gravity lift point to avoid unit damage, injury or death.



CAUTION

Failure to properly drain and vent coils when not in use during freezing temperature may result in coil and equipment damage.


WARNING

Do not use oxygen, acetylene, or air in place of refrigerant and dry nitrogen for leak testing. A violent explosion may result causing injury or death.


WARNING

This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children must be supervised around this appliance.


WARNING
Water Pressure

Prior to connection of condensing water supply, verify water pressure is less than maximum pressure shown on unit nameplate. To prevent injury or death due to instantaneous release of high pressure water, relief valves should be field supplied on system water piping.


CAUTION

Door compartments containing hazardous voltage or rotating parts are equipped with door latches to allow locks. Door latch are shipped with nut and bolts requiring tooled access. If you do not replace the shipping hardware with a pad lock always re-install the nut & bolt after closing the door.


WARNING

Always use a pressure regulator, valves, and gauges to control incoming pressures when pressure testing a system. Excessive pressure may cause line ruptures, equipment damage or an explosion which may result in injury or death.


CAUTION

Do not clean DX refrigerant coils with hot water or steam. The use of hot water or steam on refrigerant coils will cause high pressure inside the coil tubing and damage to the coil.


CAUTION

To prevent damage to the unit, do not use acidic chemical coil cleaners. Do not use alkaline chemical coil cleaners with a pH value greater than 8.5, after mixing, without first using an aluminum corrosion inhibitor in the cleaning solution.


CAUTION

Cleaning the cooling tower or the condenser water loop with harsh chemicals, such as hydrochloric acid (muriatic acid) or chlorine, can damage the water-cooled condenser. Care should be taken to avoid allowing chemicals to enter the water-cooled condenser. See Appendix A - Heat Exchanger Corrosion Resistance for more information.


WARNING

Some chemical coil cleaning compounds are caustic or toxic. Use these substances only in accordance with the manufacturer's usage instructions. Failure to follow instructions may result in equipment damage, injury or death.


CAUTION

In order to avoid a hazard due to inadvertent resetting of the THERMAL CUT-OUT, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.


WARNING
Open-Loop Applications

Failure of the condenser as a result of chemical corrosion is excluded from coverage under AAON Inc. warranties and the heat exchanger manufacturer's warranties.


CAUTION

PVC (Polyvinyl Chloride) and CPVC (Chlorinated Polyvinyl Chloride) are vulnerable to attack by certain chemicals. Polyolester (POE) oils used with R-454B and other refrigerants, even in trace amounts, in a PVC or CPVC piping system will result in stress cracking of the piping and fittings and complete piping system failure.


WARNING
Water Freezing

Failure of the condenser due to freezing will allow water to enter the refrigerant circuit and will cause extensive damage to the refrigerant circuit components. Any damage to the equipment as a result of water freezing in the condenser is excluded from coverage under AAON warranties and the heat exchanger manufacturer warranties.


WARNING

Do not weld or cut foam panel with plasma cutters or a cutting torch – When burnt the foam produces dangerous fumes.


WARNING
Hot Parts

Disconnect all power, close all isolation valves and allow equipment to cool before servicing equipment to prevent serious injury. Equipment may have multiple power supplies. Electric resistance heating elements and hot water or steam heating coils may have automatic starts. Hot water will circulate even after power is off.


WARNING

Do not work in a closed area where refrigerant or nitrogen gases may be leaking. A sufficient quantity of vapors may be present and cause injury or death.


WARNING

Never attempt to open an access door or remove a panel while the unit is running. Pressure in the unit can cause excessive force against the panel.


WARNING

Ensure that sufficient dampers will be open to provide air path before fan is allowed to run.



WARNING

Units with VFD driven motors/compressors have adjustable overload settings. These are set by the AAON factory for the protection of these motors/compressors and must not be adjusted over this factory setpoint or bypassed.



CAUTION

Compressor Cycling

5-Minute Off Time

To prevent motor overheating, compressors must cycle off for a minimum of 5 minutes.

5-Minute On Time

To maintain the proper oil level, compressors must cycle on for a minimum of 5 minutes.

The cycle rate must not exceed 6 starts per hour.



WARNING

This appliance contains a flammable refrigerant. Minimum floor area on nameplate is based on factory charge at a ceiling/release height of 2.2 m (7.2 ft) in accordance with UL 60335-2-40. Refer to Table 11 for different allowable room areas based on other charges and ceiling/release heights. Apply altitude adjustment factor to table values as required by local codes.



WARNING

Connected ductwork must be free of potential ignition sources, such as hot surfaces above 700 °C (1292 °F) or electrical devices prone to arcing or sparking. Potential ignition sources within the ductwork may only be allowed if the minimum air velocity across these components is above 1 m/s (200 ft/min) during any point which the component can function.



WARNING

If this appliance is installed to serve a conditioned area less than the minimum area as indicated in Table 11, the served space must be free of continuously operating open flames or other sources of ignition. Additional ventilation is required in accordance with ASHRAE 15.



WARNING

Only auxiliary devices approved by manufacturer or declared suitable with the refrigerant may be installed in ductwork.



WARNING

Minimum circulation airflow is required to prevent stagnation of refrigerant in the event of a refrigerant leak. Zone dampers and VAV boxes must be operated to allow for minimum circulation airflow in the event of a refrigerant leak.



WARNING

Do not use torch or other potential ignition source to detect refrigerant leaks. Use only electronic detector suitable for the refrigerant, or bubble method with chlorine free detergent.



WARNING

Flammable refrigerant. Be aware that refrigerant does not contain an odor.



WARNING

If refrigerant leak is detected, remove/extinguish all sources of open flame. If repairing refrigerant leak requires brazing, remove all refrigerant before beginning brazing.


WARNING

Do not use means to accelerate the defrosting process or to clean, other than those recommended in this manual.


WARNING

The appliance shall be stored in a room without continuously operating ignition sources (i.e. open flames, an operating gas appliances or operating electric heater).


WARNING

Refrigerant Detection System activated circulation airflow. In the event of refrigerant leak within airstream, indoor blower is activated to provide circulation airflow. Mitigation board provided with alarm output. Wire all zone dampers and VAV boxes to alarm output to open in the event of a refrigerant leak alarm.


CAUTION

If an electrical component requires changing, verify specifications and intended application match the component to be replaced including sealed or intrinsically safe specifications. Damaged sealed or intrinsically safe component must be replaced. Electrical components must be free from producing arcs or sparks. The maintenance guidelines in this manual must always be followed. If in doubt, contact Factory Technical Support.


WARNING

Ensure that there are no live electrical components or wiring exposed when adjusting charge, recovering charge, or purging the system. Ensure that earthing continuity is unbroken.


WARNING

Flammable refrigerant. Do not pierce or burn tubing or refrigerant containing components.


WARNING

If any damage or fault to electrical equipment exists, do not provide power to unit. If the issue can not be resolved immediately, report issue to equipment owner to ensure power is not supplied before issue is resolved.


CAUTION

Field installed pipework must be protected from physical damage in operation and service. All joints must be accessible for inspection prior to being covered. Install in accordance with applicable local codes. In the absence of local codes, install in accordance with ASHRAE 15, ASHRAE 15.2, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52. Do not install any field made joints within conditioned airstream

3. FEATURE STRING NOMENCLATURE

Base Feature String	Individual Module Feature String
Identifies the main unit features and options.	Identifies module configurations, features and options.
M2-H-026-L-2-A-A-0-C-0:	FTF-101-P-A0-00000-00000-0-0
	HRA-102-A-00-00000-00000-0-0
	TRA-103-0-00-00000-00000-0-0
	CLC-104-M-00-00000-612IO-S-0
	PHA-105-H-00-00000-D0200-0-0
	SDB-106-K-EI-F0000-00000-0-0
	EDB-201-J-FI-F0000-00000-0-0
	FTF-203-P-A0-00000-00000-0-0
	FTF-203-P-A0-00000-00000-0-0

A complete unit feature string consists of a base model feature string followed by a series of individual module feature strings. In the individual module model number, the three numbers after the three letter Module ID indicate the position of the module in unit assembly, increasing in value from the return/outside air

section to the discharge air section and from the bottom to the top. In the below example, the cooling coil module in Figure 1, CLC-104-M-00-00000-612IO-S-0, is the fourth module on the first level of the unit. The exhaust fan, EDB-201-J-FI-F0000-00000-0-0, is the first module on the second level.

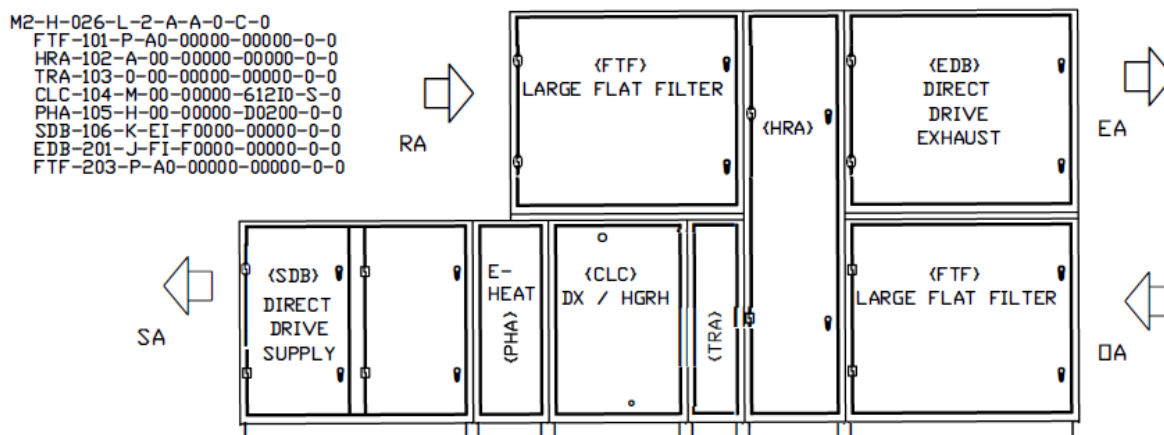


Figure 1: Typical M2 Series Selection



3.1. Base Model Options Description

GEN	TYPE	UNIT SIZE	SUPPLY AIRFLOW	VOLTAGE	ASSEMBLY	WIRING	PAINT	BASE RAIL	SPECIAL
M2	- H	- 018	- R	- 2	- A	- A	- 0	- C	- 0

Series and Generation

M2

Type

H = Horizontal

Unit Size

018 = 18 ft² Coil (6,000 – 10,300 cfm)

026 = 26 ft² Coil (11,500 – 15,600 cfm)

036 = 36 ft² Coil (15,500 – 21,600 cfm)

Supply Airflow

L = Left Hand

R = Right Hand

Voltage

2 = 230V/3Φ/60Hz

3 = 460V/3Φ/60Hz

4 = 575V/3Φ/60Hz

8 = 208V/3Φ/60Hz

Assembly

A = Factory Assembled

B = Individual Modules

Wiring

A = Control Wiring in Fan Box

Paint

0 = Standard

A = Indoor Unit with Exterior Corrosion Protection

B = Indoor Unit with Interior and Exterior Corrosion Protection

E = Shipping Shrink Wrap

F = Indoor Unit with Exterior Corrosion Protection + Shipping Shrink Wrap

G = Indoor Unit with Interior and Exterior Corrosion Protection + Shipping Shrink Wrap

Base Rail

C = 6 inch High

Special

0 = None

X = Special Pricing Authorization



3.2. Fan Module Description

MODULE ID
POSITION
MOTOR SIZE
SDD - 103 - J - B-I-F-00-00-A-0000-0-0

Module ID

SDB = Direct-Drive Supply
SDD = Direct-Drive Supply, Top Discharge
SDM = Dual-Fan Direct-Drive Supply
SDN = Dual-Fan Direct-Drive Supply, Top Discharge
EDB = Direct-Drive Power Exhaust
EDD = Direct-Drive Power Exhaust, Top Discharge
RDB = Direct-Drive Power Return
RDM = Dual-Fan Direct-Drive Power Return

Position

= Level and Position of Module in Air Handling Unit

Motor Size

F = 2 hp
G = 3 hp
H = 5 hp
J = 7.5 hp
K = 10 hp
L = 15 hp
M = 20 hp
N = 25 hp
P = 30 hp



3.2.1. Fan Module Description (Continued)

SDD-103-J - **B** - **I** - **F** - **00** - **00** - **A** - **0000** - **0** - **0**

BLOWER
ISOLATION
MOTOR TYPE
BLANK
PULLEYS
SAFETY CONTROL
BLANK
BLANK
TYPE

Blower

B = 18" Backward Curved Plenum
C = 22" Backward Curved Plenum
D = 27" Backward Curved Plenum
E = 30" Backward Curved Plenum
F = 33" Backward Curved Plenum
G = 37" Backward Curved Plenum
H = 24" Backward Curved Plenum
L = 2 x 18" Backward Curved Plenum
M = 2 x 22" Backward Curved Plenum
N = 2 x 24" Backward Curved Plenum
P = 2 x 27" Backward Curved Plenum

Isolation

I = Fan Isolation

Motor Type

B = Premium Eff. 1760 rpm
C = Premium Eff. 1760 rpm with VFD
E = Premium Eff. 1170 rpm
F = Premium Eff. 1170 rpm with VFD

Blank 1

00 = Standard

Pulleys

= Pulley Combination

Safety Control

0 = None
A = Phase & Brownout Protection

Blank 2

0000 = Standard

Blank 3

0 = Standard

Type

0 = None
X = Special Pricing Authorization



3.3. Filter Module Description

MODULE ID	POSITION	FILTER TYPE	FILTERS	SAFETY	CONTROLS	BLANK	2 ND FILTER TYPE	2 ND FILTER	BLANK	FILTER	OPTIONS	TYPE
FTF - 102 -	P -	A0 -	0 -	0000 -	0 -	00 -	00 -	0 -	0 -	0 -	0	0

Module ID

FTF = Large Flat Filter

FTH = Cartridge Filter with Flat Pre-Filter

Position

= Level and Position of Module in Air Handling Unit

Filter Type

P = Pleated

Filters

A0 = 2-inch Pleated, 30% Eff.

B0 = 4-inch Pleated, 30% Eff.

C0 = 4-inch Pleated, 65% Eff.

D0 = 4-inch Pleated, 85% Eff.

E0 = 4-inch Pleated, 95% Eff.

Safety Control

0 = Standard

2 = Firestat

Blank 1

0000 = Standard

Second Filter Type

0 = Standard - None

C = Cartridge

Second Filter

00 = Standard - None

C0 = 12-inch Cartridge, 65% Eff.

D0 = 12-inch Cartridge, 85% Eff.

E0 = 12-inch Cartridge, 95% Eff.

Blank 2

00 = Standard

Filter Options

0 = Standard - None

A = Magnehelic Gauge

B = Clogged Filter Switch

C = Magnehelic Gauge & Clogged Filter Switch

Type

0 = None

X = Special Pricing Authorization

3.4. Mixing Box Module Description

MODULE ID	POSITION	ACTUATOR	FILTERS	SAFETY CONTROLS	BLANK	BYPASS OPENING	BLANK	FILTER OPTIONS	TYPE
MBH	101	A	00	0	0000	0	0000	0	0

Module ID

MBA = Vertical Damper

MBB = Horizontal Top Damper

MBC = Vertical & Horizontal Bottom Damper

MBF = Horizontal Bottom Damper

MBH = Vertical & Horizontal Top Damper

Position

= Level and Position of Module in Air Handling Unit

Actuator

0 = Standard - None

A = Two-Position Actuator

B = DDC Actuator

Filters

00 = Standard - None

Safety Control

0 = Standard

2 = Firestat

Blank

0000 = Standard

Bypass Opening

0 = Standard - None

A = Top Open

B = Bottom Open

Blank

0000 = Standard

Filter Options

0 = Standard - None

A = Magnehelic Gauge

B = Clogged Filter Switch

C = Options A + B

Type

0 = Standard - None

X = Special Pricing Authorization



3.5. Heat Module Description

MODULE ID	POSITION	FUNCTION	FILTERS	ROWS	FPI	CIRCUITING	COATING	
PHA	-101-	H	-00-	0	-00-	0	-0-	E-02-0-0-0-0

Module ID

PHA = Electric Heat

PHB = Hot Water Coil

Position

= Level and Position of Module in Air Handling Unit

Function

B = Heating + Dehumidification

D = Dehumidification

H = Heating

Filters

00 = None

Heating Coil Rows

0 = No Hot Water Heating

1 = 1 Row

2 = 2 Rows

FPI

00 = No Hot Water Heating

08 = 8 fpi

10 = 10 fpi

12 = 12 fpi

Circuiting

0 = No Hot Water Heating

F = Single Serpentine

H = Half Serpentine

Q = Quarter Serpentine

Coating

0 = Standard

P = Polymer E-Coating

S = Stainless-Steel Coil Casing

K = Stainless-Steel Coil Casing & Polymer E-Coating



3.5.1. Heat Module Description (Continued)

	HEAT CAPACITY	STAGES	FUEL GAS	COMB INTAKE	FILTER OPTIONS	TYPE
PHA-101-H-00-0-00-0-0	E	02	0	0	0	0

Heat Capacity

0 = Hot Water Heating Coil
D = 28 kW (21 kW @ 208V)
E = 42 kW (31.5 kW @ 208V)
F = 56 kW (42 kW @ 208V)
G = 70 kW (52.2 kW @ 208V)
J = 84 kW (63 kW @ 208V)
K = 112 kW (84.1 kW @ 208V)
M = 168 kW (126.2 kW @ 208V)
Y = 140kW (105.2 kW @ 208V)

Stages

00 = Hot Water Heating Coil
01 = 1 Stage
02 = 2 Stage
03 = 3 Stage
04 = 4 Stage
05 = 5 Stage
06 = 6 Stage

Fuel Gas

0 = [Hot Water/Electric Heat]

Combustion Intake

0 = [Hot Water/Electric Heat]

Filter Options

0 = Standard

Type

0 = None
S = Steam Heating Coil
X = Special Pricing Authorization



3.6. Blank Module Description

MODULE ID	POSITION	BLANK	AIRWAY TYPE	SAFETY CONTROL	BLANK	BYPASS OPENING	BLANK	DRAINPAN TYPE	TYPE
BBA	- 101	- 0	- AR	- 0	- 0000	- 0	- 0000	- 0	- 0

Module ID

BBA = Small

BBC = Large

BBD = XL

BBE = XXL

CBA = Small with Drain Pan

CBC = Large with Drain Pan

CBD = XL with Drain Pan

CBE = XXL with Drain Pan

Position

= Level and Position of Module in Air Handling Unit

Blank

0 = Standard

Airway Type

00 = Standard

AR = Top Open, Right-Hand End Panel

AL = Top Open, Left-Hand End Panel

Safety Control

0 = None

2 = Firestat

Blank

0000 = Standard

Bypass Opening

0 = None

A = Top Opening

B = Bottom Opening

Blank

0000 = Standard

Drain Pan Type

0 = None

A = Auxiliary

Type

0 = None

X = Special Pricing Authorization

3.7. Coil Module Description

MODULE ID	POSITION	COOLING TYPE	HEAT Kw	HEAT STAGES
CLC - 103 -	C	-	0 - 0	- 0-00-0-0-6-10-I-P-S-0

Module ID

CLB = Chilled Water or DX

CLC = DX + Hot Gas Reheat

CLF = Hot Water + Chilled Water or DX

Position

= Level and Position of Module in Air Handling Unit

Cooling Type

0 = None

C = Chilled Water

M = R-454B DX

N = R-454B Hot Gas Bypass [HGB] Lead

P = R-454B HGB Lead + HGB Lag

Q = R-454B HGB Non-Variable Compressors [HGBNV]

R = R-454B Heat Pump

S = R-454B HGB Lead + Heat Pump

T = R-454B HGB Lead + HGB Lag + Heat Pump

U = R-454B HGBNV + Heat Pump

Electric Heat Capacity

0 = No Electric Heat

Electric Heat Stages

0 = Standard - None

3.8. Coil Module Description

HEAT COIL				COOLING COIL						
ROWS	FPI	CIRCUIT	COATING	ROWS	FPI	CIRCUIT	COATING	DRAINPAN	TYPE	TYPE
CLC-103-C-0-0	- 0	- 00	- 0	- 0	- 6	- 10	- I	- P	- S	- 0

Heating Coil Rows

0 = No Hot Water Heating

1 = 1 Row

2 = 2 Rows

Heat Coil FPI

00 = No Hot Water Heating

08 = 8 fpi

10 = 10 fpi

12 = 12 fpi

14 = 14 fpi

Heat Coil Circuiting

0 = No Hot Water Heating

F = Single Serpentine

H = Half Serpentine

Q = Quarter Serpentine

Heat Coil Coating

0 = Standard

P = Polymer E-Coating

S = Stainless-Steel Coil Casing

K = Stainless-Steel Coil Casing & Polymer E-Coating

Cooling Coil Rows

0 = No Cooling Coil

4 = 4 Rows

6 = 6 Rows

8 = 8 Rows

Cooling Coil FPI

00 = No Cooling Coil

08 = 8 fpi

10 = 10 fpi

12 = 12 fpi

Cooling Coil Circuiting

0 = No Cooling Coil

D = Double Serpentine

F = Single Serpentine

H = Half Serpentine

Q = Quarter Serpentine

I = DX Dual Circuit, Interlaced

Cooling Coil Coating

0 = Standard

P = Polymer E-Coating

S = Stainless-Steel Coil Casing

K = Stainless-Steel Coil Casing & Polymer E-Coating

Drain Pan Type

0 = No Drain Pan

S = Stainless-Steel

Type

0 = None

S = Steam Heating Coil

X = Special Pricing Authorization



3.9. Controls Module Description

MODULE ID	POSITION	BLANK	BLANK	SAFETY CONTROL	BLANK	BLANK	BLANK	TYPE
TRA	- 101	- 0	- 00	- 0	- 0000	- 00000	- 0	- 0

Module ID

TRA = Small

TRC = Large

Position

= Level and Position of Module in Air Handling Unit

Blank

0 = Standard

Blank

00 = Standard

Safety Options

0 = Standard

2 = Firestat

Blank

0000 = Standard

Blank

00000 = Standard

Blank

0 = Standard

Type

0 = None

X = Special Pricing Authorization



3.10. Energy Recovery Module Description

MODULE ID	POSITION	WHEEL SIZE	RECOVERY TYPE	BLANK	BLANK	VFD CONTROL	TYPE
HRA	- 101	- A	- 00	- 00000	- 00000	- 0	- 0

Module ID

HRA = AAONAIRE® Energy Recovery Wheel

Position

= Level and Position of Module in Air Handling Unit

Wheel Size

A = Standard

Recovery Type

00 = Standard

0A = Total Energy Recovery + 1% Purge

A0 = Sensible Only Energy Recovery

AA = Sensible Only Energy Recovery + 1% Purge

Blank

00000 = Standard

Blank

00000 = Standard

VFD Control

0 = Standard

A = VFD Controlled Wheel

Type

0 = None

X = Special Pricing Authorization

3.11. Water-Source Heat Pump Module Description

MODULE ID	POSITION	REVISION	CAPACITY	COMP	STAGING	BLANK	REFRIG OPTIONS
WHP	- 204	- A	- 25	- L	- N	- 000	- D - A-0-H-0-0-0

Module ID

WHP = Water-source heat pump

WCC = Water-cooled condenser (A/C only)

Position

= Level and Position of Module in Air Handling Unit

Revision

A

Capacity

16 = 16 tons

18 = 18 tons

20 = 20 tons

25 = 25 tons

30 = 30 tons

40 = 40 tons

50 = 50 tons

60 = 60 tons

Compressor Style

J = R-454B Two-Step Capacity Scroll Compressor

L = R-454B Variable Capacity Scroll Compressor

M = R-454B Tandem Scroll Compressor

N = R-454B Tandem Variable Capacity Scroll Compressor

Staging

J = 2 On/Off Refrigeration Systems

K = Lead Variable Capacity Refrigeration System + Lag On/Off Refrigeration System

M = 2 Two-Step Refrigeration Systems

N = Lead Variable Capacity Refrigeration System + Lag Two-Step Refrigeration System

Blank

000 = Standard

Refrigeration Options

0 = Standard

A = Hot Gas Bypass [HGB] - Lead Stage

B = HGB Lead + HGB Lag

C = HGB Lag

D = Modulating Hot Gas Reheat [MHGR]

E = HGB Lead + MHGR

F = HGB Lead + HGB Lag + MHGR

G = HGB Lag + MHGR



3.11.1. Water-Source Heat Pump Module Description (Continued)

	REFRIG	ACCESS	BLANK	WATER	SIDE	HEAT	EXCHANGER	BLANK	TYPE			
WHP-204-A-25-L-N-000-D	-	A	-	0	-	H	-	0	-	0	-	0

Refrigeration Accessories

0 = Standard
A = Sight Glass
B = Compressor Isolation Valves
C = Options A + B

Blank

0 = Standard

Water-Side Options

B = Water Flow Switch (WFS)
F = WFS + Balancing Valves
G = WFS + Motorized Shut-off Valve
H = WFS + 2-Way Head Pressure Control
J = WFS + 3-Way Head Pressure Control
K = WFS + Balancing Valves + Motorized Shut-off Valve
L = WFS + Balancing Valves + 2-Way Head Pressure Control
M = WFS + Balancing Valves + 3-Way Head Pressure Control

Heat Exchanger Type

0 = Standard

Blank

0 = Standard

Type

0 = None
X = Special Pricing Authorization

4. UNIT ORIENTATION

Determine left or right-hand orientation/connections:

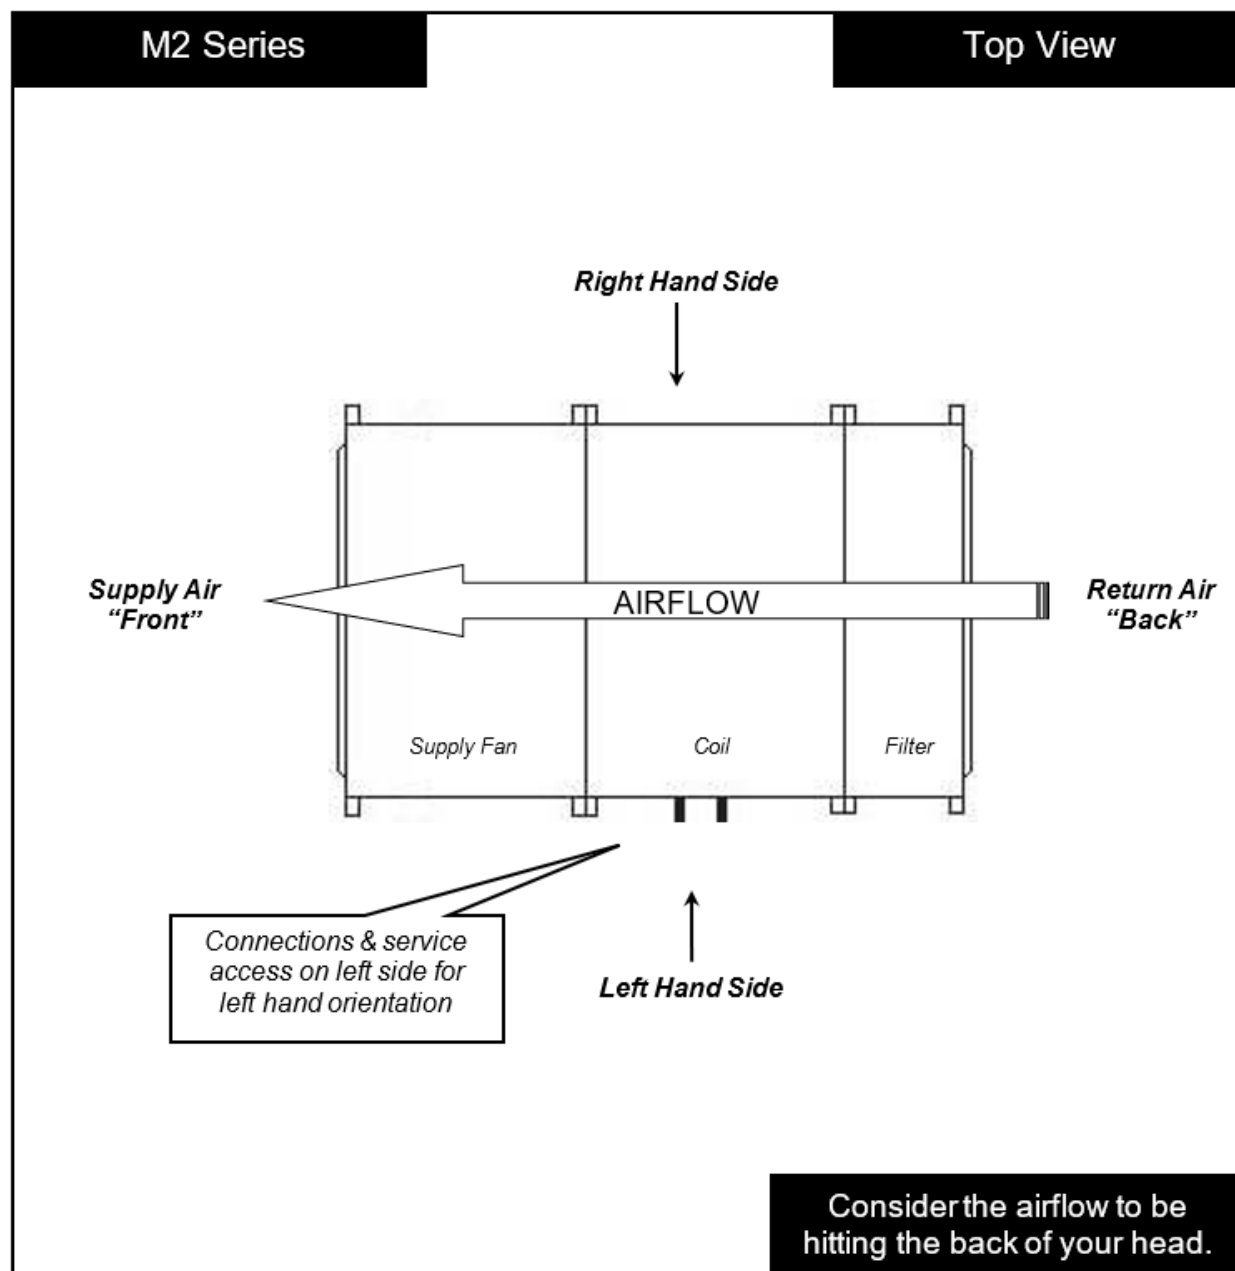


Figure 2: Unit Orientation

5. GENERAL INFORMATION

M2 Series modular indoor air handling units and self-contained units have been designed for indoor installation. Flexible connectors are required on all duct connections to minimize air leaks.

M2 Series units are designed for safe operation when installed, operated, and maintained within design specifications and the instructions in this manual. It is necessary to follow these instructions to avoid personal injury or damage to equipment or property during equipment installation, startup, operation, and maintenance. M2 Series units are intended for installation up to 3500 meters (11,500 ft).



WARNING

Improper installation, adjustment, alteration, service, or maintenance can cause property damage, personal injury or loss of life. Startup and service must be performed by a Factory Trained Service Technician. A copy of this IOM should be kept with the unit.



CAUTION

These units must not be used for heating or cooling at any time during any phase of construction. Very low return air temperatures, harmful vapors, and misplacement of the filters will damage the unit and its efficiency.



CAUTION

This equipment is protected by a standard limited warranty under the condition that initial installation, service, startup, and maintenance is performed according to the instructions set forth in this manual. This manual should be read in its entirety prior to installation and before performing any service or maintenance work.

Equipment described in this manual is available with many optional accessories. If you have questions after reading this manual in its entirety, consult other factory documentation or contact your AAON Sales Representative to obtain further information before manipulating this equipment or its optional accessories

Certification of Steam or Hot Water Heat Models

- Certified as a forced air heating system with or without cooling.
- Certified for indoor installation.

Certification of Electric Heat Models

- Certified as an electric warm air furnace with or without cooling.
- Certified for indoor installation.

Certification of Cooling Models

- Certified as a commercial central air conditioner.
- Certified for indoor installation.
- Certified with refrigerant R-454B coils or with chilled water cooling coils.

5.1. Codes and Ordinances

M2 Series units have been tested and certified, by ETL, in accordance with UL-60335-2-40 4th edition.

System should be sized in accordance with the American Society of Heating, Refrigeration, and Air Conditioning Engineers (ASHRAE) Handbook.

Installation of the M2 Series units must conform to the ICC standards of the International Mechanical Code, the International Building Code, and local building, plumbing, and wastewater codes. In the absence of local codes installation must conform to the current Mechanical Refrigeration Code CSA B52. All appliances must be electrically grounded in accordance with local codes, or in the absence of local codes, the current National Electric Code, ANSI/NFPA 70 or the current Canadian Electrical Code CSA C22.1.



WARNING

Failure to observe the following instructions will result in premature failure of your system and possible voiding of the warranty.



CAUTION

The Clean Air Act of 1990 bans the intentional venting of refrigerant as of July 1, 1992. Approved methods of recovery, recycling, or reclaiming must be followed.



WARNING

Coils and sheet metal surfaces present sharp edges, and care must be taken when working with equipment.

5.2. Receiving Unit

When received, the unit should be checked for damage that might have occurred in transit. If damage is found it should be noted on the carrier's freight bill. A request for inspection by carrier's agent should be made in writing at once.

Nameplate should be checked to ensure the correct model sizes and voltages have been received to match the job requirements.

If repairs must be made to damaged goods, then the factory should be notified before any repair action is taken in order to protect the warranty. Certain equipment alteration, repair, and manipulation of equipment without the manufacturer's consent may void the product warranty. Contact the AAON Technical Support for assistance with handling damaged goods, repairs, and freight claims: (918) 382-6450.

Note: Upon receipt check shipment for items that ship loose such as filters and remote sensors. Consult order and shipment documentation to identify potential loose-shipped items. Loose-shipped items may have been placed inside unit cabinet for security. Installers and owners should secure all doors with locks or nuts and bolts to prevent unauthorized access.



Figure 3: Lockable Handle

5.3. Storage

This equipment is not suitable for outdoor use of storage. If installation will not occur immediately following delivery, store equipment in a dry protected area away from construction traffic and in the proper orientation as marked on the packaging with all internal packaging in place. Secure all loose-shipped items. Unit must be stored in accordance with ASHRAE 15 requirements for machine rooms.

5.4. Direct Expansion (DX) Units

All factory-assembled packaged DX refrigeration systems are leak tested, charged with refrigerant, and run tested. Field-assembled and split-system DX refrigeration systems are charged with a nitrogen holding charge instead of refrigerant.

All packaged water-source DX refrigerant systems include an evaporator, condenser, liquid line filter driers, thermal expansion valves (TXV) and scroll compressors.



WARNING

Compressor Cycling

5 Minute Off Time

To prevent motor overheating, compressors must cycle off for a minimum of 5 minutes.

5 Minute On Time

To maintain the proper oil level, compressors must cycle on for a minimum of 5 minutes.

The cycle rate must not exceed 6 starts per hour.

Never cut off the main power supply to the unit, except for servicing, emergency, or complete shutdown of the unit. When power is cut off from the unit, crankcase heaters cannot prevent refrigerant migration into the compressors. This means the compressor will cool down and liquid refrigerant may accumulate in the compressor. The compressor is designed to pump refrigerant gas and damage may occur when power is restored.



CAUTION

Crankcase Heater Operation

Some units are equipped with compressor crankcase heaters, which should be energized at least 24 hours prior to cooling operation, to clear any liquid refrigerant from the compressors.

If power to the unit must be off for more than an hour, turn the thermostat system switch to "OFF", or turn the unit off at the control panel, and leave the unit off until the main power switch has been turned on again for at least 24 hours for units with compressor crankcase heaters. This will give the crankcase heater time to clear any liquid accumulation out of the compressor before it is started.

Always control the unit from the thermostat, or control panel, never at the main power supply, except for servicing, emergency or complete shutdown of the unit.

During the cooling season, if the air flow is reduced due to dirty air filters or any other reason, the cooling coils can get too cold which will cause excessive liquid to return to the compressor. As the liquid concentration builds up, oil is washed out of the compressor, leaving it starved for lubrication.

The compressor life will be seriously shorted by reduced lubrication and the pumping of excessive amounts of liquid oil and refrigerant.



CAUTION

Polyolester (POE) and Polyvinyl Ether (PVE) oils are two types of lubricants used in hydrofluorocarbon (HFC) refrigeration systems. Refer to the compressor label for the proper compressor lubricant type.

Note: Low Ambient Operation - Air-cooled DX units without a low ambient option, such as condenser fan cycling, ECM driven condenser fans or the -17.8°C (0°F) low ambient option, will not operate in the cooling mode of operation properly when the outdoor temperature is below 12.8°C (55°F). Low ambient and/or economizer options are recommended if cooling operation below 12.8°C (55°F) is expected.

Note: Multiple Units with Multiple Thermostats – When several heating and cooling units are used to condition a space, all unit thermostat switches must be set in either heating mode, cooling mode, or off. Do not leave part of the units switched to the opposite mode. Cooling only units should be switched off at the thermostat during the heating season.

5.5. Electric Heating

The unit is designed to heat a given amount of air while operating. If this amount of air is greatly reduced, approximately 1/3 during the heating season, the electric heating coil may overheat and may cut the heater off entirely by action of the safety high temperature limit devices; which are factory mounted at the heat exchanger and supply fan areas.

Airflow should be adjusted after installation to obtain an air temperature rise within the range specified on the unit rating plate at the required external static pressure.

Prolonged overheating of the heat exchanger will shorten its life.

The maximum supply-air temperature is 60°C (140°F).

5.6. Wiring Diagrams

Unit specific wiring diagrams are laminated and affixed inside the controls compartment door.

5.7. Condensate Drain Pan

Unit requires drain traps to be connected to the condensate drain pan of the unit.

For condensate drain lines, the line should be the same pipe size or larger than the drain connection, include a p-trap, and pitch downward toward drain. An air break should be used with long runs of condensate lines. See Installation section of this manual for more information.



CAUTION

Unit should not be operated without a p-trap. Failure to install a p-trap may result in overflow of condensate water.



CAUTION

An auxiliary / emergency drain pan is recommended for all indoor applications where there is a risk of water damage to surrounding structure or furnishings. Refer to local codes.

6. INSTALLATION

The M2 can either be shipped assembled or shipped in individual modules. See the Module Assembly section of this document for instructions on individual modules.



WARNING

Improper installation, adjustment, alteration, service, or maintenance can cause property damage, personal injury or loss of life. Startup and service must be performed by a Factory Trained Service Technician. A copy of this IOM should be kept with the unit.

6.1. Locating Units

Verify foundation or mounting frame can support the total unit weight, including accessory weights. If unit is to be installed indoors, or in areas without sufficient ventilation, provide venting from all pressure relief outlets to outdoors in accordance with ASHRAE 15 requirements.

Before setting the unit into place, caution must be taken to provide clearance for unit doors that must be accessible for periodic service. These areas contain the controls, safety devices, refrigerant or water piping, shut-off valves, and filters.

A minimum clearance equal to the width of the unit is required on the access panel side of the unit to ensure there is enough room to slide out coils and energy recovery wheels, and to access filters, fans, and other internal components.

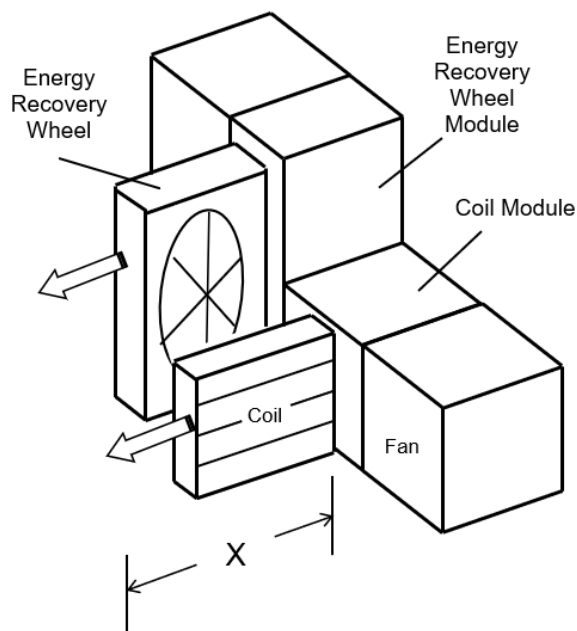


Figure 4: Service Access Clearance

Table 1: Minimum Clearances

Unit Size	Minimum Required Service Clearance X =
M2-018	84"
M2-026	84"
M2-036	96"

6.2. Lifting the Assembled Unit

Units may be delivered as separate modules or completely factory assembled with all modules connected. In the latter case, if the unit was received fully assembled, the recommended method of lifting is to insert a 38.1 mm (1-1/2") steel pipe through the lifting lugs along the entire length of the unit, then pick the unit up using a spreader bar assembly. Refer to Figure 5 - M2 Series Unit Four Point Lifting and Figure 6 - M2 Series Unit Eight Point Lifting.



CAUTION

Unit Handling

To prevent injury or death lifting equipment capacity shall exceed unit weight by an adequate safety factor. Always test-lift unit not more than 61 cm (24 inches) high to verify proper center of gravity lift point to avoid unit damage, injury or death.

If cables or chains are used to hoist the unit they must be the same length. Care should be taken to prevent damage to the cabinet, coils, and condenser fans.

Before lifting unit, be sure that all shipping material has been removed from unit.



CAUTION

Incorrect lifting can cause damage to the unit.

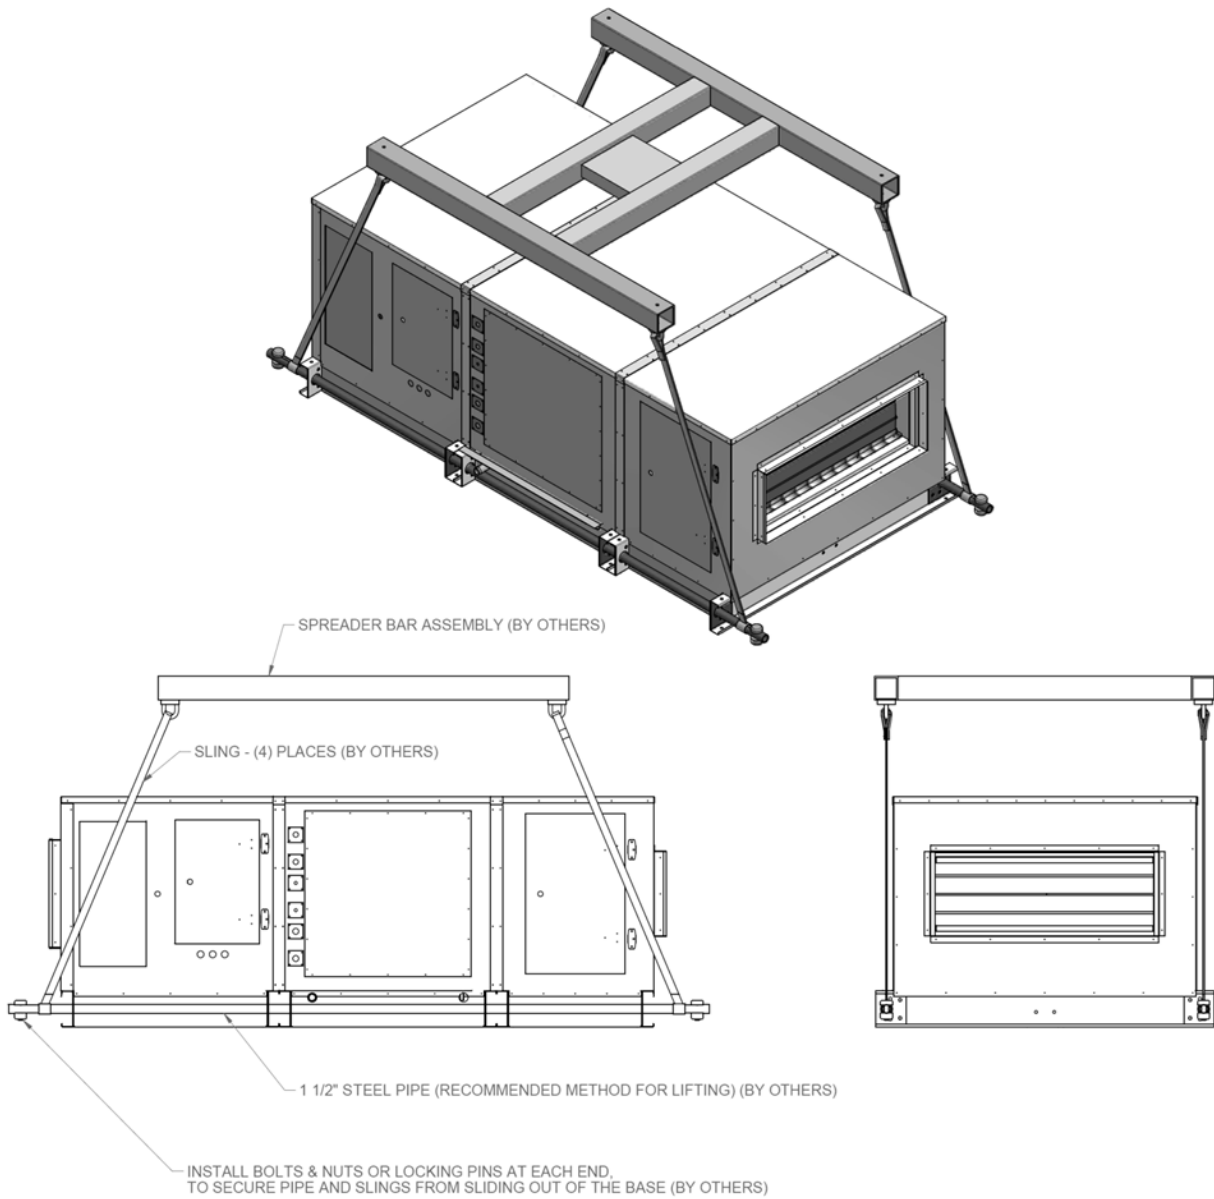


Figure 5: M2 Series Unit Four Point Lifting

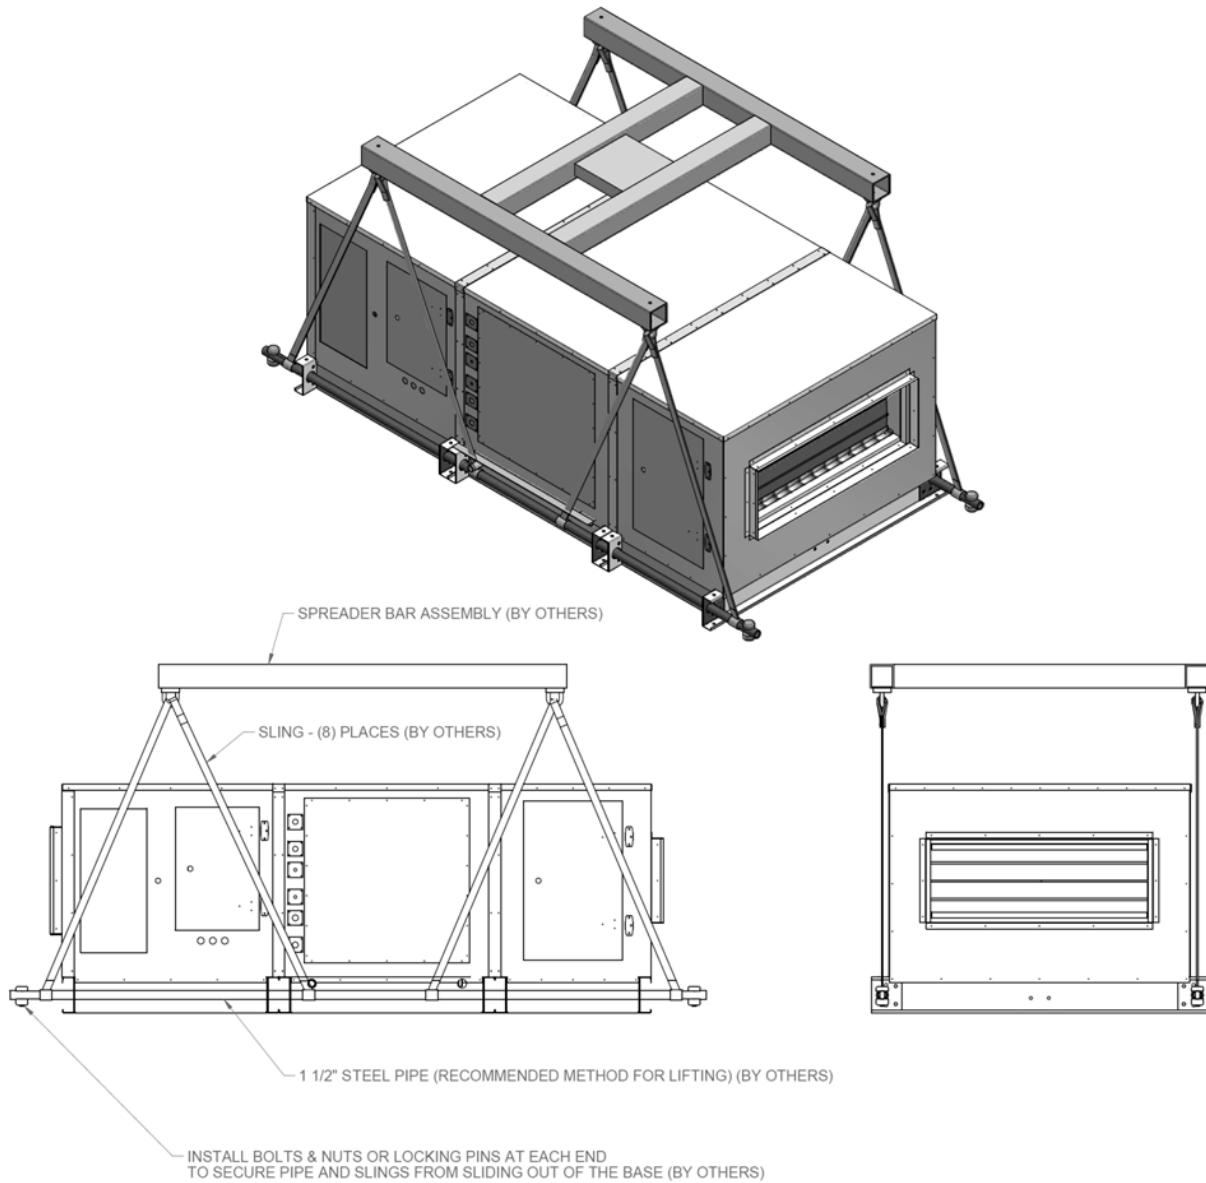


Figure 6: M2 Series Unit Eight Point Lifting

6.3. Lifting the Individual Modules

The bottom tier individual modules have lifting lugs built into the base. Individual bottom tier modules can be lifted by securing hooks and cables at all four lugs provided on the module.

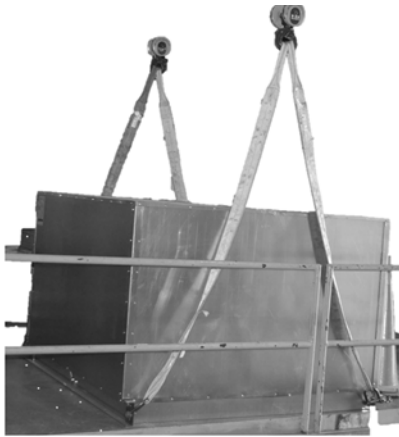


Figure 7: M2 Series Individual Module Bottom Tier Lifting

The top tier individual modules are shipped on individual wooden pallets and do not have base lifting lugs. They can be lifted by wrapping a strap around each side of the module or using a forklift truck.



Figure 8: M2 Series Individual Module Top Tier Lifting

6.4. Floor Mounted Units

Dual path units, self-contained units and units over size M2-018 must be floor mounted. Make sure the unit is level and installed with a minimum height of 15.25 cm (6") to allow for proper drainage of the condensate line. Standard units are built with a 15.25 cm (6"). Other installation provisions may be necessary according to job specifications.

A ceiling suspended mounting frame must be provided for unit suspension. It is the responsibility of the engineer or installing contractor to design and build a suitable structure based on the load distribution of individual modules. C-channels, or similar structural members, are suggested to be placed parallel to airflow under each base rail of the unit, with appropriate structural cross members as required by weight and design. A 4" minimum c-channel size is recommended. The unit is not designed to be suspended directly from the base rails. An appropriate structural support is required for suspension.

The air handling unit must be installed level as the internal drain pan is manufactured with a slope toward the drain. Other installation provisions may be necessary according to job specifications and requirements.

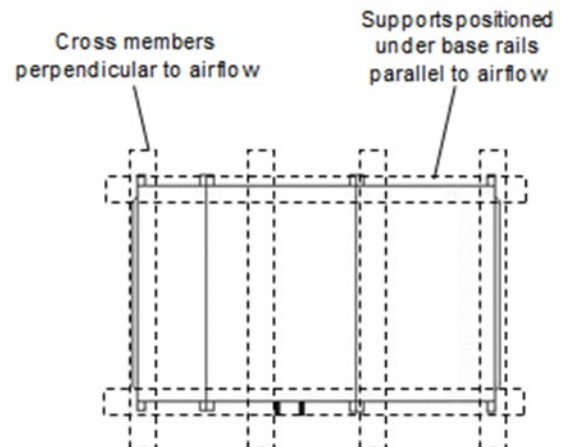


Figure 9: Ceiling Suspended Mounting Frame

6.5. Module Assembly

Although M2 Series modular units are shipped factory assembled as standard, the unit may be ordered as individual modules for certain applications such as for assembly in existing structures where modules must be manipulated separately. If the unit was ordered as individual modules, then they must be connected in the field.

Locate the configuration schematic in the equipment's literature packet. The schematic will have CONFIGURATION written in the top left hand corner followed by the unit model number and then the module configuration numbers listed in order.

6.5.1. Identify and Situate Modules

Use the Feature String descriptions at the beginning of this manual or in the M2 Engineering Catalog for assistance identifying module types by their three-letter codes.

It is advisable to situate all required modules in the installation location as near as possible to the order in which they will be connected. Be sure to leave enough space to work between modules before connection.

Identify each module by the configuration number on its label. For example, if a module has a configuration number of FTF-101-P-A0-00000-00000-0-0, then it is a large flat filter module "FTF", and should be placed in the first position "101" of the lower tier - the bottom left as you face the access side of a right hand unit, or the bottom right as you face the access side of a left hand unit.

Although the schematic should be available, the configuration numbers have been created so that correct assembly order can be determined without the need for a schematic.

Modules are arranged in order with 100 series modules on the first tier and 200 series modules on the second tier. Module 101 will always be located on the end of the bottom tier - the bottom left as you face the access side of a right hand unit, or the bottom right as you face the access side of a left hand unit. Module 201 will always be located on the end of the top tier - the top left as you face the access side of a right hand unit, or the top right as you face the access side of a left hand unit.

Therefore, it is possible to identify the exact module arrangement even without knowing the module type, and without a configuration schematic.

If, for any reason, a module or its position in final assembly is unidentifiable, then consult the project engineer, AAON sales representative, or AAON Technical Support (918) 382-6450.

After identifying modules and determining module arrangement, modules can be prepared for final assembly.

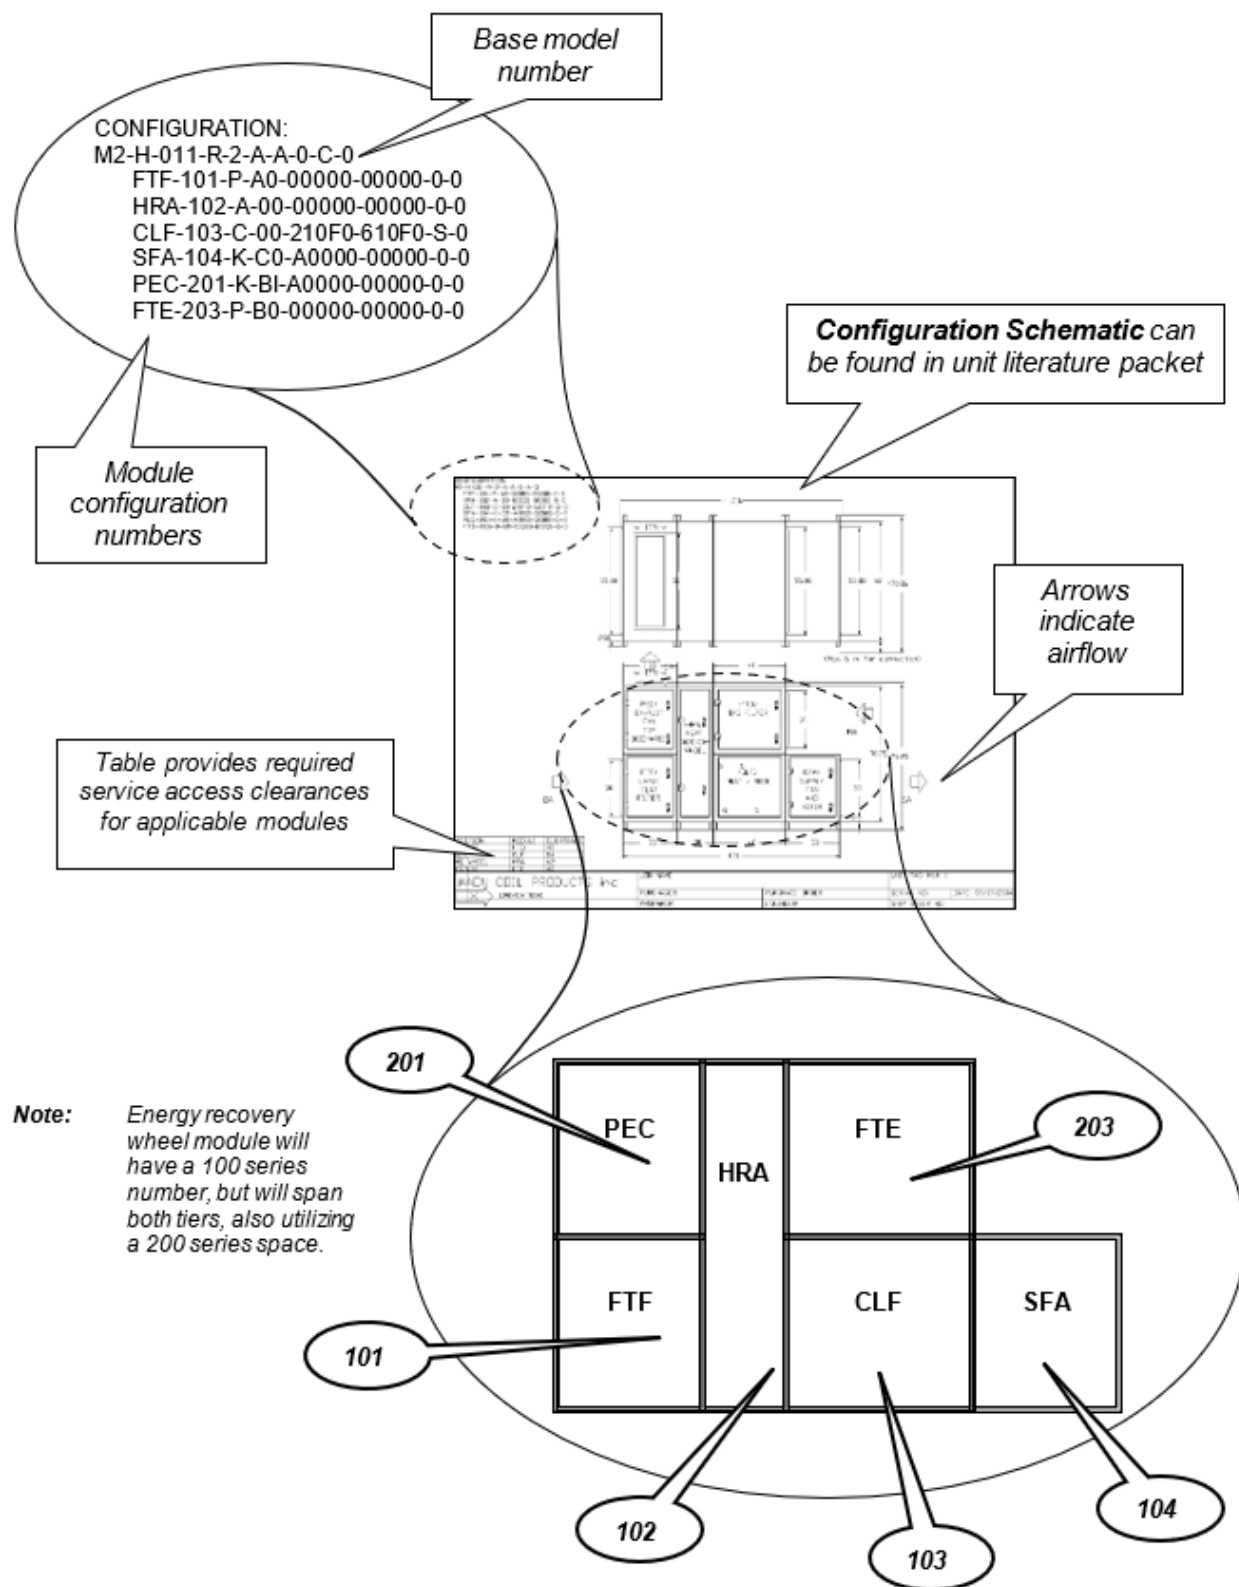


Figure 10: Module Assembly Schematic

6.5.2. Connect Modules

Modules are to be connected with nuts and bolts through the base rail with a strong metal casing around the bolt. (see Figure 11 below). The walls and roof are connected with metal strapping over module joints. Metal straps have adhesive backs and are to be additionally fastened to the unit case with sheet metal screws. All connection hardware is shipped with the unit.

Align modules and place the metal support bolt casing in the middle of the two bases. Insert bolts through the bolt hole, through the metal support casing, and through the second bolt hole in the base rails of two adjacent modules. Secure with nuts to pull the bases of the two modules together tightly.

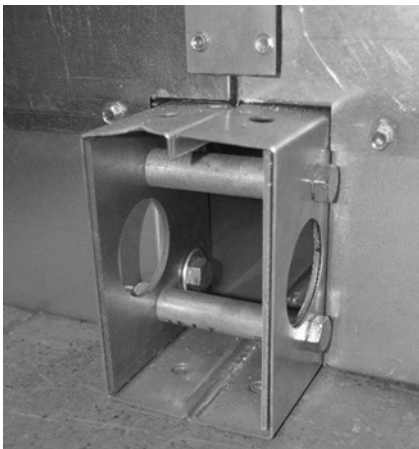


Figure 11: Bolted Base Rail

Use bar clamps or other non-destructive winching device to pull the tops of the modules together tightly.



Figure 12: Bar Clamp

There should now be an airtight joint that needs to be permanently secured in position.

6.5.3. Secure Module Joints

The metal straps are to be used to secure module joints in order to maintain the airtight seal. Straps are provided with pre-drilled holes and adhesive backing already affixed. Self-tapping sheet metal screws are provided to attach the straps to the unit cabinet. To secure the module joints:

1. Leave bar clamps in place until strap is secure.
2. Peel away backing from adhesive side of a strap.
3. Place the strap over a module joint with the adhesive side of the strap against the unit case.
4. Ensure that strap completely covers the joint and that it is square with the unit casing.
5. Apply pressure to the strap to affix the adhesive and to hold strap in place.
6. Insert self-tapping screws through pre-drilled holes in strap and secure screws into unit casing using a power drill. For best results, use the lowest effective power drill torque setting. Be careful not to overtighten the screws.
7. Remove bar clamps and repeat for all remaining module joints.

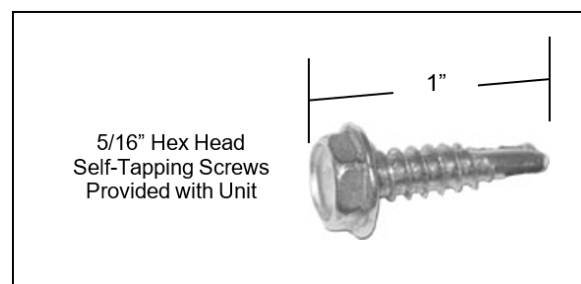


Figure 13: Self-Tapping Screw

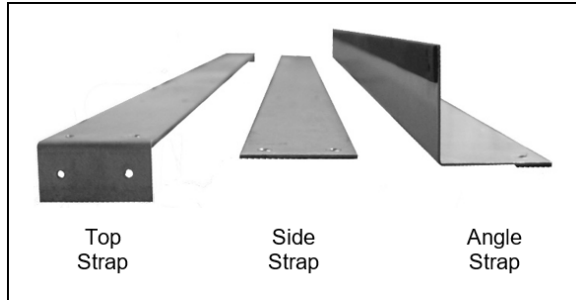


Figure 14: Strap Types

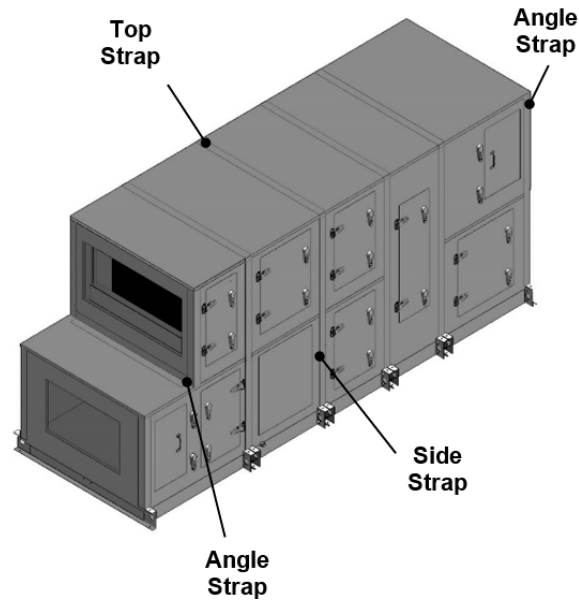


Figure 15: Strap Locations



Figure 16: Strap Positioning

Put straps in position, hold in place and attach with self-tapping sheet metal screws.

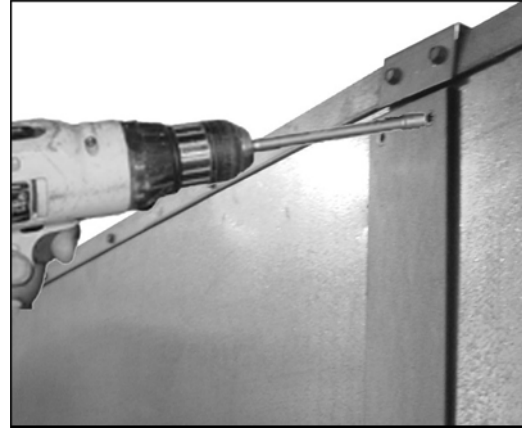


Figure 17: Strap Installation

6.5.4. Run Power Control Wiring

M2 Series units are equipped with an internal wiring chase, located along the inside top of each module. Wire is provided for power and control wiring inside the unit.



Figure 18: Power and Control Wiring

The control wiring uses quick connects so a female quick connect from one module will connect to a male quick connect from the adjacent module. Some modules will have two sets of connection, so make sure the correct wire colors match up from one quick connect to the other.



Figure 19: Quick Connects

Wire from the unit to external controls and power sources must be provided in the field.

A color-coded wiring diagram is laminated and affixed to the inside of the control compartment access door. M2 Series units are equipped with a single point power connection.

When the unit ships split, the A2L sensor in the evaporator coil section will need to be field connected to the mitigation board. The A2L sensor will be mounted on the wall of the coil module and the wiring coiled up to be field wired to the mitigation board in the controls section (labeled A2L-Airstream on the wiring diagram).

6.5.5. Final Sealing

It is very important to keep air from infiltrating the unit cabinet. Seal all piping penetrations with Armaflex, Permagum, or other suitable sealant. Also seal around drain connections, electrical connections, and all other inlets where air may enter the cabinet. This is especially important when the unit is installed in an unconditioned area.

Field piping between the condensing section and the air handling section may be required.

Field-made joints indoors must be pressure tested using a method that has a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 400 psi. Any detected leaks must be repaired before completing installation.

If the selected unit includes an R-454B pressure vessel, such as a liquid receiver tank, an A2L Safety Vent Tube will be factory installed and routed from the pressure vessel's fusible plug to the exterior of the cabinet, providing means for field connection. Where required by installation and local code, these connections may be piped to the field installed vent piping to the approved space. Do not crimp, cap or otherwise obstruct the flow of refrigerant from these venting connections.



Figure 20: A2L Safety Vent Tube

6.6. Evaporator Coils

The air handling unit coils are pressurized. The copper caps must be punctured to permit a gradual escape of the pressure prior to unsweating those caps. Immediately couple the tubing to the indoor unit to avoid exposing the coils to moisture. A properly sized filter drier is furnished in the condenser. When making solder connections, make sure dry nitrogen flows through the lines, when heating the copper, to prevent oxidization inside of the copper.

Thermal expansion valve bulbs should be mounted with good thermal contact on a horizontal section of the suction line close to the evaporator, but outside the cabinet, and well insulated. On suction lines less than or equal to 22 mm (7/8") OD, mount in the 12 o'clock position. On suction lines greater than 22 mm (7/8"), mount in either the 4 o'clock or 8 o'clock position.

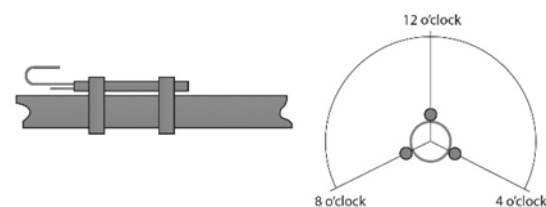


Figure 21: TXV Bulb Position

6.7. Hot Gas Reheat

Hot Gas Reheat (HGRH) is available for use with DX systems that need humidity control. The AAON modulating hot gas reheat system diverts hot discharge gas from the condenser to the air handling unit through the hot gas line.

Field piping between the condensing section and the air handling section may be required.

Field-made joints indoors must be pressure tested using a method that has a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 400 psi. Any detected leaks must be repaired before completing installation.

Connect the hot gas line from the outdoor unit to the upper stub-out connection of the reheat coil in the air handling unit.

The line delivers the hot discharge gas to the reheat coil and/or the hot gas bypass valve, so it is sized as a discharge line.

6.8. Hot Gas Bypass

Hot Gas Bypass (HGB) is available for use with DX systems that may experience low suction pressure during the operating cycle. This may be due to varying load conditions associated with VAV applications or units supplying a large percentage of outside air. Hot Gas Bypass is not necessary in units with variable capacity compressors. The system is designed to divert refrigerant from the compressor discharge to the low-pressure side of the system in order to keep the evaporator from freezing and to maintain adequate refrigerant velocity for oil return at minimum load.

Hot discharge gas is redirected to the evaporator inlet via an auxiliary side connector (ASC) to false load the evaporator when reduced suction pressure is sensed.

Field piping between the condensing section and the air handling section may be required.

Field-made joints indoors must be pressure tested using a method that has a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 400 psi. Any detected leaks must be repaired before completing installation.

7. REFRIGERANT-TO-WATER HEAT EXCHANGER

Condenser water pump, condenser water piping, cooling tower, pressure gauges, strainers and all components of the waterside piping must be field installed.



CAUTION

Water-Source Heat Pump Applications

Water-source heat pump units using 100% outside air must have electric preheat if the application has a potential for heat pump heating operation with air entering the indoor coil below 4.4°C (43°F) with an entering water loop temperature of 21.1°C (70°F).

7.1. Open Loop Applications

This product contains one or more refrigerant-to-water heat exchangers made of 316 Stainless-Steel. 316 Stainless-Steel is subject to severe corrosion and failure when exposed to chlorides.



WARNING

Open Loop Applications

Failure of the condenser as a result of chemical corrosion is excluded from coverage under AAON Inc. warranties and the heat exchanger manufacturer's warranties.

Do not allow water containing any form of chlorides to enter this heat exchanger.

Common forms of chlorides include:

1. Sea water mist entering an open cooling tower system.
2. Contaminated make-up water containing salt water.
3. Disinfection the water loop with solutions containing sodium hypochlorite.

Chlorides will result in a premature failure of the condenser.



WARNING

Open Loop Applications

SMO 254 brazed plated refrigerant-to-water heat exchangers are recommended with all open loop applications. Failure to use a SMO 254 heat exchanger may result in premature failure of your system and possible voiding of the warranty.

Failure of the condenser as a result of chemical corrosion is excluded from coverage under AAON warranties and the heat exchanger manufacturer warranties.

Failure of the condenser will allow water to enter the refrigerant circuit and will cause extensive damage to the refrigerant circuit components. Any damage to the equipment as a result of condenser failure from chemical corrosion due the fluid in the condenser is excluded from coverage under AAON warranties and the heat exchanger manufacturer warranties.



CAUTION

Cleaning the cooling tower or condenser water loop with harsh chemicals such as hydrochloric acid (muriatic acid), chlorine or other chlorides, can damage the refrigerant-to-water heat exchanger. Care should be taken to avoid allowing chemicals to enter the refrigerant-to-water heat exchanger. See Appendix A - Heat Exchanger Corrosion Resistance for more information.

7.2. Freezing Water in the Heat Exchanger

This product contains one or more refrigerant-to-water heat exchangers. A refrigerant-to-water heat exchanger contains refrigerant in one passage and water in another passage. Water is subject to freezing at 0°C (32°F). When water freezes in a heat exchanger, significant forces are exerted on the components of the heat exchanger where the water is confined.



WARNING

Water Freezing

Failure of the condenser due to freezing will allow water to enter the refrigerant circuit and will cause extensive damage to the refrigerant circuit components. Any damage to the equipment as a result of water freezing in the condenser is excluded from coverage under AAON warranties and the heat exchanger manufacturer warranties.

Unit is capable of operating with Entering Water Temperatures (EWT) as low as 13.9 °C (57°F) during cooling mode without the need for head pressure control. If the EWT is expected to be lower than 13.9 °C (57°F) or more stable operation is desired, a factory provided head pressure control water valve option is available.

Glycol solution should be used if ambient temperatures are expected to fall below freezing or if the loop water temperature is below 10°C (50°F) while operating in the heating mode (heat pump units only). Adding glycol to condenser water causes an increase in pressure drop resulting in a decrease in unit performance. A minimum concentration of 20% glycol solution is recommended.

Table 2: Glycol Freezing Points

% Glycol	Ethylene Glycol [°C (°F)]	Propylene Glycol [°C (°F)]
20	-7.8 (18)	-7.2 (19)
30	-13.9 (7)	-12.8 (9)
40	-21.7 (-7)	-21.1 (-6)
50	-33.3 (-28)	-32.8 (-27)

Water loop piping runs through unheated areas or outside the building should be insulated.

7.3. Water Piping

All water-source heat pump units are built with a water flow switch. Some water-cooled units may not have a water flow switch. This sensor provides a signal to the unit controller that water flow is present in the heat exchanger and the compressors can operate without damaging unit components. Installing contractor must ensure a differential pressure switch is installed between the condenser water supply and return connections if the unit does not have a water flow switch installed at the factory.

The water connections will differ depending on whether the unit is water-cooled only or if it is water-source heat pump. The water-source heat pump units have water supply to the top of the heat exchanger and the return to the bottom.

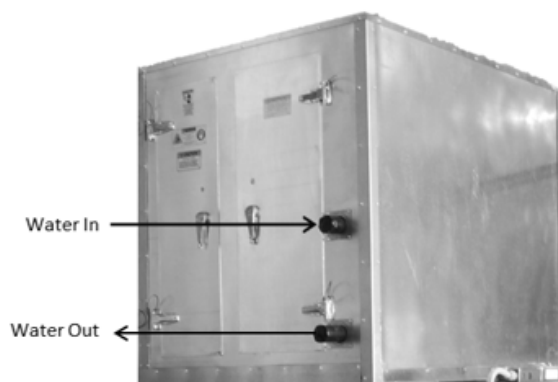


Figure 22: Water-Source Heat Pump Water Piping

The water-cooled only units have water supply to the bottom of the heat exchanger and the return to the top.

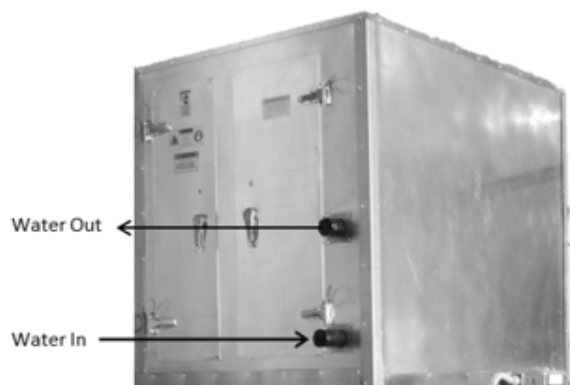


Figure 23: Water-Cooled Only Water Piping



WARNING

Water Pressure

Prior to connection of condensing water supply, verify that the water pressure is less than maximum pressure shown on unit nameplate. To prevent injury or death due to instantaneous release of high pressure water, relief valves should be field supplied on water piping. Supply water connection may require a backflow preventer to prevent supply makeup water from backing up into the public water system.

Condenser water connections range in size from 50.8-76.2 mm (2"-3") OD black pipe. Only use approved water pipe material. Avoid using galvanized material for water lines/fittings as the material is corrosive and may cause fouling of the water system.

Table 3: Standard Water-Source Connections

Tonnage	Supply and Return Connection Size
016, 018, 020	51mm (2") SCH 40 black pipe
025, 030, 040, 050	63.5mm (2-1/2") SCH 40 black pipe
060	76mm (3") SCH 40 black pipe



CAUTION

Proper sealing of the water piping entries into the unit must be ensured before operation. Failure to seal the entries may result in damage to the unit and property.



CAUTION

PVC (Polyvinyl Chloride) and CPVC (Chlorinated Polyvinyl Chloride) are vulnerable to attack by certain chemicals. Polyolester (POE) oils used with R-454B and other refrigerants, even in trace amounts, in a PVC or CPVC piping system will result in stress cracking of the piping and fittings and complete piping system failure.



CAUTION

Water Piping

Follow national and local codes when installing water piping. Connections to the unit should incorporate vibration eliminators to reduce noise and vibration and shut-off valves to facilitate servicing. Supply and return water piping must be at least as large as the unit connections and larger depending on length of runs, rise, and bends.

Before connecting to the unit the condenser water system should be flushed to remove foreign material that could cause condenser fouling. Install a screen strainer with a minimum of 20 Mesh ahead of the condenser inlet to prevent condenser fouling and internal tube damage.

Mineral content of the condenser water must be controlled. All make-up water has minerals in it and as the water is evaporated in the cooling tower, these minerals remain. As the mineral content of the water increases, the conductivity of the water increases.

Field provided and installed water treatment program must be compatible with stainless-steel, copper, aluminum, ABS plastic, and PVC. Batch feed processes should never be used as concentrated chemicals can cause corrosion. Never use hydrochloric acid (muriatic acid) or chlorine as it will corrode stainless-steel.



CAUTION

Each heat exchanger is equipped with a refrigerant pressure relief device to relieve pressure should excessive condensing pressures (>4654 kpa [675 psig]) occur. Codes may require installing contractor to connect and route relief piping outdoors. The relief valve has a 16 mm (5/8") male flare outlet connection.

Unit is capable of operating with Entering Water Temperatures (EWT) as low as 10°C (50°F) without the need for head pressure control. If the EWT is expected to be lower than 10°C (50°F) or more stable operation is desired, a field provided water regulating valve may be used.

Glycol solution should be used if ambient temperatures are expected to fall below freezing or if the loop water temperature is below 10°C (50°F) while operating in the heating mode (heat pump units only). Adding glycol to condenser water causes an increase in pressure drop resulting in a decrease in unit performance. A minimum concentration of 20% glycol solution is recommended. Reference Table 3.

Piping systems should not exceed 10 ft/sec velocity to ensure tube wall integrity and reduce noise.



CAUTION

Do not exceed recommended condenser fluid flow rates. Serious damage to or erosion of the heat exchanger tubes could occur.

7.4. Heat Exchanger Safeties

Electronic freeze protection and water flow safety should be field installed or factory provided. If the leaving water temperature drops below 3.3°C (38°F) or water flow has ceased the 24VAC control circuit will be broken to disable the cooling system.

8. WATERSIDE ECONOMIZER

Cooling and pre-cooling waterside economizer coil is factory installed upstream of the evaporator coil. An optional field-installed water-piping kit includes three fully modulating water valves (the economizer valve, economizer bypass valve, and a three-way head-pressure control valve). The water piping between the waterside economizer and the water-cooled condenser must be field provided. See the waterside economizer piping figure for recommended piping.

A p-trap must be installed on the coil drain outlet, not to exceed 15.25 cm (6in.) from the drain connection. See the previous section on condensate drain piping for additional p-trap and drain information.



CAUTION

Drain Pan Connection

With a waterside economizer coil a separate drain connection is included. Failure to use this separate drain connection may result in water backup and overflow of drain pan.

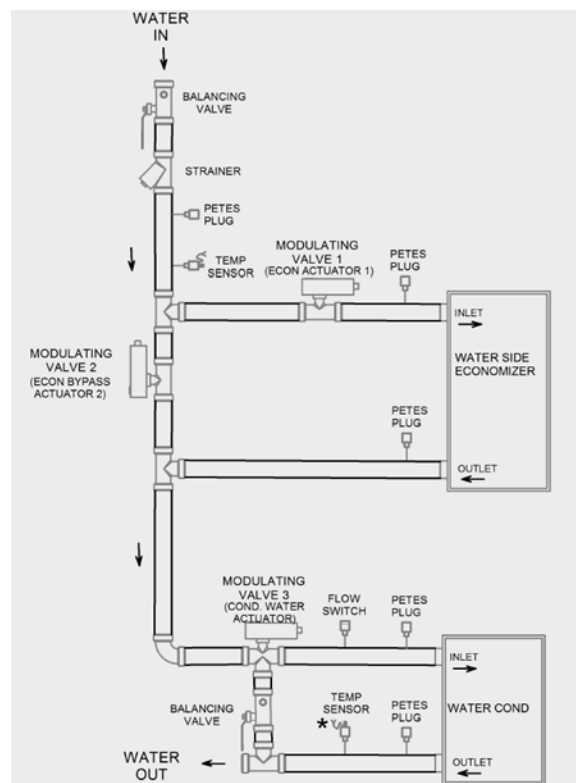


Figure 24: Waterside Economizer Piping

The waterside economizer circuit can operate in three modes: waterside economizer only, waterside economizer with mechanical cooling, and mechanical cooling only.

During waterside economizer only mode of operation, condenser water flows through the waterside economizer coil with modulating valves maintaining supply air temperature setpoint. The condenser water completely bypasses the water-cooled condenser.

During waterside economizer with mechanical cooling mode of operation, 100% of the condenser water flows through the waterside economizer coil. The condenser water then passes through the water-cooled condenser and the three-way valve modulates to maintain head pressure.



During mechanical cooling only mode of operation, condenser water flows around the waterside economizer coil with the waterside economizer bypass valve fully open. The condenser water then passes through the water-cooled condenser, and the valves modulate to maintain head pressure.

Mineral content of the condenser water must be controlled. All make-up water has minerals in it and as the water is evaporated in the cooling tower, these minerals remain. As the mineral content of the water increases, the conductivity of the water increases.

Field provided and installed water treatment program must be compatible with stainless-steel, copper, aluminum, ABS plastic, and PVC. Batch feed processes should never be used as concentrated chemicals can cause corrosion. Never use hydrochloric acid (muriatic acid) or chlorine as it will corrode stainless-steel.

9. HEATING COILS

One or two row hot water heating coils can be factory mounted. These coils are supplied from a building hot water source. The hot water coil is not connected to the water-source condenser piping. All controls for heating operation are field supplied and field installed.

Always connect the steam heating supply to the top of the coil and the return to the bottom.



Figure 25: Steam Distributing Piping

Table 4: Steam Distributing Coil Sweat Connection Sizes (OD)

Model (M2-)	Supply and Return Connection Size
018- 036	54mm (2 1/8")

Air handling units with steam heating coils **MUST BE** installed high enough to allow for a minimum of 1 foot condensate drop leg off of the steam coil, or as recommended by the steam trap manufacturer. Lines should be insulated with approved insulation and be properly fastened, sloped, and supported according to local code requirements.

Table 5: Hot Water Coil Sweat Connection Sizes (OD)

Model (M2-)	Supply and Return Connection Size
018	54 mm (2 1/8")
026, 036	67 mm (2 5/8")

Always connect the hot water heating supply to the bottom of the coil and return to the top.

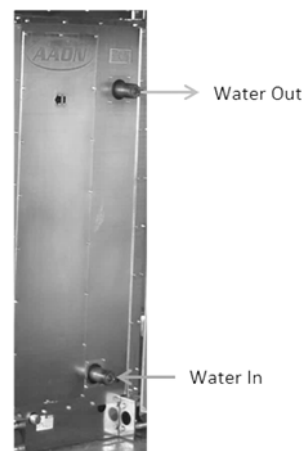


Figure 26: Hot Water Piping

Water coils should not be subjected to entering air temperatures below 3.3°C (38°F) to prevent coil freeze-up. If air temperature across the coil is going to be below this value, use a glycol solution to match the coldest air expected.

Water supply lines must be insulated, properly fastened, drained, and supported according to local code requirements.

10. CHILLED WATER COILS

Four, six, or eight row chilled water cooling coils can be factory mounted. These coils are supplied from a building chilled water source. The chill water coil is not connected to the water-source condenser piping. All controls for the cooling coil are field supplied and field installed.

Table 6: Chilled Water Coil Sweat Connection Sizes (OD)

Model (M2-)	Supply and Return Connection Size
018	67 mm (2 5/8")
026, 036	79.4 mm (3 1/8")

Always connect the chilled water supply to the bottom of the coil and return to the top.



Figure 27: Chill Water Piping

Water supply lines must be insulated with closed cell type pipe insulation or insulation that includes a vapor barrier. Lines should be properly fastened, drained, and supported according to local code requirements and job specifications.



WARNING

Piping shall be in accordance with national and local codes. Pressure limiting devices, backflow preventers and all other safety requirements are the sole responsibility of the installing contractor.

11. CONDENSATE DRAIN PIPING

Unit may be equipped with more than one condensate drain pan connection. A p-trap and drain line must be installed on every drain connection, with the p-trap not to exceed 15.25 cm (6") from the drain connection. The lines should be the same pipe size or larger than the drain connection, include a p-trap, and pitch downward toward drain. An air break should be used with long runs of condensate lines.



CAUTION

Unit should not be operated without p-traps. Failure to install a p-trap may result in overflow of condensate water.

Draw-through cooling coils will have a negative static pressure in the drain pan area. This will cause an un-trapped drain to back up due to air being pulled up through the condensate drain piping. Blow-through coils will have a positive static pressure in the drain pan. The condensate piping on these drain pans must be trapped to prevent pressure loss through the drain.

Condensate drain trapping and piping should conform to all applicable governing codes.

Note: The drain pan connection is a 25 mm (1") MPT fitting.

DRAW THRU UNITS

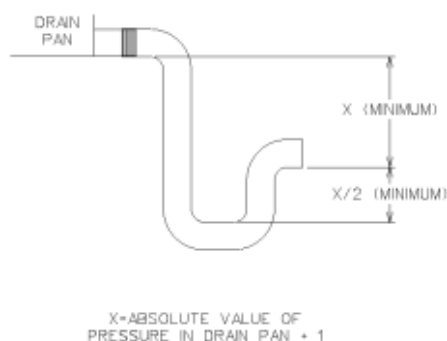


Figure 28: Draw-Through Drain Trap

Table 7: Draw-Through and Blow-Through Drain Trap Dimensions (Metric)

Draw-Through		
Drain Pan Pressure	Trap Dimensions	
Negative Static	X	X/2
(mmHg)	(millimeters)	(millimeters)
-0.93	38.1	19.1
-1.87	50.8	25.4
-2.80	63.5	31.8
-3.74	76.2	38.1
-4.67	88.9	44.5
-5.60	101.6	50.8
-6.54	114.3	57.2
-7.47	127	63.5

Table 8: Draw-Through and Blow-Through Drain Trap Dimensions (Imperial)

Draw-Through		
Drain Pan Pressure	Trap Dimensions	
Negative Static	X	X/2
(inches of water)	(inch)	(inch)
-0.50	1.50	0.75
-1.00	2.00	1.00
-1.50	2.50	1.25
-2.00	3.00	1.50
-2.50	3.50	1.75
-3.00	4.00	2.00
-3.50	4.50	2.25
-4.00	5.00	2.50

The X dimension on the draw-through trap should be at least equal to the absolute value of the negative static pressure in the drain pan plus one inch. To calculate the static pressure at the drain pan add the pressure drops of all components upstream of the drain pan, including the cooling coil, and add the return duct static pressure. Include the dirt allowance pressure drop for the filters to account for the worst-case scenario.

The height from top of the bottom bend of the trap to the bottom of the leaving pipe must be at least equal to one half of the X dimension. This ensures that enough water is stored in the trap to prevent losing the drain seal during unit startup

Note: The absolute value of the fan inlet pressure will always be greater than or equal to the absolute value of the static pressure in the drain pan on draw-through units, so the fan inlet pressure is a safe value to use for the drain pan static pressure.

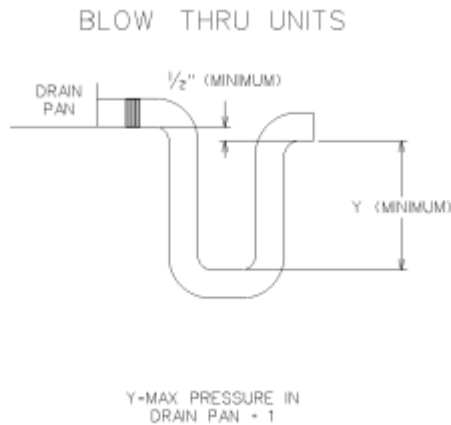


Figure 29: Blow-Through Drain Trap

The Y dimension of blow-through traps should be at least equal to the value of the positive pressure in the drain pan plus one inch. Reference Table 7 and Table 8 for trap dimensions based on positive static value. This

ensures that there will be enough water stored in the trap to counter the static pressure in the drain pan. To find the pressure subtract any pressure drops between the drain pan and the supply blower from the blower discharge pressure. The worst-case scenario for blow-through coils is the minimum pressure drop, so do not include dirt allowance pressure drops for filters.

The bottom of the leaving pipe should be at least one half inch lower than the bottom of the drain pan connection. This ensures proper drainage when the unit is not running.

Note: It may be necessary to fill the trap manually, or the trap can be filled automatically by operating the unit until enough condensate collects to fill the trap. The trap will then be filled when the unit is turned off.



12. BLOWER WHEELS

M2 Series units are equipped with backward-curved blower wheels that are set to deliver the air volume specified according to unit size and/or job requirements. This is done with air volume bands in the blower wheels or with variable frequency drives. Field airflow adjustment is required at startup.

13. FAN SET SCREW ADJUSTMENT

For single set screw applications, tighten the set screw to the required torque setting

(Table 10) using a calibrated torque wrench.

For double set screw applications, tighten one set screw to half of the required torque setting (Table 10) using a calibrated torque wrench.

Tighten the second set screw to the full required torque setting then tighten the first set screw to the full required torque setting.

Table 9: Plenum Fan Set Screw Specifications

SET SCREW DIAMETER	TORQUE (Nm [IN-LBS])
6.4 mm (1/4")	9 [80]
7.9 mm (5/16")	14.2 [126]
9.5 mm (3/8")	27.12 [240]

The gap tolerances that are allowed between the blower and the inlet cone for the plenum fan blowers are shown in Figure 30. The inlet cone can be moved as necessary to center the cone in relation to the blower. The blower can be moved on the motor shaft to set the correct overlap. These tolerances are critical to the performance of the blower.

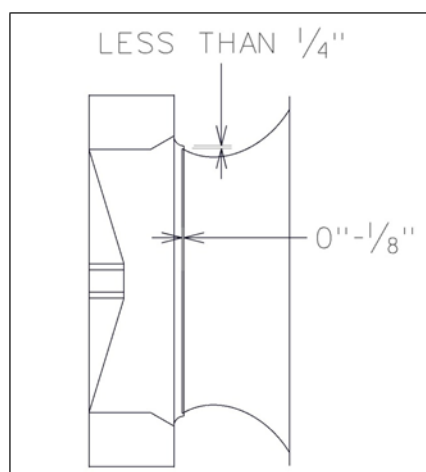


Figure 30: Plenum Fan Gap Tolerances

13.1. Banded Wheel Air Adjustment

In the event that reduced air volume is required, an air volume band can be installed within the blower wheel to reduce the amount of air delivery. If the unit is factory equipped with the air band but additional air delivery is needed, the band can be removed from the wheel.

The air band is sized according to the air delivery specifications and can be ordered from the factory for field installation.

The related photos of the wheel are provided for practical guidelines only in order to identify the air band location in the wheel. Actual field installation of the air band into the wheel will require access into and through the blower wheel venturi.

Air volume bands are made of aluminum, sized and equipped with easy bend tabs that are to be inserted into pre-punched slots provided on the wheel. Once the band has been inserted into the slots, it **MUST BE** secured by bending the tabs over from the back side of the wheel and **MUST BE** secured from the inside by connecting the ends together with a pop-rivet in the holes provided on the ends of the band.

If the band is to be field installed, a hand-held pop-rivet tool is recommended for connecting the band ends together. Caution must be taken to ensure that the band is tightly installed and no damage, denting, or alteration to the wheel or blades occurs during the installation.

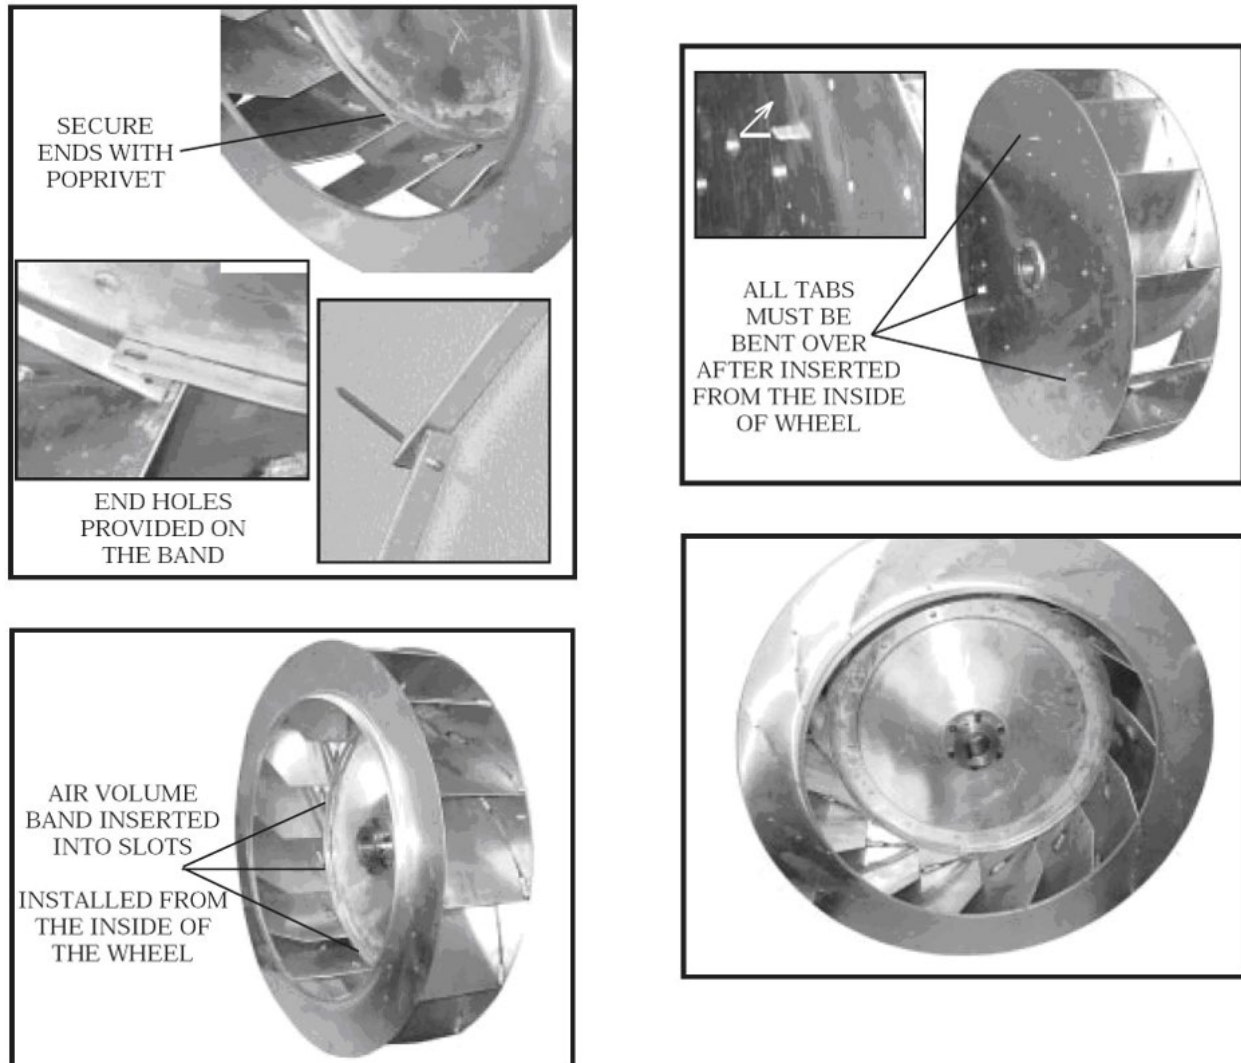


Figure 31: Supply Fan Banding

14. ELECTRIC HEATING

Heating is accomplished by passing electrical current through a specified amount of resistance heaters which will produce the required heat. The indoor fan motor will energize at the same time as the heaters. Wiring to the air handling unit must be done in accordance with local electrical codes and standards. Check specified electrical rating and install with proper wire size.

Table 10: Electric Heating Capacities

	Electric Heat Capacity	
	kW (230V, 460V, 575V)	kW (208V)
O = Hot Water		
D = Heat D	28	21.0
E = Heat E	42	31.5
F = Heat F	56	42
G = Heat G	70	52.5
J = Heat J	80	63.0
K = Heat K	112	84.1
M = Heat M	168	126.2
Y = Heat Y	140	105.2

15. ELECTRICAL

For units not equipped with incoming power disconnect, means for all pole disconnection must be provided in the fixed wiring in accordance with local or national codes. Verify the unit nameplate agrees with power supply. Connect power and control field wiring as shown on the unit specific wiring diagram provided laminated and attached to the door in the controls compartment.

Table 11: Nameplate Voltage Markings

Hz	Nameplate Voltage	Nominal System Voltage	Operating Voltage Range ¹		Acceptable Performance Range ²	
			Min	Max	Min	Max
60	115	120	104	127	108	126
	208/230	208/240	187	254	187	252
	208	208	187	228	187	228
	230	240	208	254	216	252
	265	277	240	293	249	291
	460	480	416	508	432	504
	575	600	520	635	540	630
50	230	230	198	254	208	254
	400	400	344	440	360	440

Note: ¹ Operating voltage is the min and max voltage for which the unit can function. Never operate outside of this min and max voltage.

Note: ² The Acceptable Performance Range is the min and max voltage for which the unit performance is designed and rated to give acceptable performance.



CAUTION

Ensure that wires are protected from sharp edges, damage and wear caused by normal operation of unit, and environmental factors.



WARNING

Disconnect all electrical power sources before servicing the unit. More than one power source may be provided. Failure to do so may result in injury or death from electrical shock or entanglement in moving parts.

Route power and control wiring, separately, through the utility entry in the unit. Do not run power and control signal wires in the same conduit.

All units require a field-supplied electrical overcurrent and short circuit protection. Device must not be sized larger than the Maximum Overcurrent Protection (MOP) shown on the unit nameplate.

Codes may require a disconnect switch be within sight of the unit.

Note: Do not install the required field installed overcurrent protection or disconnect switch on the unit!

Electrical supply can enter through the bottom or side of the controls compartment. Entry must be field cut into panels of the unit.

A single point connection to a terminal block is provided. Split units may require connection between the units. High voltage conductors should enter the control panel in a separate opening and conduit separate from the 24V low-voltage conductors.



WARNING

The foam insulation releases dangerous fumes when it is burned. Do not cut a foam part with a cutting torch or plasma cutter. Do not weld to a foam filled part.

Note: Locations for field cut electrical entries are marked on the unit. Field cut openings must be a minimum of 15.25 cm (6 in.) away from all components and wiring to prevent damage due to drilling or cutting.

To pass wires through the wall or roof of the unit, a hole should be cut and conduit passed through it. Use the following procedure to cut a round hole in a foam panel.

15.1. Cutting Electrical Openings

1. Locate the placement of the hole. Be sure that the conduit will not interfere with the operation of any component or prevent access of any door or removable panel.
2. Drill a pilot hole all the way through the foam panel.
3. Using a hole saw cut the hole through the metal on both sides of the foam part.
4. With a knife cut the foam out of the hole.
5. After the conduit is installed in the hole caulk the entire perimeter of the hole on both sides with an industrial grade silicone sealant or a duct seal compound.



CAUTION

Proper sealing of the electrical and gas entries into the unit must be ensured before unit operation. Failure to seal the entries may result in damage to the unit and property.

If a larger cut-out is needed for additional duct connections not provided by the factory, or for any other reason, it is very important that the foam be completely sealed. Fabricate insulation covers from sheet metal to cover the foam at the cut. Seal the edges and corners not covered using silicone caulking or a duct seal compound. If a reciprocating saw is used to make the cut out, take care that the metal skins of the foamed part do not separate from the foam, this would result in reduced structural integrity of the part.

Size supply conductors based on the unit Minimum Current Ampacity (MCA) rating. Supply conductors must be rated a minimum of 75°C (167°F).

Protect the branch circuit in accordance with code requirements. The unit must be electrically grounded in accordance with local codes, or in the absence of local codes, the current National Electric Code, ANSI/NFPA 70 or the current Canadian Electrical Code CSA C22.1.

Wire power leads to the unit's terminal block or main disconnect. All wiring beyond this point has completed at the factory.



CAUTION

Three phase voltage imbalance will cause motor overheating and premature failure.

Supply voltage must be within the min/max range shown on the unit nameplate. Available short circuit current should not exceed the SCCR rating shown on the unit nameplate.

Three-phase voltage imbalance will cause motor overheating and premature failure. The maximum allowable imbalance is 2%.

Voltage imbalance is defined as 100 times the maximum deviation from the average voltage divided by the average voltage.

Example:

$(221V + 230V + 227V) / 3 = 226V$, then $100 * (226V - 221V) / 226V = 2.2\%$, which exceeds the allowable imbalance.

Check voltage imbalance at the unit disconnect switch and at the compressor terminal. Contact your local power company for line voltage corrections.

A qualified technician must check for proper motor rotation and check blower motor amperage listed on the motor nameplate is not exceeded. Motor overload protection may be a function of the variable frequency drive (VFD) and must not be bypassed.

Note: All units are factory wired for 208/230V, 460V, or 575V. If unit is to be connected to a 208V supply, the transformer must be rewired to 208V service. For 208V service interchange the yellow and red conductor on the low voltage control transformer.

Red-Black for 208V

Yellow-Black for 230V



CAUTION

Rotation must be checked on all MOTORS AND COMPRESSORS at startup by a qualified service technician. Scroll compressors are directional and can be damaged if rotated in the wrong direction. Compressor rotation must be checked using suction and discharge gauges. Fan motor rotation should be checked for proper operation. Alterations should only be made at the unit power connection

Wire control signals to the unit's low voltage terminal block located in the controls compartment.

If any factory installed wiring must be replaced, use a minimum 105°C (221°F) type AWM insulated conductors.

15.2. Fuses and Circuit Breakers

The interrupting rating of fuses and circuit breakers is to be determined based on the KAIC rating of the unit. Refer to the wiring diagram for fuse sizing.

Table 12: 35 KAIC Fuse Sizing

35 KAIC Construction		
Component	Description	Interrupting Rating (kA)
Fuse	Class CC, 600V, 0.5A - 30A	200
Fuse	Class J, 600V, 35A - 600A	200
Disconnect	3P, 600V, 15A - 600A	35

Table 13: 65 KAIC Fuse Sizing

65 KAIC Construction		
Component	Description	Interrupting Rating (kA)
Fuse	Class CC, 600V, 0.5A - 30A	200
Fuse	Class J, 600V, 35A - 600A	200
Disconnect	3P, 600V, 15A - 600A	65

15.3. Thermostat Control Wiring

If a thermostat is used for unit control, thermostat should be located on an inside wall 1.2 - 1.5 meters (4 - 5 feet) above the floor where it will not be subjected to drafts, sun exposure, or heat from electrical fixtures of appliances. Control wiring must deliver adequate voltage to components to ensure proper operation. Control voltage returning from controller circuit must be a minimum of 21 VAC. To ensure proper wiring use the following chart to determine the allowable wiring distances.

Table 14: Control Wiring

Wire Size (Stranded) - Copper Conductors Only	Total Wire Distance Allowable	
20 AWG	60.96 m	200 ft
18 AWG	106.7 m	350 ft
16 AWG	152.4 m	500 ft
14 AWG	228.6 m	750 ft
12 AWG	381.0 m	1250 ft

Note: Total Wire Distance Allowable =
(Quantity of Control Wires) x
(Control Wire Distance)

Take the total wire distance allowable and divide by the number of wires to be connected. This indicates the distance allowable for that size wire. The wiring to the unit must not exceed the total wire distance allowable. If the voltage at the connectors is less than 21 VAC, isolation relays must be installed. If under external control 21 VAC must be field verified.

All external devices must be powered via a separate external power supply.

Example:

A total of 8 wires must be pulled 75ft to control the unit. What size wire should be used?

According to Table 14, 16 AWG allows for 63ft (500 ft/8 wires), and 14 AWG allows for 94ft (750 ft/8 wires). Thus, 14 AWG should be used.

16. ENERGY RECOVERY UNITS

AAONAIR® units have been equipped with an energy recovery wheel. This section is provided to ensure the energy recovery feature will be properly set up to perform in accordance with the job specifications for your particular application.

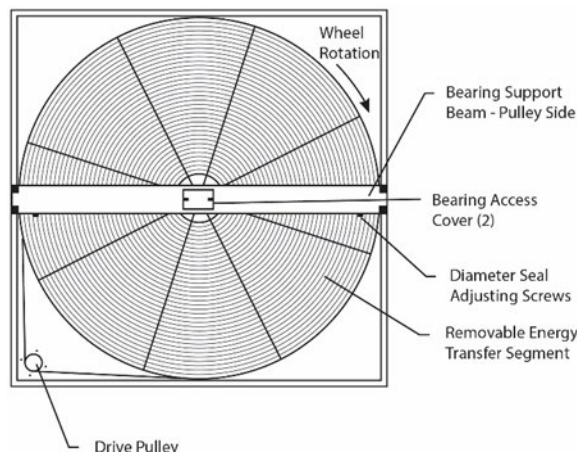


Figure 32: Energy Recovery Wheel

The Energy Recovery Cassette consists of a frame wheel, wheel drive system, and energy transfer segments. Segments are removable for cleaning or replacement. The segments rotate through counter flowing exhaust and outdoor air supply streams where they transfer heat and/or water vapor from the warm, moist air stream to the cooler and/or drier air stream.

The initial setup and servicing of the energy recovery wheel is very important to maintain proper operation efficiency and building occupant comfort.

Normal maintenance requires periodic inspection of filters, the cassette wheel, drive belts, air seals, wheel drive motor, and its electrical connections.

Wiring diagrams are provided with each motor. When wired according to wiring diagram, motor rotates clockwise when viewed from the shaft/pulley side.

By carefully reviewing the information within this section and following the instructions, the risk of improper operation and/or component damage will be minimized.

It is important that periodic maintenance be performed to help ensure trouble free operation.

16.1. Initial Mechanical Check and Setup

Outdoor air intake adjustments should be made according to building ventilation, or local code requirements.

After the unit installation is complete, open the cassette access door and determine that the energy wheel rotates freely when turned by hand. Apply power and observe that the wheel rotates at approximately 30 RPM. If the wheel does not rotate when power is applied, it may be necessary to readjust the "diameter air seals".

16.1.1. Air Seal Adjustments

Pile type air seals across both sides of the energy wheel diameter are factory adjusted to provide close clearance between the air seal and wheel. Racking of the unit or cassette during installation, and/or mounting of the unit on a non-level support or in other than the factory orientation can change seal clearances. Tight seals will prevent rotation.

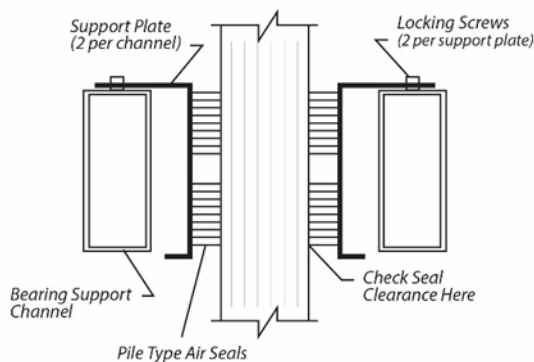


Figure 33: Cross Section of Air Seal Structure

16.1.2. Wheel to Air Seal Clearance

To check wheel to seal clearance; first disconnect power to the unit, in some units the energy recovery wheel assembly can be pulled out from the cabinet to view the air seals. On larger units, the energy recovery wheel may be accessible inside the walk-in cabinet.

A business card or two pieces of paper can be used as a feeler gauge, (typically each .1mm (.004 in.) thick) by placing it between the face of the wheel and pile seal.

Using the paper, determine if a loose slip fit exist between the pile seal and wheel when the wheel is rotated by hand.

To adjust air seal clearance, loosen all seal plate retaining screws holding the separate seal retaining plates to the bearing support channels and slide the seals plates away from the wheel. Using the paper feeler gauge, readjust and retighten one seal plate at a time to provide slip fit clearance when the wheel is rotated by hand.

Confirm that the wheel rotates freely. Apply power to the unit and confirm rotation.

16.1.3. Airflow Balancing and Checking

High performance systems commonly have complex air distribution and fan systems. Unqualified personnel should not attempt to adjust fan operation, or air circulation, as all systems have unique operations characteristics. Professional air balance specialists should be employed to establish actual operating conditions, and to configure the air delivery system for optimal performance.

16.1.4. Controls

A variety of controls and electrical accessories may be provided with the equipment. Identify the controls on each unit by consulting appropriate submittal, or order documents, and operate according to the control manufacturer's instructions. If you cannot locate installation, operation, or maintenance information for the specific controls, then contact your sales representative, or the control manufacturer for assistance.



WARNING

Do not alter factory wiring. Deviation from the supplied wiring diagram will void all warranties and may result in equipment damage or personal injury. Contact the factory with wiring discrepancies.

16.2. Routine Maintenance and Handling

Handle cassettes with care. All cassettes should be lifted by the bearing support beam. Holes are provided on both sides of the bearing support beams to facilitate rigging as shown in the following illustration.

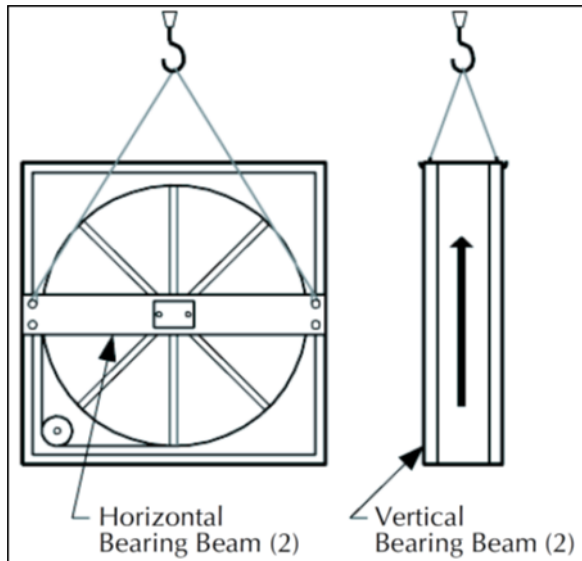


Figure 34: Lifting Hole Locations

Routine maintenance of the Energy Recovery Cassettes includes periodic cleaning of the Energy Recovery Wheel as well as inspection of the Air Seals and Wheel Drive Components as follows:

16.3.Cleaning

The need for periodic cleaning of the energy recovery wheel will be a function of operating schedule, climate and contaminants in the indoor air being exhausted and the outdoor air being supplied to the building.

The energy recovery wheel is “self-cleaning” with respect to dry particles due to its laminar flow characteristics. Smaller particles pass through; larger particles land on the surface and are blown clear as the flow direction is reversed. Any material that builds up on the face of the wheel can be removed with a brush or vacuum. The primary need for cleaning is to remove oil based aerosols that have condensed on energy transfer surfaces.

A characteristic of all dry desiccants, such films can close off micron sized pores at the surface of the desiccant material, reducing the efficiency by which the desiccant can absorb and desorb moisture and also build up so as to reduce airflow.

In a reasonably clean indoor environment such as a school or office building, measurable reductions of airflow or loss of sensible (temperature) effectiveness may not occur for several years. Measurable changes in latent energy (water vapor) transfer can occur in shorter periods of time in applications such as moderate occupant smoking or cooking facilities. In applications experiencing unusually high levels of occupant smoking or oil based aerosols such as industrial applications involving the ventilation of machine shop areas for example, annual washing of energy transfer may be necessary to maintain latent transfer efficiency. Proper cleaning of the energy recovery wheel will restore latent effectiveness to near original performance.

To clean, gain access to the energy recovery wheel and remove segments. Brush foreign material from the face of the wheel. Wash the segments or small wheels in a 5% solution of non-acid based coil cleaner or alkaline detergent and warm water.

Soak in the solution until grease and tar deposits are loosened (Note: some staining of the desiccant may remain and is not harmful to performance). Before removing, rapidly run finger across surface of segment to separate polymer strips for better cleaning action. Rinse dirty solution from segment and remove excess water before reinstalling in wheel.



CAUTION

Do Not use acid-based cleaners, aromatic solvents, steam or temperatures in excess of 76.7°C (170°F); damage to the wheel may

16.3.1. Air Seals

Four adjustable diameter seals are provided on each cassette to minimize transfer of air between the counter flowing airstreams.

To adjust diameter seals, loosen diameter seal adjusting screws and back seals away from wheel surface. Rotate wheel clockwise until two opposing spokes are hidden behind the bearing support beam. Using a folded piece of paper as a feeler gauge, position paper between the wheel surface and diameter seals.

Adjust seals towards wheel surface until a slight friction on the feeler gauge (paper) is detected when gauge is moved along the length of the spoke. Retighten adjusting screws and recheck clearance with "feeler" gauge.

16.4. Wheel Drive Components

The wheel drive motor bearings are pre-lubricated, and no further lubrication is necessary.

The wheel drive pulley is secured to the drive motor shaft by a combination of either a key or D slot and set screw.

The set screw is secured with removable Loctite to prevent loosening. Annually confirm set screw is secure. The wheel drive belt is a urethane stretch belt designed to provide constant tension through the life of the belt. No adjustment is required. Inspect the drive belt annually for proper tracking and tension. A properly tensioned belt will turn the wheel immediately after power is applied with no visible slippage during start-up.

16.4.1. Installation Considerations

Energy recovery cassettes are incorporated within the design of packaged units, packaged air handlers, and energy recovery ventilators. In each case, it is recommended that the following considerations be addressed:

16.4.2. Accessibility

The cassette and all its operative parts (i.e. motor, belt, pulley, bearings, seals, and energy transfer segments) must be accessible for service and maintenance. This design requires that adequate clearance be provided outside the enclosure.

16.4.3. Orientation & Support

The Energy Recovery Cassette may be mounted in any orientation. However, Care must be taken to make certain that the cassette frame remains flat and the bearing beams are not racked.

To verify, make certain that the distance between wheel rim and bearing beam is the same at each end of the bearing beam, to within .64 cm (1/4 of an inch) (dimension A & B). This amount of racking can be compensated for by adjusting the diameter seals.

If greater than .64 cm (1/4 inch) (dimension C), racking must be corrected to ensure that drive belt will not disengage from wheel.

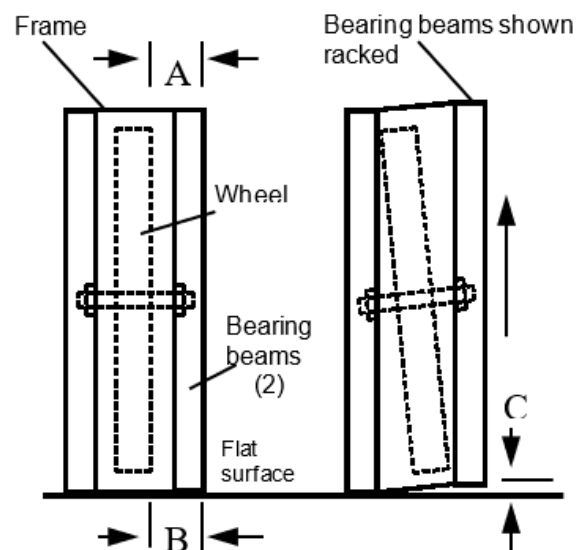


Figure 35: Avoid Racking of Cassette Frame

16.4.4. Operation



CAUTION

Keep hands away from rotating wheel!
Contact with rotating wheel can cause physical injury.

16.5. Startup Procedure

1. By hand, turn wheel clockwise (as viewed from the pulley side), to verify wheel turns freely through 360° rotation.
2. Before applying power to drive motor, confirm wheel segments are fully engaged in wheel frame and segment retainers are completely fastened (See Segment Installation Diagram).
3. With hands and objects away from moving parts, activate unit and confirm wheel rotation. Wheel rotates clockwise (as viewed from the pulley side).
4. If wheel has difficulty starting, turn power off and inspect for excessive interference between the wheel surface and each of the four diameter seals. To correct, loosen diameter seal adjusting screws and back adjustable diameter seals away from surface of wheel, apply power to confirm wheel is free to rotate, then re-adjust and tighten hub and diameter seals, as shown in hub seal adjustment diagram.
5. Start and stop wheel several times to confirm seal adjustment and to confirm belt is tracking properly on wheel rim (approximately .64 cm (1/4in.) from outer edge of rim).

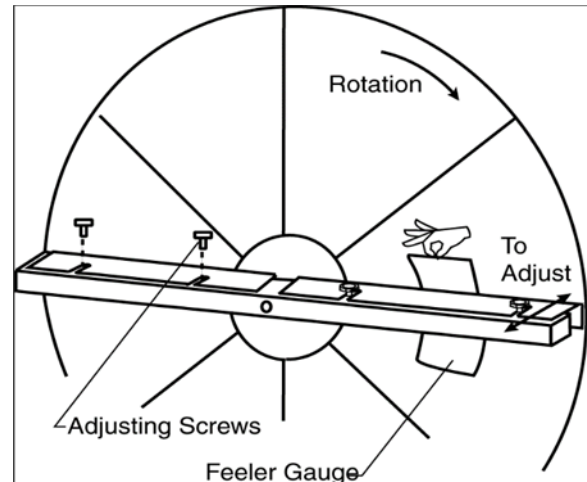


Figure 36: Diameter Seal Adjustment

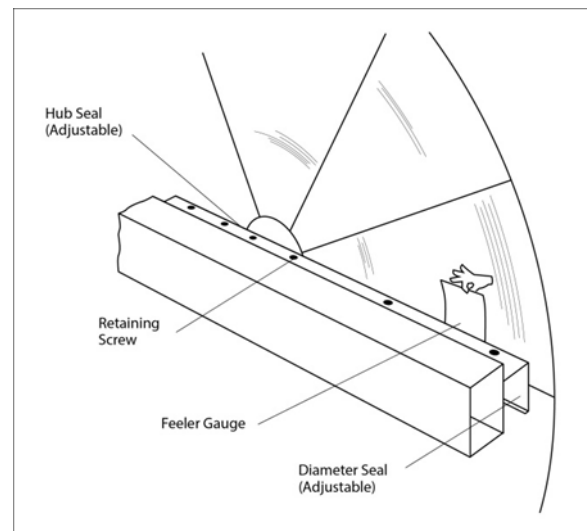


Figure 37: Hub Seal Adjustment

16.6. Service



CAUTION

Disconnect electrical power before servicing energy recovery cassette. Always keep hands away from bearing support beam when installing or removing segments. Failure to do so could result in severe injury to fingers or hand.

16.6.1. Segment Installation & Replacement

Wheel segments are secured to the wheel frame by a Segment Retainer which pivots on the wheel rim and is held in place by a Segment Retaining Catch.

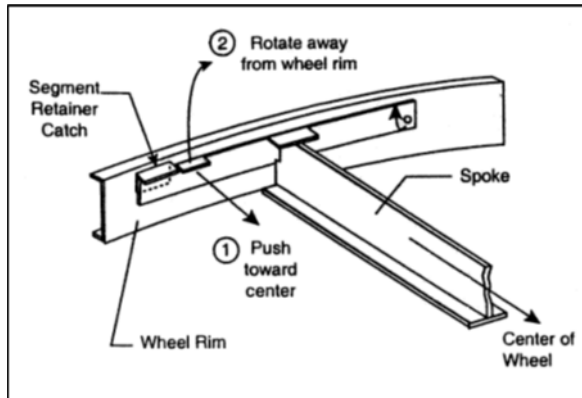


Figure 38: Segment Retainer

To install wheel segments, follow steps one through five below. Reverse procedure for segment removal.

1. Unlock two segment retainers (one on each side of the selected segment opening).
2. With the embedded stiffener facing the motor side, insert the nose of the segment between the hub plates.

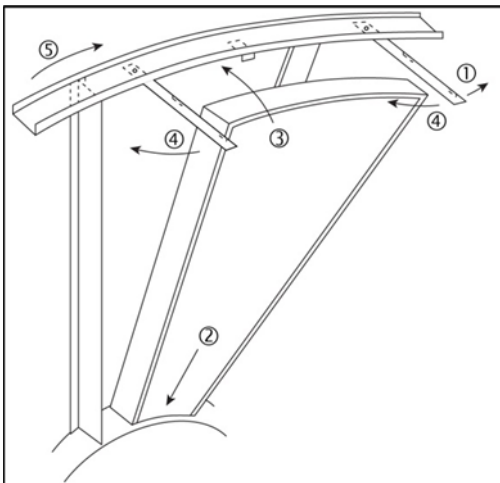


Figure 39: Segment Installation

3. Holding segment by the two outer corners, press the segment towards the center of the wheel and inwards against the spoke flanges. If hand pressure does not fully seat the segment, insert the flat tip of a screwdriver between the wheel rim and outer corners of the segment and apply downward force while guiding the segment into place.
4. Close and latch each Segment Retainer under Segment Retaining Catch.
5. Slowly rotate the wheel 180°. Install the second segment opposite the first for counterbalance. Rotate the two installed segments 90° to balance the wheel while the third segment is installed. Rotate the wheel 180° again to install the fourth segment opposite the third. Repeat this sequence with the remaining four segments.

16.6.2. Wheel Drive Motor and Pulley Replacement

1. Disconnect power to wheel drive motor.
2. Remove belt from pulley and position temporarily around wheel rim.
3. Loosen set screw in wheel drive pulley using a hex head wrench and remove pulley from motor drive shaft.
4. While supporting weight of drive motor in one hand, loosen and remove the four mounting bolts.
5. Install replacement motor with hardware kit supplied.
6. Install pulley to dimension as shown and secure set screw to drive shaft.
7. Stretch belt over pulley and engage in groove.
8. Follow start-up procedure.

16.6.3. Belt Replacement

1. Obtain access to the pulley side bearing access plate if bearing access plates are provided. Remove the two-bearing access plate retaining screws and the access plate.
2. Using hexagonal wrench, loosen set screw in bearing locking collar. Using a light hammer and drift (in drift pin hole) tap collar in the direction of wheel rotation to unlock collar. Remove collar.
3. Using socket wrench with extension, remove two nuts which secure bearing housing to the bearing support beam. Slide bearing from shaft. If not removable by hand, use bearing puller.
4. Form a small loop of belt and pass it through the hole in the bearing support beam. Grasp the belt at the wheel hub and pull the entire belt down.

Note: Slight hand pressure against wheel rim will lift weight of wheel from inner race of bearing to assist bearing removal and installation.



CAUTION

Protect hands and belt from possible sharp edges of hole in Bearing Support Beam.

5. Loop the trailing end of the belt over the shaft (belt is partially through the opening).
6. Reinstall the bearing onto the wheel shaft, being careful to engage the two locating pins into the holes in the bearing support beam. Secure the bearing with two self-locking nuts.
7. Install the belts around the wheel and pulley according to the instructions provided with the belt.

8. Reinstall diameter seals or hub seal and tighten retaining screws. Rotate wheel in clockwise direction to determine that wheel rotates freely with slight drag on seals.
9. Reinstall bearing locking collar. Rotate collar by hand in the direction the wheel rotates (see label provided on each cassette for wheel rotation).
10. Lock in position by tapping a drift pin hole with hammer and drift. Secure in position by tightening set screw.
11. Reinstall Bearing Access Cover.
12. Apply power to wheel and ensure that the wheel rotates freely without interference.

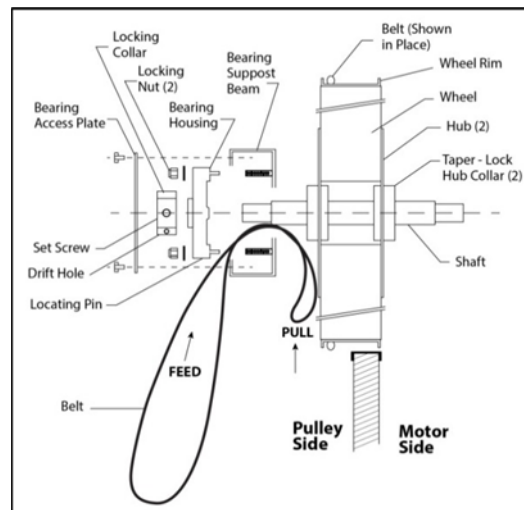


Figure 40: Belt Replacement

17. STARTUP

(See back of the manual for startup form)

 WARNING
Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a trained, qualified installer. A copy of this IOM should be kept with the unit.

 WARNING
Electric shock hazard. Shut off all electrical power to the unit to avoid shock hazard or injury from rotating parts.

During startup, it is necessary to perform routine checks on the performance of the unit. This includes checking of the air flow, the air filters, condenser water flow and refrigerant charge.

17.1.Filters

Do not operate the unit without filters in place. Operation of the equipment without filters in place can result in clogged coils. Units are shipped with the selected filters installed. If filters have been removed during installation, open the filter access door and re-install the correct filters with the airflow indicator arrows pointing in the direction of airflow.

Filters should be checked after a few days of operation after the unit has been started up as dust and debris from construction may cause premature filter loading. Replace the filters if necessary.

17.2.Check Out

Equipment should be thoroughly checked for loose wiring, a free spinning blower wheel, and well-fitting access panels. Air handlers should not be operated without proper ductwork and access panels installed, except as required during start-up and air balancing.

1. Check all electrical connections to be sure they are tight.
2. Open all access panels, and remove all shipping screws, or restraints.
3. Clean out any debris that may have been left.
4. Check fan wheel set screws for tightness.
5. Turn fan wheels to ensure free rotation.
6. Ensure electrical supply matches the unit nameplate.
7. Ensure condensate lines are connected, glued, and sloped toward building drain.
8. Check local codes for any special provisions.
9. Attach or close all access doors and panels.
10. Ensure that all ductwork dampers are open.
11. Check electrical phasing to ensure the fan rotates in the proper direction.

17.2.1. Electric Heating Section Procedures:

1. Perform final visual inspection. Check all equipment, ductwork, and piping to verify that all work is complete and equipment is properly installed and mounted. Improperly installed equipment or ductwork can affect readings.
2. Ensure there is no construction debris in the unit.
3. Check the unit for external damage.
4. Note all accessories installed.
5. Install new filters of the proper size and type.
6. Check all terminal blocks, fuses, fuse blocks, and contactors for correctness.
7. Check all high and low voltage wiring connections for correctness and tightness.
8. Check unit for correct incoming voltage per the data plate.
9. Turn the unit power on.
10. Turn the unit blower on and check for correct rotation.
11. If correct, take blower amp readings and compare to see if the amp draw is within the safety factor area of the motor. Once correct, turn blower off.
12. Turn on the first stage of heating
 - a) Check amp draw of each element of each stage
 - b) Ensure blower started w/ electric heat
 - c) Check for temperature rise across heating section while all stages are on
 - d) If temperature rise is within range, turn all heating calls off
 - e) Check to see that blower stops

17.2.2. Refrigerant (DX) Cooling Section Procedures:

1. Perform final visual inspection. Check all equipment, ductwork, and piping to verify that all work is complete, and equipment is properly installed and mounted. Improperly installed equipment, or ductwork can affect readings.
2. Perform condenser start-up checks in addition to these air handler checks according to the condenser manufacturer's instructions.
3. Ensure there is no construction debris in the unit.
4. Check the unit for external damage.
5. Note all accessories installed.
6. Ensure that drain P-trap is properly installed.
7. Check all terminal blocks, fuses, fuse blocks, and contactors for correctness.
8. Check all high and low voltage wiring connections for tightness. Check unit for correct incoming voltage per the data plate.
9. Turn the unit power on.
10. Turn the unit blower on and check for correct rotation.
11. If correct, take blower amp readings and compare to see if the amp draw is within the safety factor area of the motor.
12. Check and record ambient temperature.
13. Check for Guaranteed Off Timers (GOT) and Time Delay Relays (TDR).
14. Start the first stage cooling circuit and blower circuit.
15. After all stages of cooling have been on for at least five minutes, record the return air temperature and supply air temperature.
16. Check the temperature difference across the evaporator coil.


CAUTION

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

17.3. Commissioning

The commissioning of an air conditioning system is the process of achieving, verifying, and documenting the performance of that system to meet the operational needs of the building. This may not be a formal process in smaller structures, but some form of owner acceptance will occur. Adjustments made during the commissioning phase may include air or water balancing, or configuration of controls and operational sequences.

17.3.1. Air Balancing

High performance systems commonly have complex air distribution and fan systems. Unqualified personnel should not attempt to adjust fan operation or air circulation, as all systems have unique operating characteristics. Professional air balance specialists should be employed to establish actual operating conditions and to configure the air delivery system for optimal performance.

17.3.2. Water Balancing

A hydronic specialist with a complete working knowledge of water systems, controls, and operation must be employed to properly balance the entire system. Unqualified personnel should not attempt to manipulate temperatures, pressures, or flow rates, as all systems have unique operating characteristics and improper balancing can result in undesirable noises and operation.


CAUTION

Refrigerant sensors may only be replaced with manufacturer approved sensors.


CAUTION

Certain applications may allow the unit to bring in unconditioned air. Freeze protection needs to be considered in the final application.

17.3.3. Controls

A variety of controls and electrical accessories may be provided with the equipment.

Identify the controls on each unit by consulting appropriate submittal and order documents and operate according to the control manufacturer's instructions. If you cannot locate installation, operation, or maintenance information for the specific controls, then contact your sales representative, or the control manufacturer, for assistance.

17.4. Operation

Immediately following building occupancy, the air conditioning system requires a maintenance schedule to ensure continued successful operation. Routine maintenance of this equipment is necessary in order to provide continued efficient and reliable operation for the owner. See the Maintenance List provided later in this manual.

17.5. Refrigerant Detection System

Unit is equipped with a Refrigerant Detection System (RDS) to detect leaked refrigerant within the conditioned airstream and in the cabinet. The RDS system consists of a mitigation board and refrigerant detection sensors in the conditioned airstream and cabinet with corresponding mitigation board. In the event of a refrigerant leak that could leak into the occupied space, the RDS sensors will send an alarm to the mitigation board.

Applications using AAON VCC-X controls: In the event of an alarm, the compressor operation is disabled and the indoor blower is enabled to provide circulation airflow in accordance with UL 60335-2-40. The airstream mitigation board is equipped with an alarm output. In the event of a cabinet or gas heat RDS alarm, compressor operation and gas heat operation is disabled. The indoor blower, and any form of heat other than gas, will resume normal operation. RDS alarm outputs are available via BACNet communication through the VCC-X controller.



CAUTION

Additional mitigation procedures or fault conditions initiated outside of AAON controls are the responsibility of the Building Engineer and must give appropriate priority in accordance with local codes.

For applications not using AAON VCC-X controls, mitigation board outputs will be wired to the low voltage terminal block.

In all cases, the mitigation board will remain in alarm state for five minutes after the RDS sensor has cleared the alarm below the concentration setpoint. The mitigation board is equipped with an alarm output in the form of a NO/NC relay. For VAV applications and applications utilizing zone dampers, the VAV boxes and zone dampers must be wired to the mitigation board output to open all VAV boxes and zone dampers to allow for the required circulation airflow to prevent stagnation of leaked refrigerant. Other applications requiring additional refrigerant leak mitigation measures as required by local code and ASHRAE 15 may be notified of detected refrigerant by this alarm output.

Verify functionality of RDS by removing sensor connection at the mitigation board and ensuring that all sequences above take place, including the opening of VAV boxes and zone dampers and additional mitigation procedures, if applicable.

Building fire and smoke systems may override the RDS alarm functions

17.6. Adjusting Refrigerant Charge

Adjusting the charge of a system in the field must be based on determination of liquid sub-cooling and evaporator superheat. On a system with a TXV liquid sub-cooling is more representative of the charge than evaporator superheat but both measurements must be taken.

When the charge is adjusted in the field, the total system charge must be written on the decal near the nameplate located on the inside of the control panel using a permanent marker. See Figure 41. Ensure that the space served by the unit has a sufficient floor area in accordance with Table 19.

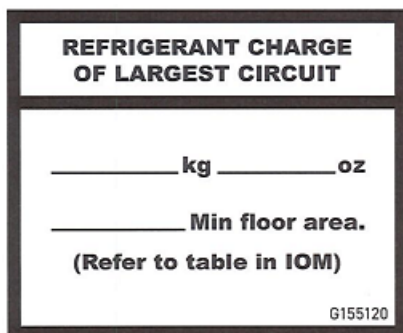


Figure 41: Refrigerant Charge of Largest Circuit

17.6.1. Before Charging

Unit being charged must be at or near full load conditions before adjusting the charge.

Units equipped with hot gas reheat must be charged with the hot gas reheat valves closed while the unit is in cooling mode to get the proper charge. After charging, unit should be operated in reheat (dehumidification) mode to check for correct operation.

After adding or removing charge the system must be allowed to stabilize, typically 10-15 minutes, before making any other adjustments.

The type of unit and options determine the ranges for liquid sub-cooling and evaporator superheat. Refer to the tables below when determining the proper sub-cooling.

17.6.2. Checking Liquid Sub-Cooling

Measure the temperature of the liquid line as it leaves the condenser.

Read the gauge pressure at the liquid line close to the point where the temperature was taken. Use liquid line pressure as it will vary from discharge pressure due to condenser pressure drop.

Convert the pressure obtained to a saturated temperature using the appropriate refrigerant temperature-pressure chart.

Subtract the measured liquid line temperature from the saturated temperature to determine the liquid sub-cooling.

Compare calculated sub-cooling to the table below for the appropriate unit type and options.



CAUTION

The Clean Air Act of 1990 bans the intentional venting of refrigerant (CFC's and HCFC's) as of July 1, 1992. Approved methods of recovery, recycling or reclaiming must be followed. Fines and/or incarceration may be levied for non-compliance.

Table 15: Acceptable Refrigeration Circuit Values (Metric)

	Cooling Mode Liquid Sub-Cooling Values
Cooling Only Unit	4.4-8.3°C
Cooling Only Unit with Hot Gas Reheat	2.8-8.3°C
Heat Pump Unit	1.1-2.2°C
Heat Pump Unit with Hot Gas Reheat	1.1-3.3°C
Cooling Only Unit with LAC	4.4-8.3°C
Cooling Only Unit with Hot Gas Reheat & LAC	4.4-8.3°C

Table 16: Acceptable Refrigeration Circuit Values (Imperial)

	Cooling Mode Liquid Sub-Cooling Values
Cooling Only Unit	8-15°F
Cooling Only Unit with Hot Gas Reheat	5-15°F
Heat Pump Unit	2-4°F
Heat Pump Unit with Hot Gas Reheat	2-6°F
Cooling Only Unit with LAC	8-15°F
Cooling Only Unit with Hot Gas Reheat & LAC	8-15°F

Note: Must be charged with the hot gas valve closed. After charging, unit should be operated in reheat (dehumidification) mode to check for correct operation.

Note: The sub-cooling value in this table is for the unit running in cooling mode of operation. After charging, unit should be operated in heating mode to check for correct operation.

Note: The sub-cooling value in this table is for the unit running in cooling mode of operation and the hot gas valve closed. After charging, unit should be operated in reheat (dehumidification) mode to check for correct operation and then in heating mode to check for correct operation.

Sub-cooling must be increased by .6°C (1°F) per 3 meters (10 feet) of vertical liquid line rise for R-454B (AHU above CU). For example, a cooling only unit with hot gas reheat and a vertical liquid drop can charge to a sub-cooling value of 2.8-8.3°C (5-15°F), but a cooling only unit with hot gas reheat and a vertical liquid rise of 9.1 m (30 ft) must charge to a sub-cooling value of at least 4.4-8.3°C (8-15°F).

Table 17: Acceptable Water-Cooled Refrigeration Circuit Values (Metric)

	Water-Cooled Condenser
Sub-Cooling	3.3-5.6°C
Sub-Cooling with Hot Gas Reheat	4.4-6.7°C
Superheat	4.4-8.3°C

Table 18: Acceptable Water-Cooled Refrigeration Circuit Values (Imperial)

	Water-Cooled Condenser
Sub-Cooling	6-10°F
Sub-Cooling with Hot Gas Reheat	8-12°F
Superheat	8-15°F

17.6.3. Checking Evaporator Superheat

Measure the temperature of the suction line close to the compressor.

Read gauge pressure at the suction line close to the compressor.

Convert the pressure obtained to a saturated temperature using the appropriate refrigerant temperature-pressure chart.

Subtract the saturated temperature from the measured suction line temperature to determine the evaporator superheat.

For refrigeration systems with tandem compressors, it is critical that the suction superheat setpoint on the TXV is set with one compressor running. The suction superheat should be 5.6 – 7.2°C (10-13°F) with one compressor running. The suction superheat will increase with both compressors in a tandem running. Inadequate suction superheat can allow liquid refrigerant to return to the compressors which will wash the oil out of the compressor. Lack of oil lubrication will destroy a compressor. Liquid sub-cooling should be measured with both compressors in a refrigeration system running.

Compare calculated superheat to the acceptable cooling mode superheat values of 4.4-8.3°C (8-15°F) for all system types. Superheat will increase with long suction line runs.



CAUTION

Thermal expansion valve must be adjusted to between 4.4 and 8.3°C (8-15°F) of suction superheat. Failure to have sufficient superheat will damage the compressor and void the warranty.

17.6.4. Adjusting Sub-Cooling and Superheat Temperatures

The system is overcharged if the sub-cooling temperature is too high and the evaporator is fully loaded (low loads on the evaporator result in increased sub-cooling) and the evaporator superheat is within the temperature range as shown in the table above (high superheat results in increased sub-cooling).

Correct an overcharged system by reducing the amount of refrigerant in the system to lower the sub-cooling.



CAUTION

Do Not Overcharge!

Refrigerant overcharging leads to excess refrigerant in the condenser coils resulting in elevated compressor discharge pressure.

The system is undercharged if the superheat is too high and the sub-cooling is too low

Correct an undercharged system by adding refrigerant to the system to reduce superheat and raise sub-cooling.

If the sub-cooling is correct and the superheat is too high, the TXV may need adjustment to correct the superheat. Before adjusting the TXV, verify the sensing bulb is in the correct position according to Figure 20 and follows the guidelines below.

1. The suction line is clean where the sensing bulb is attached.
2. The entire length of the sensing bulb is in contact with the suction line.
3. The sensing bulb should be placed several inches downstream of the equalizer line.
4. The sensing bulb is fully insulated.
5. If the sensing bulb is installed on a vertical portion of the suction line, the sensing bulb should be placed upstream of a suction line trap

Table 19: Minimum Circulation Airflow and Room Area for a Given Charge

Charge of Largest Circuit in kg (oz)		Min Circulation Airflow in m³/hr (CFM)		Minimum Room Area in m² (ft²)						Floor area for unventilated storage	
				1.8 m (6 ft) ceiling/release height		3 m (10 ft) ceiling/release height		3.7 m (12 ft) ceiling/release height			
9.0	316	908	534	34	362	20	217	16	176	56	599
9.4	332	954	561	35	380	21	228	17	185	61	661
9.9	348	1000	589	37	399	22	239	18	194	67	727
10.3	364	1046	616	39	417	23	250	19	203	74	795
10.8	380	1092	643	40	435	24	261	20	212	80	866
11.2	396	1138	670	42	454	25	272	21	221	87	941
11.7	412	1184	697	44	472	26	283	21	230	95	1018
12.1	428	1230	724	46	490	27	294	22	239	102	1099
12.6	444	1276	751	47	509	28	305	23	247	Flock	1183
13.0	460	1322	778	49	527	29	316	24	256	118	1269
13.5	476	1368	805	51	545	30	327	25	265	126	1359
13.9	492	1414	832	52	564	31	338	25	274	135	1452
14.4	508	1460	859	54	582	32	349	26	283	144	1548
14.9	524	1506	886	56	600	33	360	27	292	153	1647
15.3	540	1552	913	57	619	34	371	28	301	163	1749
15.8	556	1598	940	59	637	36	382	29	310	172	1855
16.2	572	1644	967	61	655	37	393	30	319	182	1963
16.7	588	1689	994	63	674	38	404	30	328	193	2074
17.1	604	1735	1021	64	692	39	415	31	337	203	2189
17.6	620	1781	1049	66	710	40	426	32	345	214	2306
18.0	636	1827	1076	68	729	41	437	33	354	225	2427
18.5	652	1873	1103	69	747	42	448	34	363	237	2550
18.8	662	1902	1120	70	758	42	455	34	369	244	2629

Table 20: R-454B Refrigerant Temperature-Pressure Chart (Metric)

°C	KPA	°C	KPA	°C	KPA	°C	KPA	°C	KPA
-6.7	484.5	8.3	843.3	23.3	1348.0	38.3	2034.6	53.3	2946.9
-6.1	495.6	8.9	859.3	23.9	1370.0	38.9	2064.1	53.9	2985.7
-5.6	506.9	9.4	875.3	24.4	1392.2	39.4	2093.9	54.4	3024.9
-5.0	518.2	10.0	891.6	25.0	1414.6	40.0	2123.9	55.0	3064.5
-4.4	529.7	10.6	908.1	25.6	1437.3	40.6	2154.3	55.6	3104.5
-3.9	541.5	11.1	924.8	26.1	1460.3	41.1	2185.0	56.1	3144.9
-3.3	553.3	11.7	941.7	26.7	1483.5	41.7	2216.1	56.7	3185.8
-2.8	565.4	12.2	958.8	27.2	1507.0	42.2	2247.4	57.2	3227.0
-2.2	577.6	12.8	976.2	27.8	1530.8	42.8	2279.1	57.8	3268.6
-1.7	589.9	13.3	993.7	28.3	1554.8	43.3	2311.1	58.3	3310.7
-1.1	602.5	13.9	1011.5	28.9	1579.0	43.9	2343.5	58.9	3353.2
-0.6	615.2	14.4	1029.4	29.4	1603.6	44.4	2376.2	59.4	3396.1
0.0	628.1	15.0	1047.6	30.0	1628.4	45.0	2409.2	60.0	3439.5
0.6	641.2	15.6	1066.0	30.6	1653.5	45.6	2442.6	60.6	3483.3
1.1	654.4	16.1	1084.7	31.1	1678.8	46.1	2476.2	61.1	3527.6
1.7	667.8	16.7	1103.5	31.7	1704.4	46.7	2510.3	61.7	3572.3
2.2	681.4	17.2	1122.6	32.2	1730.4	47.2	2544.7	62.2	3617.4
2.8	695.2	17.8	1141.9	32.8	1756.6	47.8	2579.4	62.8	3663.0
3.3	709.2	18.3	1161.5	33.3	1783.0	48.3	2614.5	63.3	3709.2
3.9	723.3	18.9	1181.3	33.9	1809.9	48.9	2650.0	63.9	3755.7
4.4	737.6	19.4	1201.3	34.4	1836.9	49.4	2685.7	64.4	3802.7
5.0	752.2	20.0	1221.5	35.0	1864.3	50.0	2721.9	65.0	3850.3
5.6	766.9	20.6	1242.0	35.6	1891.9	50.6	2758.5	65.6	3898.4
6.1	781.8	21.1	1262.8	36.1	1919.8	51.1	2795.4		
6.7	796.9	21.7	1283.7	36.7	1948.1	51.7	2832.7		
7.2	812.2	22.2	1304.9	37.2	1976.7	52.2	2870.4		
7.8	827.7	22.8	1326.3	37.8	2005.5	52.8	2908.4		

Table 21: R-454B Refrigerant Temperature-Pressure Chart (Imperial)

°F	PSIG	°F	PSIG	°F	PSIG	°F	PSIG	°F	PSIG
20	70.3	47	122.3	74	195.5	101	295.1	128	427.4
21	71.9	48	124.6	75	198.7	102	299.4	129	433.0
22	73.5	49	127.0	76	201.9	103	303.7	130	438.7
23	75.2	50	129.3	77	205.2	104	308.0	131	444.5
24	76.8	51	131.7	78	208.5	105	312.5	132	450.3
25	78.5	52	134.1	79	211.8	106	316.9	133	456.1
26	80.3	53	136.6	80	215.2	107	321.4	134	462.0
27	82.0	54	139.1	81	218.6	108	326.0	135	468.0
28	83.8	55	141.6	82	222.0	109	330.6	136	474.1
29	85.6	56	144.1	83	225.5	110	335.2	137	480.2
30	87.4	57	146.7	84	229.0	111	339.9	138	486.3
31	89.2	58	149.3	85	232.6	112	344.6	139	492.6
32	91.1	59	151.9	86	236.2	113	349.4	140	498.8
33	93.0	60	154.6	87	239.8	114	354.3	141	505.2
34	94.9	61	157.3	88	243.5	115	359.1	142	511.6
35	96.9	62	160.1	89	247.2	116	364.1	143	518.1
36	98.8	63	162.8	90	251.0	117	369.1	144	524.6
37	100.8	64	165.6	91	254.8	118	374.1	145	531.3
38	102.9	65	168.5	92	258.6	119	379.2	146	538.0
39	104.9	66	171.3	93	262.5	120	384.3	147	544.7
40	107.0	67	174.2	94	266.4	121	389.5	148	551.5
41	109.1	68	177.2	95	270.4	122	394.8	149	558.4
42	111.2	69	180.1	96	274.4	123	400.1	150	565.4
43	113.4	70	183.1	97	278.4	124	405.4		
44	115.6	71	186.2	98	282.5	125	410.8		
45	117.8	72	189.3	99	286.7	126	416.3		
46	120.0	73	192.4	100	290.9	127	421.8		

17.7.Refrigeration Troubleshooting

Table 22: Refrigeration Problems, Causes, and Solutions

Problem	Possible Cause	Solutions
Frosted evaporator coil, low suction pressure	Restricted air flow Low fan speed Reversed blower rotation Low refrigerant charge	Clean, or replace filters Check fan drives Correct wiring Add refrigerant
Unit runs, but supplies warm air	Loss of refrigerant Faulty expansion valve element Plugged filter-drier	Check leaks, add refrigerant Replace valve element Replace filter-drier
Compressor starts, but opens high pressure control	Refrigerant over-charged Air in condenser coil Condenser fan faulty Condenser coil dirty	Remove some refrigerant Evacuate and recharge refrigerant Replace fan motor Clean condenser coil
High suction pressure, but low superheat	Oversized expansion valve Poor sensing bulb location Low superheat adjustment	Replace with correct expansion valve Relocate sensing bulb, secure to suction line Adjust expansion valve
Unit operates continuously	Low refrigerant charge Unit undersized	Check and recharge to nameplate Decrease load or resize unit Thermostat set too low, increase temperature setting

18. MAINTENANCE

(See back of the manual for maintenance log.)

At least once each year, a trained, qualified service technician should check out the unit. Fans, evaporator coils, and filters should be inspected at least monthly.

One week after start-up:

- Check operating pressures.
- Check filters for cleanliness. Measure pressure loss (if applicable). Replace (if necessary).
- Check cycling of compressors, fans, and valves. Correct unusual cycling.

Monthly:

- Check cleanliness of filters and replace (if necessary).
- Check cooling coil drain pan to ensure proper drainage.
- Inspect all coils. Clean if dirty or obstructed in any way.

Quarterly:

- Check damper operation for freedom of movement. Correct any binding that may occur.
- Check operation of heating and cooling sections.
- Check inlet and outlet air temperatures.

Annually:

- Clean the coils with water or non-corrosive coil cleaner.
- Clean the drain line, "P" trap, and condensate pan.
- Check refrigerant pressures and temperatures every Spring.
- Check heating section every Fall. Check all electrical connections for tightness and check heater elements for indications of overheating.

18.1. Fan Assembly

M2 Series units use backward curved fan wheels which are non-overloading, energy efficient and easy to clean. Cleaning the wheels is necessary to reduce electrical use, maintain capacity, and reduce stress on the unit. The wheel and fan section need to be inspected periodically and cleaned of dust or debris.

To inspect and clean the blower, set thermostat to the "OFF" position. Turn the electrical power to the unit to the "OFF" position at the disconnect switch. Clean the assembly. Check screws for tightness.

18.2. Indoor Coils

Indoor cooling/evaporator coils must be cleaned regularly to maintain unit efficiency and operation. Dirty evaporator coils will eventually freeze up and often result in a time consuming and expensive service call. Clean filters will help to prevent dirt from accumulating on cooling coils, however cooling coils should be cleaned at least annually by an HVAC professional.

18.3. Refrigeration Cycle

Satisfactory performance of the refrigeration cycle can be determined by measuring suction line superheat. In order to determine if refrigerant flowing from the evaporator is dry, ensure that the system has enough refrigerant to produce liquid line subcooling, but not so much to cause abnormally high condensing temperatures (and pressures). Refrigerant cycle analysis is best performed in conditions that approach the conditions where the air conditioner will be expected to operate.

18.4. Brazed Plate Heat Exchanger Cleaning

Because of a normally high degree of turbulence in brazed plate heat exchangers, for many applications the heat exchanger channels are self-cleaning. For applications that are not self-cleaning (i.e. hard water at high temperatures, etc.) or applications where additional cleaning is desired, it is possible to clean the brazed plate heat exchanger by circulating a cleaning liquid.

Use a tank with weak acid, 5% phosphoric acid (H_3PO_4) or, if the exchanger is frequently cleaned, 5% oxalic acid ($H_2C_2O_4$). Pump the cleaning liquid through the exchanger. For optimum cleaning, the cleaning solution flow rate should be a minimum of 1.5 times the normal flow rate, preferably in a back-flush mode. After cleaning, the heat exchanger must be rinsed with clean water. A solution of 1-2% sodium hydroxide ($NaOH$) or sodium bicarbonate ($NaHCO_3$) before the last rinse ensures that all acid is neutralized.

18.5. E-Coated Coil Cleaning

Documented routine cleaning of e-coated coils is required to maintain coating warranty coverage. The E-Coated Coil Maintenance Record document is available on the AAON website.



WARNING

Electric shock hazard. Shut off all electrical power to the unit to avoid shock hazard or injury from rotating parts.

Surface loaded fibers or dirt should be removed prior to water rinse to prevent restriction of airflow. If unable to back wash the side of the coil opposite of the coils entering air side, then surface loaded fibers or dirt should be removed with a vacuum cleaner. If a vacuum cleaner is not available, a soft non-metallic bristle brush may be used. In either case, the tool should be applied in the direction of the fins. Coil surfaces can be easily damaged (fin edges bent over) if the tool is applied across the fins.

Use of a water stream, such as a garden hose, against a surface loaded coil will drive the fibers and dirt into the coil. This will make cleaning efforts more difficult. Surface loaded fibers must be completely removed prior to using low velocity clean water rinse.

A monthly clean water rinse is recommended for coils that are applied in coastal or industrial environments to help to remove chlorides, dirt, and debris. It is very important when rinsing, that water temperature is less than $54.4^{\circ}C$ ($130^{\circ}F$) and pressure is than 100 psig to avoid damaging the fin edges. An elevated water temperature (not to exceed $54.4^{\circ}C$ [$130^{\circ}F$]) will reduce surface tension, increasing the ability to remove chlorides and dirt.



CAUTION

High velocity water from a pressure washer or compressed air should only be used at a very low pressure to prevent fin and/or coil damage. The force of the water or air jet may bend the fin edges and increase airside pressure drop. Reduced unit performance or nuisance unit shutdowns may occur.

Quarterly cleaning is essential to extend the life of an e-coated coil and is required to maintain coating warranty coverage. Coil cleaning shall be part of the unit's regularly scheduled maintenance procedures. Failure to clean an e-coated coil will void the warranty and may result in reduced efficiency and durability.



CAUTION

Harsh chemicals, household bleach, or acid cleaners should not be used to clean outdoor or indoor e-coated coils. These cleaners can be very difficult to rinse out of the coil and can accelerate corrosion and attack the e-coating. If there is dirt below the surface of the coil, use recommended coil cleaners.

For routine quarterly cleaning, first clean the coil with the below approved coil cleaner. After cleaning the coils with the approved cleaning agent, use the approved chloride remover to remove soluble salts and revitalize the unit.

18.5.1. Recommended Coil Cleaner

The following cleaning agent, assuming it is used in accordance with the manufacturer's directions on the container for proper mixing and cleaning, has been approved for use on e-coated coils to remove mold, mildew, dust, soot, greasy residue, lint, and other particulate: Enviro-Coil Concentrate, Part Number H-EC01.

18.5.2. Recommended Chloride Remover

CHLOR*RID DTS™ should be used to remove soluble salts from the e-coated coil, but the directions must be followed closely. This product is not intended for use as a degreaser. Any grease or oil film should first be removed with the approved cleaning agent.

Remove Barrier - Soluble salts adhere themselves to the substrate. For the effective use of this product, the product must be able

to come in contact with the salts. These salts may be beneath any soils, grease or dirt; therefore, these barriers must be removed prior to application of this product. As in all surface preparation, the best work yields the best results.

Apply CHLOR*RID DTS - Apply directly onto the substrate. Sufficient product must be applied uniformly across the substrate to thoroughly wet out surface, with no areas missed. This may be accomplished by using a pump-up sprayer or conventional spray gun. The method does not matter, as long as the entire area to be cleaned is wet. After the substrate has been thoroughly wetted, the salt will be soluble and is now only necessary to rinse them off.

Rinse - It is highly recommended that a hose be used, as a pressure washer will damage the fins. The water to be used for the rinse is recommended to be of potable quality, though a lesser quality of water may be used if a small amount of CHLOR*RID DTS is added. Check with CHLOR*RID International, Inc. for recommendations on lesser quality rinse water.

18.6. Electric Heating

Set thermostat in the heat mode; call for heat to engage all electric heat strips. Check blower for proper rotation and voltage. Measure the amperage and voltage. Compare them to the nameplate data.

If applicable, check remote heat pump condenser as per the manufacturer's recommendations.



CAUTION

Prior to performing work that can result in release of a flammable refrigerant, inspect area to ensure it is free of any potential ignition sources. "No Smoking" signs are to be displayed while performing work.

18.7. Steam or Hot Water Heating

Set thermostat in the heat mode. Observe supply blower for proper rotation and voltage. Check boiler or hot water operation according to the manufacturer's instructions. Check control flow valves for correct operation and settings per the manufacturer's instructions.

18.8. Cleaning

Inspect and clean unit interior at the beginning of each heating and cooling season and as operating conditions require.

18.9. Chilled Water

Check remote chiller operations as per the manufacturer's instructions. Check coolant flow valves for correct operation and settings

Table 23: Min and Max Water Pressures and Temps

	Chilled Water	Hot Water
Min. Entering Air	15.6°C (60°F)	4.4 °C (40°F)
Max Entering Air	37.8°C (100°F)	26.7°C (80°F)
Min. Entering Water	1.7°C (35°F)	60°C (140°F)
Max Entering Water	18.3°C (65°F)	93.3°C (200°F)
Min. Water Pressure	0 kpa (15 psig)	
Max Water Pressure	2068kpa (300 psig)	

18.10. DX Water Source Cooling

Set unit controls to cooling mode of operation with supply fans on. Check the fan for correct operating direction, amperage, and voltage. Check compressor operation, rotation, amperage, and voltage to the unit nameplate (check the amperage on the load side of the compressor contactor).

18.11. Refrigerant Removal and Evacuation

If removal of refrigerant is required for any maintenance or service, conventional procedures must be used and removal of refrigerant must be in accordance with local and national regulations.

Safety precautions must be taken prior to beginning work to ensure that the risk of fire due to flammable refrigerants is minimized. Do not use any sources of ignition in a manner that can lead to fire or explosion when working near exposed refrigerant piping. Work is to be undertaken under a controlled procedure to reduce the amount of refrigerant vapor present while work is being performed. All maintenance staff and others working in the area are to be instructed on the nature of work being performed. Care should be taken to ensure that working in a confined space is avoided.

Check area with a refrigerant detector suitable for use with the refrigerant prior to and during work in order to be aware of potential flammable environment. Keep a dry powder or CO2 fire extinguisher nearby if any hot work is being performed.

Ensure that work area is sufficiently ventilated before breaking into the system. Ventilation must continue throughout all of the work. Ensure that ventilation safely removes flammable refrigerant to an area that will adequately disperse refrigerant to avoid concentration above flammable levels.

Refrigerant must be recovered into the correct recovery cylinders in accordance with local and national regulations. Recovery cylinders must be labeled properly. Ensure that the correct number of cylinders are available for holding the entire charge of the system. Cylinders must have pressure relief and shut-off valves that are in proper working order. Fully evacuate an recovery cylinder before use.

The recovery equipment must be in good working order with a set of instructions concerning the equipment that is at hand. Ensure that equipment is suitable for the recovery of flammable refrigerant used. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales must be available and in good working order. Ensure hoses are complete with leak-free disconnect couplings and in good condition.

When removing refrigerant in order to open system, evacuate system and flush or purge the system continuously with an inert gas when using a flame to open the circuit.

The system must be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerant. Compressed air or oxygen must not be used. When pulling a vacuum, ensure that the outlet of the vacuum pump is not near any potential ignition source and in a well-ventilated area.

The recovered refrigerant is to be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. Do not heat the compressor body by using an open flame or

other ignition sources to accelerate this process. Remove any drained oil safely.

18.12. Condensate Drain Pans

Drain pans will have moisture present and require periodic cleaning to prevent microbial growth. Cleaning of the drain pans will also prevent any possible plugging of the drain lines and overflow of the pan itself. Cleaning of the drain pans and inside of the unit should be done only by a qualified service technician.

18.13. Lubrication

Most motors and bearings are permanently lubricated. Some applications may require that bearings be re-lubricated periodically. The schedule will depend on the operating duty, temperature variations, and other atmospheric conditions.

For bearings equipped with lubrication fittings, the lubrication schedule is dependent on operating temperatures and rotational speeds as shown in the table below. Lithium based grease conforming to an NLGI grade No. 2 consistency is recommended. This medium viscosity, low torque grease is rust inhibiting and water-resistant. It is satisfactory for operating temperatures in the range of -23.3 – 121.1°C (-10 F to 250 F).

Bearings should only be re-lubricated when at normal operating temperatures and not running. Rotate the fan shaft by hand, adding only enough grease to purge the seals. A one-inch bearing has a total grease capacity of only .25 ounces. Added grease should be limited to .09 ounces.

Note: Do Not Over Lubricate. The recommended greases are:

- Shell Oil - Dolium R
- Chevron Oil - Sri No. 2
- Texaco Inc. - Premium Rb

In the event that the unit is not functioning correctly, and a service company is required, only a company with qualified service technicians experienced in both commercial heating and air conditioning should be permitted to service the systems in order to keep warranties in effect. The service tech may call the factory if assistance is required.

Table 24: Fan Bearing Lubrication Schedule

Fan Speed	Temp °C	Temp. °F	Environ.	Greasing Interval
500 rpm	Up to 65.6	Up to 150	Clean	2 to 6 months
1000 rpm	Up to 99	Up to 210	Clean	2 weeks to 2 months
1500 rpm	Up to 99	Up to 210	Clean	Monthly
Any Speed	Up to 65.6	Up to 150	Dirty	1 week to 1 month
Any Speed	99 – 121.1	210 – 250	Dirty	Weekly

18.14. Phase and Brownout Protection Module

wired according to unit specific wiring diagram included in the control compartment.

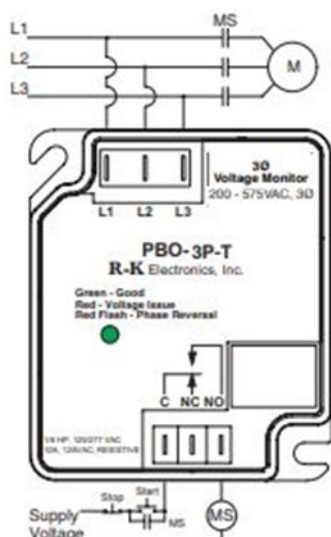


Figure 42: PBO

The PBO-3P-T monitors line voltages from 200VAC to 575VAC 3 Ø. The PBO-3P-T must be

18.15. Replacement Parts

Parts for AAON equipment may be obtained from your local AAON representative. When ordering parts, reference the unit serial number and part number.

18.16. AAON Technical Support

203 Gum Springs Rd.
Longview, TX 75602
Ph: (918) 382-6450
techsupport@AAON.com
www.AAON.com

Note: Before calling, technician should have model and serial number of the unit available for the service department to help answer questions regarding the unit.



18.17. Warranty

Refer to the Limited Warranty Certificate for the unit warranty details. Contact your AAON representative for a unit specific copy of the certificate for your serial number.

Limited Warranty Certificate

GENERAL CONDITIONS
AAON, Inc. (hereinafter referred to as "AAON") warrants this AAON equipment, as identified herein, to be free of defects in material and workmanship under normal use, service, and maintenance. Our obligations under this warranty must be limited to repairing or replacing the defective part, or parts, which in our judgment show evidence of such defects. AAON is not liable for labor charges and other costs incurred for removing, shipping, handling or transporting defective part, or parts, or for shipping, handling, transporting, or installing repaired or replacement part, or parts.

The limited warranty is effective one (1) year from date of original installation, or eighteen (18) months from date of original shipment from the factory, whichever occurs first and covers all parts and components in this AAON equipment excluding air filters, belts, refrigerant moisture driers, and lost refrigerant, which are not included in any part of this limited warranty. The replacement part, or parts, assume only the unused portion of the original limited warranty and are shipped f.o.b. from the factory and freight prepaid by the factory.

The limited warranty is effective for products manufactured at the Tulsa, Oklahoma or Longview, Texas facility.

THIS LIMITED WARRANTY ONLY APPLIES WHEN THE ORIGINAL MODEL NUMBER AND SERIAL NUMBER OF THE AAON UNIT ARE OVENLAP TIME OF REQUEST FOR REPLACEMENT PART, OR PARTS, DEFECTIVE PART, OR PARTS, MUST BE RETURNED PREPAID, WITH ITS ASSIGNED RETURN MATERIAL, TAG, WITHIN FOURTEEN (14) DAYS OF RECEIPT OF THE REPLACEMENT PART, OR PARTS.

EXTENDED LIMITED WARRANTY ON COMPRESSORS INCLUDED IN SINGLE PACKAGE EQUIPMENT NOT INCLUDING CHILLERS OR WHWV; OPTIONAL ON OTHER EQUIPMENT
For the second through the fifth year from date of shipment, we further agree to repair or replace the fully hermetic compressor, at our option, for the original purchaser-user only. The repaired or replacement fully hermetic compressor will be supplied f.o.b. the factory, freight prepaid and add, providing the defective fully hermetic compressor is returned prepaid by the customer, and is proven to be inoperative due to defects in materials or workmanship. This extended limited warranty covers only the fully hermetic compressor and does not include any labor charges, or other additional costs incurred for removing, shipping, handling, transporting, or replacing the defective fully hermetic compressor. It also does not include additional costs incurred for shipping, handling, or transporting of electric controls such as relays, capacitors, pressure controls, or fan-motor assemblies, condensers, receivers, etc. which carry the standard one-year limited warranty.

EXTENDED LIMITED WARRANTY OF WHWV PRODUCTS
The WHWV limited warranty is effective five (5) years from date of original installation. If installation date cannot be verified, limited warranty is effective five (5) years from date of equipment manufacture at the factory. Warranty covers all parts and components, including compressors, in this AAON equipment except those excluded in the general conditions.

EXTENDED LIMITED WARRANTY OF RQ PRODUCTS
The RQ limited warranty is effective two (2) years from date of original shipment from the factory and covers all parts and components in this AAON equipment except those excluded in the general conditions.

FOR OPTIONAL TWO YEAR EXTENDED LIMITED WARRANTY OF RQ PRODUCTS
The limited warranty is effective two (2) years from date of original shipment from the factory and covers all parts and components in this AAON equipment except those excluded in the general conditions.

FOR OPTIONAL FIVE YEAR EXTENDED LIMITED WARRANTY OF RQ OR RQ PRODUCTS
The limited warranty is effective five (5) years from date of original shipment from the factory and covers all parts and components in this AAON equipment except those excluded in the general conditions.

FOR OPTIONAL TEN YEAR EXTENDED LIMITED WARRANTY OF RQ OR RQ PRODUCTS
The limited warranty is effective ten (10) years from date of original shipment from the factory and covers all parts and components in this AAON equipment except those excluded in the general conditions.

FOR OPTIONAL FIVE YEAR EXTENDED LIMITED WARRANTY OF RQ OR RQ ECONOMIZER WITH FAULT DETECTION AND DIAGNOSTICS
For the second through fifth year from date of shipment, we further warrant the economizer charger assembly against failure due to defects in materials and workmanship for the original purchaser-user only.

EXTENDED LIMITED WARRANTY OF GAS FIRED HEAT EXCHANGERS
FOR RQ OR RQ ALUMINIZED STEEL HEAT EXCHANGERS
For the second through the fifth year from date of shipment, we further warrant the steel heat exchanger against failure due to defects in materials and workmanship for the original purchaser-user only.

FOR RQ, RQ, OR RZ STAINLESS STEEL HEAT EXCHANGERS
For the second through the twenty-fifth year from date of shipment, we further warrant the stainless steel heat exchanger against failure due to defects in materials and workmanship for the original purchaser-user only.

FOR RL SERIES HEAT EXCHANGERS
For the second through the tenth year from date of original installation, we further warrant the steel heat exchanger against failure due to defects in materials and workmanship for the original purchaser-user only, in accordance with the following: For the first five (5) years from date of shipment, we agree to repair or replace the heat exchanger, at our option, for the original purchaser-user only; during the sixth year, we will charge 50% of the current trade price for repaired or replacement steel heat exchanger, as the case may be; during the seventh year, 60%; during the eighth year, 70%; during the ninth year, 80%; and during the tenth year, 90%.

In all cases, the repaired or replacement heat exchanger will be supplied f.o.b. our factory, freight prepaid, providing the defective heat exchanger is returned prepaid, and if it is proved to be inoperative due to defects in materials and workmanship. This extended limited warranty covers only the heat exchanger and does not include labor charges, or other costs incurred for removing, shipping, handling, transporting, or installing repaired replacement heat exchanger. This extend limited warranty does not apply where the furnace has been operated in an atmosphere contaminated by chlorine, fluorine, or any other damaging chemical compounds.

FOR OPTIONAL FIVE YEAR EXTENDED LIMITED WARRANTY OF COIL COATING
For the second through fifth year from date of shipment, we further warrant the coating of exposed coils on the equipment against failure due to defects in materials and workmanship for the original purchaser-user only. Coil cleaning, maintenance, and record keeping must be followed according to the unit Installation, Operation and Maintenance Manual to maintain warranty.

1 of 2

Limited Warranty Certificate

OTHER CONDITIONS
This warranty does not cover any AAON unit or part thereof which has been subject to accident, negligence, damages in transit, misuse or abuse, or which has been tampered with or altered in any way, or which has not been installed, operated, serviced and maintained in accordance with our instructions, or which has been installed outside of the Continental United States or Canada, or on which the serial number or identification number has been altered, defaced, or removed. AAON will not be responsible for failure of the unit to start due to voltage conditions, blown fuses, open circuit breakers, or other damages due to the inadequacy or interruption of electric service.

This warranty does not cover equipment containing a water-to-refrigerant heat exchanger for any damage resulting from freezing, fouling, corrosion or clogging.

AAON must not be liable for any default or delay in performance hereunder, caused by a contingency beyond its control, including governmental restrictions or restraint, strikes, short or reduced supply of raw materials or parts, floods, winds, fire, lightning strikes, or any other acts of God.

DISCLAIMERS OF WARRANTIES
THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR OTHER WARRANTY OF QUALITY, WHETHER EXPRESS OR IMPLIED, EXCEPT OF TITLE AND AGAINST PATENT INFRINGEMENT. CORRECTION OF NON-CONFORMITIES ARE LIMITED TO REPAIR OR REPLACEMENT OF THE DEFECTIVE PART OR PARTS. AT SELLERS OPTION, WHICH MUST CONSTITUTE FULFILLMENT OF ALL TORT OR OTHERWISE, IT IS EXPRESSLY UNDERSTOOD THAT AAON MUST NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES. AAON MUST NOT UNDER ANY CIRCUMSTANCES BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, SUCH AS, BUT NOT LIMITED TO DAMAGES OR LOSS OF OTHER PROPERTY OR EQUIPMENT, LOSS OF PROFITS OR REVENUE, COST OF CAPITAL, COST OF PURCHASED OR REPLACEMENT GOODS, OR CLAIMS OF BUYER OR USER FOR SERVICE INTERRUPTIONS. THE REMEDIES OF THE BUYER SET FORTH HEREIN ARE EXCLUSIVE AND THE LIABILITY OF AAON WITH RESPECT TO ANY CONTRACT, OR ANYTHING DONE IN CONNECTION THEREWITH SUCH AS THE PERFORMANCE OR BREACH THEREOF, OR FROM THE MANUFACTURE, SALE, DELIVERY, RESALE, INSTALLATION, OR USE OF ANY GOODS COVERED BY OR FURNISHED UNDER THIS CONTRACT WHETHER ARISING OUT OF CONTRACT, NEGLIGENCE, STRICT TORT, OR UNDER ANY WARRANTY, OR OTHERWISE, MUST NOT EXCEPT AS EXPRESSLY PROVIDED HEREIN, EXCEED THE PRICE OF THE GOODS UPON WHICH SUCH LIABILITY IS BASED.

WITH RESPECT TO THE GOODS SOLD, THE BUYER HEREBY WAIVES ALL LIABILITY ARISING FROM STATUTE, LAW, STRICT LIABILITY IN TORT, OR OTHERWISE, INCLUDING WITHOUT LIMITATION ANY ORIGIN OF AAON WITH RESPECT TO CONSEQUENTIAL OR INCIDENTAL DAMAGES AND WHETHER OR NOT OCCASIONED BY AAON NEGLIGENCE, TIME LIMIT ON COMMENCING LEGAL ACTIONS, AN ACTION FOR BREACH OF THIS CONTRACT FOR GOOD SOLD, OR ANY OTHER ACTION, OTHERWISE ARISING OUT OF THIS CONTRACT, MUST BE COMMENCED WITHIN ONE (1) YEAR FROM THE DATE, THE RIGHT, CLAIM, DEMAND OR CAUSE OF ACTION MUST FIRST OCCUR, OR BE BARRED FOREVER.

SEVERABILITY
IF ANY PROVISION OR CAUSE OF THIS CONTRACT OR APPLICATION THEREOF TO ANY PERSON OR CIRCUMSTANCES IS HELD INVALID OR UNCONSCIONABLE, SUCH INVALIDITY OR UNCONSCIONABILITY MUST NOT AFFECT OTHER PROVISIONS OR APPLICATIONS OF THE CONTRACT WHICH CAN BE GIVEN EFFECT WITHOUT THE INVALID OR UNCONSCIONABLE PROVISIONS OF THE CONTRACT ARE DECLARED BE SEVERABLE.

EQUIPMENT INFORMATION (REQUIRED)

Job Name:	Click or tap here to enter text.	Sales Order Number:	Click or tap here to enter text.	Unit Tag:	Click or tap here to enter text.	Date of Shipment:	Click or tap here to enter text.
Serial Number:	Click or tap here to enter text.	Unit Model Number:	Click or tap here to enter text.				

2 of 2

18.18. Filter Replacement

Monthly air filter inspection is required to maintain optimum unit efficiency. It is strongly recommended that filter media be replaced monthly. Open access panel and pull filters straight out to inspect all of the filters. Replace filters with the size indicated on each filter. Arrow on the replacement filters must point towards the blower.



WARNING

Electric shock hazard. Shut off all electrical power to the unit to avoid shock hazard or injury from rotating parts.

18.19. Decommissioning

Before decommissioning unit, ensure you are familiar with the unit and its operation. Only individuals qualified for handling refrigerant may remove charge from the unit. The unit must be isolated electrically before beginning any decommissioning work. Proper PPE is required.

Ensure any equipment that may be needed for handling refrigerant cylinders safely is available. Equipment and cylinders used for recovery must be in good working order and comply with appropriate standards.

Operate recovery machine in accordance with the instructions. Remove refrigerant from all parts of the refrigeration system. On heat pumps, refrigerant must be recovered from discharge, suction, and common liquid lines.

Weigh out refrigerant when removing to ensure that all refrigerant is removed and cylinders are not overfilled. Place refrigerant cylinder on scales before beginning recovery process. Do not exceed maximum pressure of cylinder.

When recovery is completed, remove all cylinders containing recovered refrigerant from the site. Ensure all isolation valves on equipment are closed and all warning decals are still visible on unit. Label the unit as having been decommissioned and date and sign label.

Table 25: M2-018 Filters

Filter Type	(Quantity) Size
	M2-018
2" Pleated - MERV 8	(8) 20" x 20"
4" Pleated - MERV 8, MERV 11, MERV 13, or MERV 14	
12" Cartridge - MERV 11, MERV 13, or MERV 14	

Table 26: M2-026 Filters

Filter Type	(Quantity) Size
	M2-026
2" Pleated - MERV 8	(4) 16" x 20" (8) 20" x 20"
4" Pleated - MERV 8, MERV 11, MERV 13, or MERV 14	
12" Cartridge - MERV 11, MERV 13, or MERV 14	

Table 27: M2-036 Filters

Filter Type	(Quantity) Size
	M2-036
2" Pleated - MERV 8	(6) 16" x 20" and (9) 20" x 20"
4" Pleated - MERV 8, MERV 11, MERV 13, or MERV 14	
12" Cartridge - MERV 11, MERV 13, or MERV 14	

Table 28: Filter Conversion

Inches	Centimeters
[16 x 20 x 2]	[40.6 x 50.8 x 5.1]
[16 x 20 x 4]	[40.6 x 50.8 x 10.2]
[16 x 20 x 12]	[40.6 x 50.8 x 30.5]
[20 x 20 x 2]	[50.8 x 50.8 x 5.1]
[20 x 20 x 4]	[50.8 x 50.8 x 10.2]
[20 x 20 x 12]	[50.8 x 50.8 x 30.5]

20 x 20	20 x 20	20 x 20	20 x 20
20 x 20	20 x 20	20 x 20	20 x 20

M2-018

16 x 20	16 x 20	16 x 20	16 x 20
20 x 20	20 x 20	20 x 20	20 x 20
20 x 20	20 x 20	20 x 20	20 x 20

M2-026

20 x 20	20 x 20	20 x 20	20 x 16	20 x 16
20 x 20	20 x 20	20 x 20	20 x 16	20 x 16
20 x 20	20 x 20	20 x 20	20 x 16	20 x 16

M2-032 / M2-036

Figure 43: Filter Layout (Viewed from the Upstream Side of the Cooling Coil)

19. APPENDIX A: UNIT SAFETY HIERARCHY

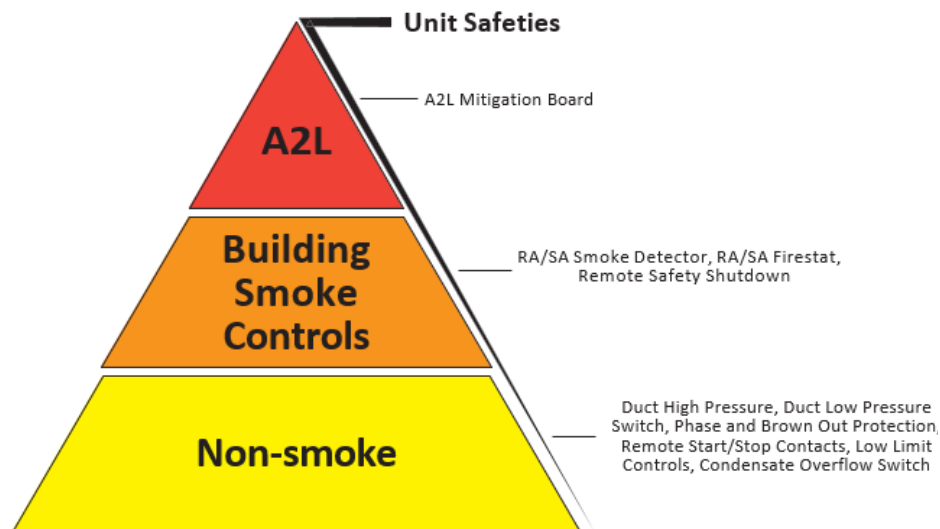


Figure 44: Unit Safety Hierarchy

Default (A2L Priority)

Units will ship with A2L sequences at the highest priority. This may activate the indoor blower in the event of an A2L leak, even if Building Smoke Controls or Non-smoke safeties interrupt the 24V/120V safety circuit. The terminal block labeled 'Hierarchy Control' will control the priority.

The jumper will connect 'Com' and 'A2L' for A2L priority.

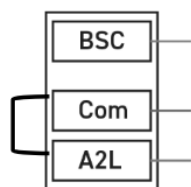


Figure 45: A2L Priority Jumper

Building Smoke Control Priority

Units will have the option to shift the Unit Safety Hierarchy in the field. To shift the priority, turn the power off to the unit and move the jumper to 'Com' and 'BSC' on the 'Hierarchy Control' terminals.

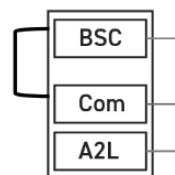


Figure 46: Building Smoke Control Priority Jumper

Example Scenario

If priority is given to Building Smoke Controls, and simultaneously both A2L and any of the Building Smoke Controls goes into alarm, the 24V/120V safety circuit will shut down the unit, and A2L mitigation will not take place.

Locating the "Hierarchy Control" LVTB

Locate the low voltage control section

Identify the 'Hierarchy Control' label by the (3) terminals labeled "BSC", "COM", and "A2L"

20. APPENDIX B: HEAT EXCHANGER CORROSION RESISTANCE

Corrosion Resistance of Copper and Stainless-Steel in Brazed-Plate Heat Exchangers

- - Points to Measure and Check in a Water Analysis

The resistance guide provides the corrosion resistance of stainless-steel type AISI 316 and pure Copper (99.9%) in water, to a number of important chemical factors. The actual corrosion is a very complex process influenced by many different factors in combination.

Explanations:

- (+) Good resistance under normal conditions
- (0) Corrosion problems may occur especially when more factors are valued 0
- (-) Use is not recommended

Table 29: Heat Exchanger Corrosion Resistance

Water Containing	Concentration (mg/l or ppm)	Time Limits - Analyze Before	AISI 316	SMO 254	Copper Alloy	Nickel Alloy
Alkalinity (HCO_3^-)	< 70	Within 24 Hours	+	+	0	+
	70-300		+	+	+	+
	> 300		+	+	0/+	+
Sulfate (SO_4^{2-})	< 70	No Limit	+	+	+	+
	70-300		+	+	0/-	+
	> 300		0	0	-	+
$\text{HCO}_3^- / \text{SO}_4^{2-}$	> 1.0	No Limit	+	+	+	+
	< 1.0		+	+	0/-	+
Electrical Conductivity	< 10 $\mu\text{S}/\text{cm}$	No Limit	+	+	0	+
	10-500 $\mu\text{S}/\text{cm}$		+	+	+	+
	> 500 $\mu\text{S}/\text{cm}$		+	+	0	+
pH	< 6.0	Within 24 Hours	0	0	0	+
	6.0-7.5		0/+	+	0	+
	7.5-9.0		+	+	+	+
	> 9.0		+	+	0	+
Ammonium (NH_4^+)	< 2	Within 24 Hours	+	+	+	+
	2-20		+	+	0	+
	> 20		+	+	-	+
Chlorides (Cl^-)*	< 300	No Limit	+	+	+	+
	> 300		0	+	0/+	+
Free Chlorine (Cl_2)	< 1	Within 5 Hours	+	+	+	+
	1-5		+	+	0	+
	> 5		0/+	+	0/-	+
Hydrogen Sulfide (H_2S)	< 0.05	No Limit	+	+	+	+
	> 0.05		+	+	0/-	+
Free (aggressive) Carbon Dioxide (CO_2)	< 5	No Limit	+	+	+	+
	5-20		+	+	0	+
	> 20		+	+	-	+
Total Hardness ($^\circ\text{dH}$)	4.0-8.5	No Limit	+	+	+	+
Nitrate (NO_3)	< 100	No Limit	+	+	+	+
	> 100		+	+	0	+
Iron (Fe)	< 0.2	No Limit	+	+	+	+
	> 0.2		+	+	0	+
Aluminum (Al)	< 0.2	No Limit	+	+	+	+
	> 0.2		+	+	0	+
Manganese (Mn)	< 0.1	No Limit	+	+	+	+
	> 0.1		+	+	0	+

*See Chloride Content Table

Table 30: Chloride Content

Chloride Content	Maximum Temperature			
	60°C (140°F)	80°C (176°F)	120°C (248°F)	130°C (266°F)
= 10 ppm	SS 304	SS 304	SS 304	SS 316
= 25 ppm	SS 304	SS 304	SS 316	SS 316
= 50 ppm	SS 304	SS 316	SS 316	Ti / SMO 254
= 80 ppm	SS 316	SS 316	SS 316	Ti / SMO 254
= 150 ppm	SS 316	SS 316	Ti / SMO 254	Ti / SMO 254
= 300 ppm	SS 316	Ti / SMO 254	Ti / SMO 254	Ti / SMO 254
> 300 ppm	Ti / SMO 254	Ti / SMO 254	Ti / SMO 254	Ti / SMO 254

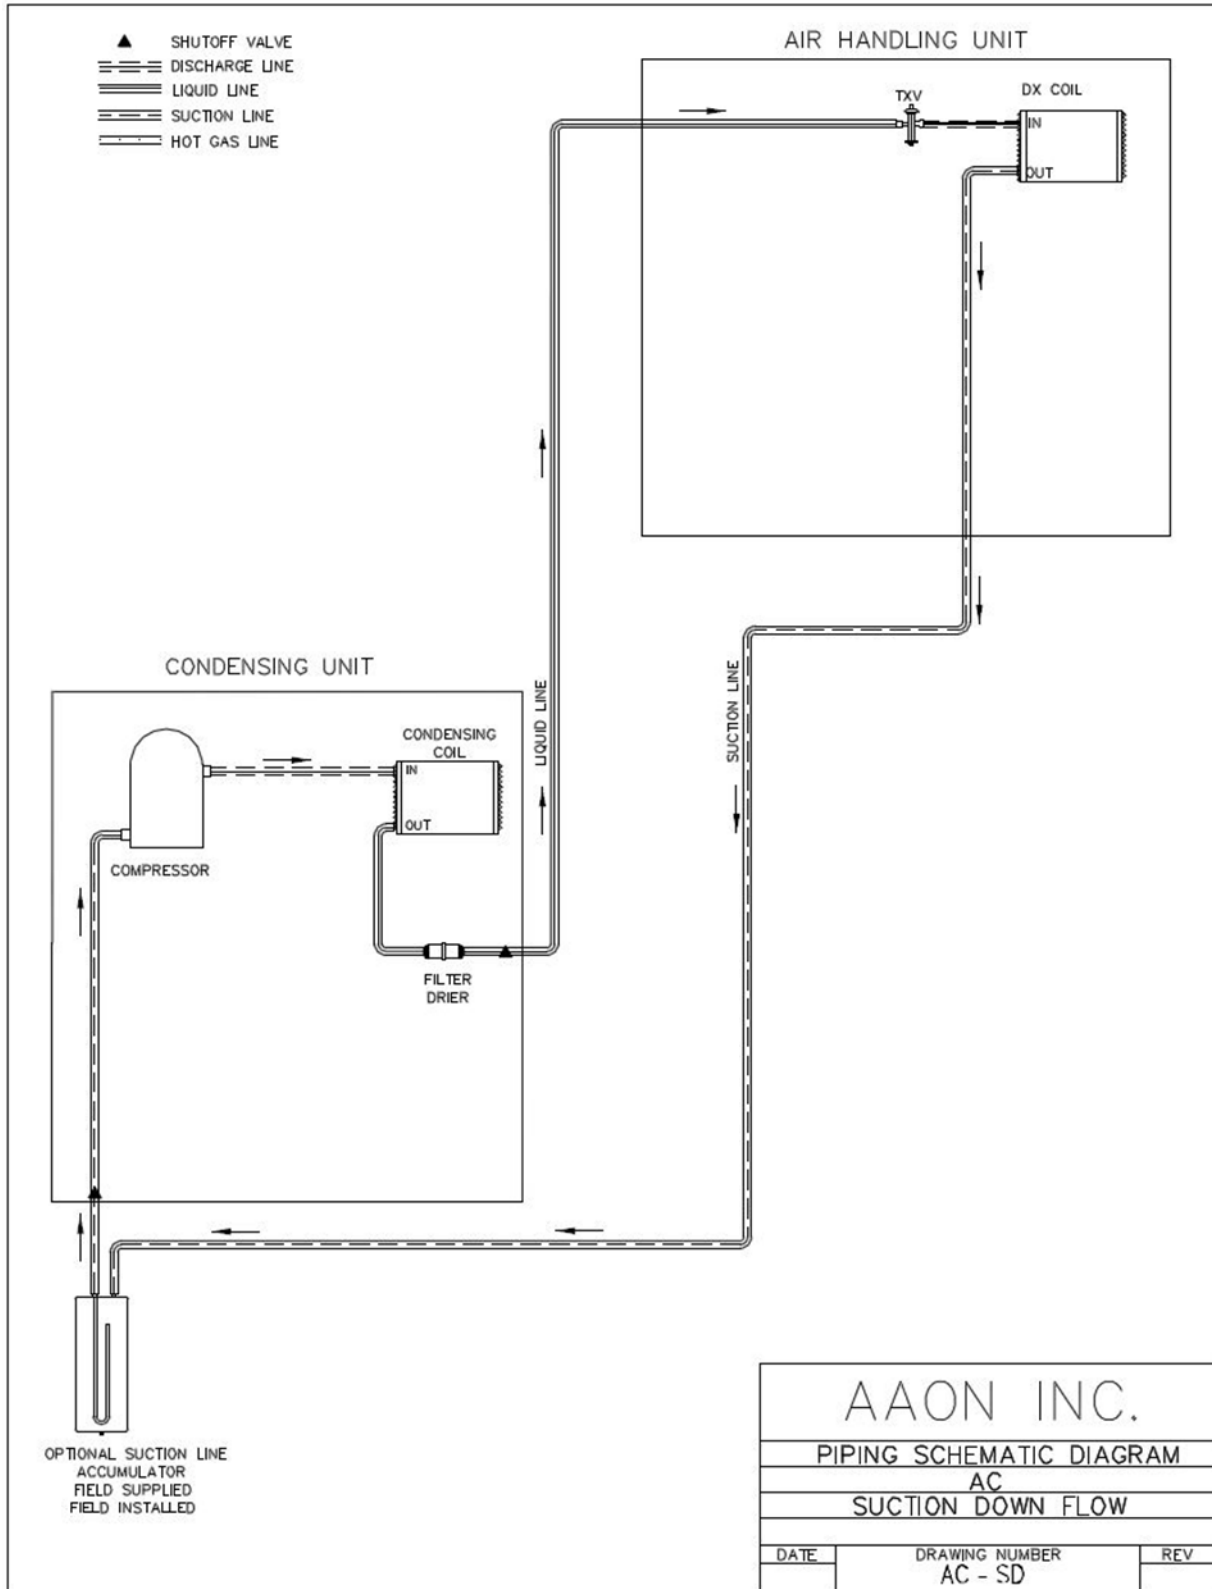


Figure 47: A/C Split System Piping, Suction Down

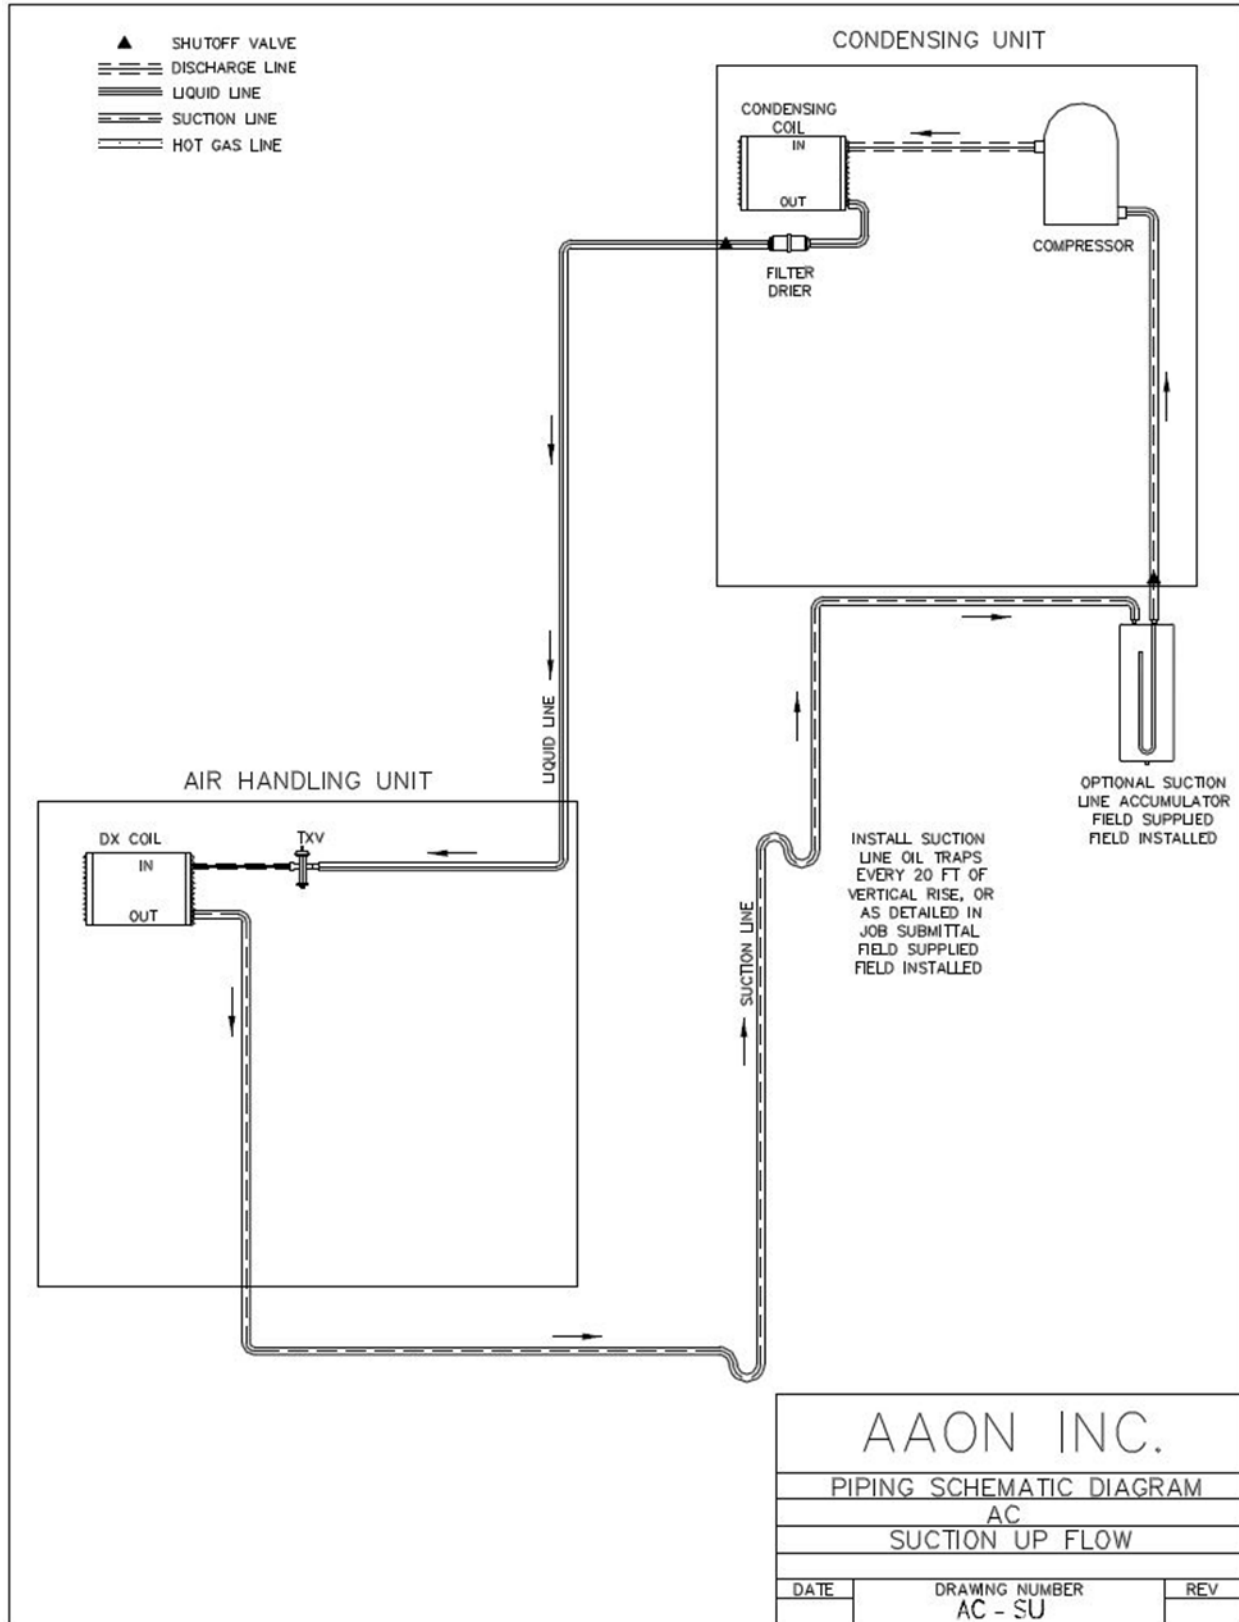


Figure 48: A/C Split System Piping, Suction Up

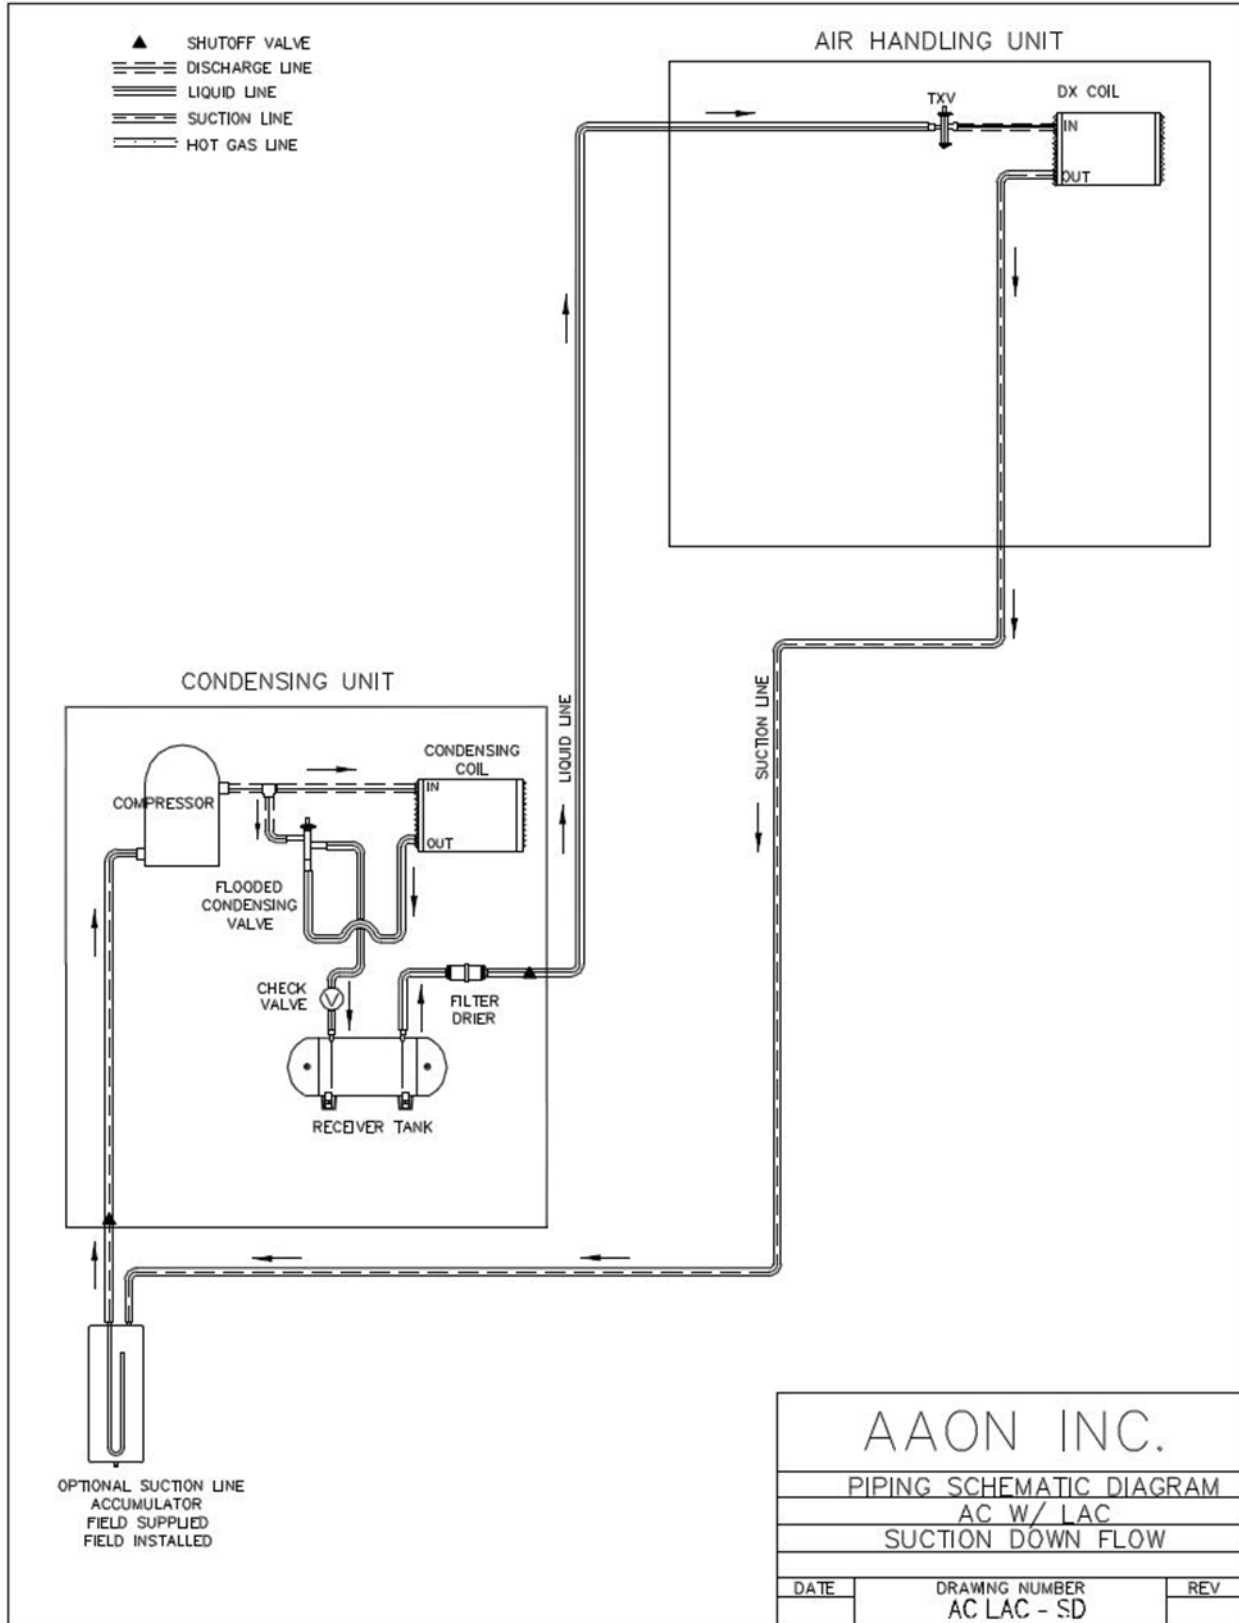


Figure 49: A/C with LAC Split System Piping, Suction Down

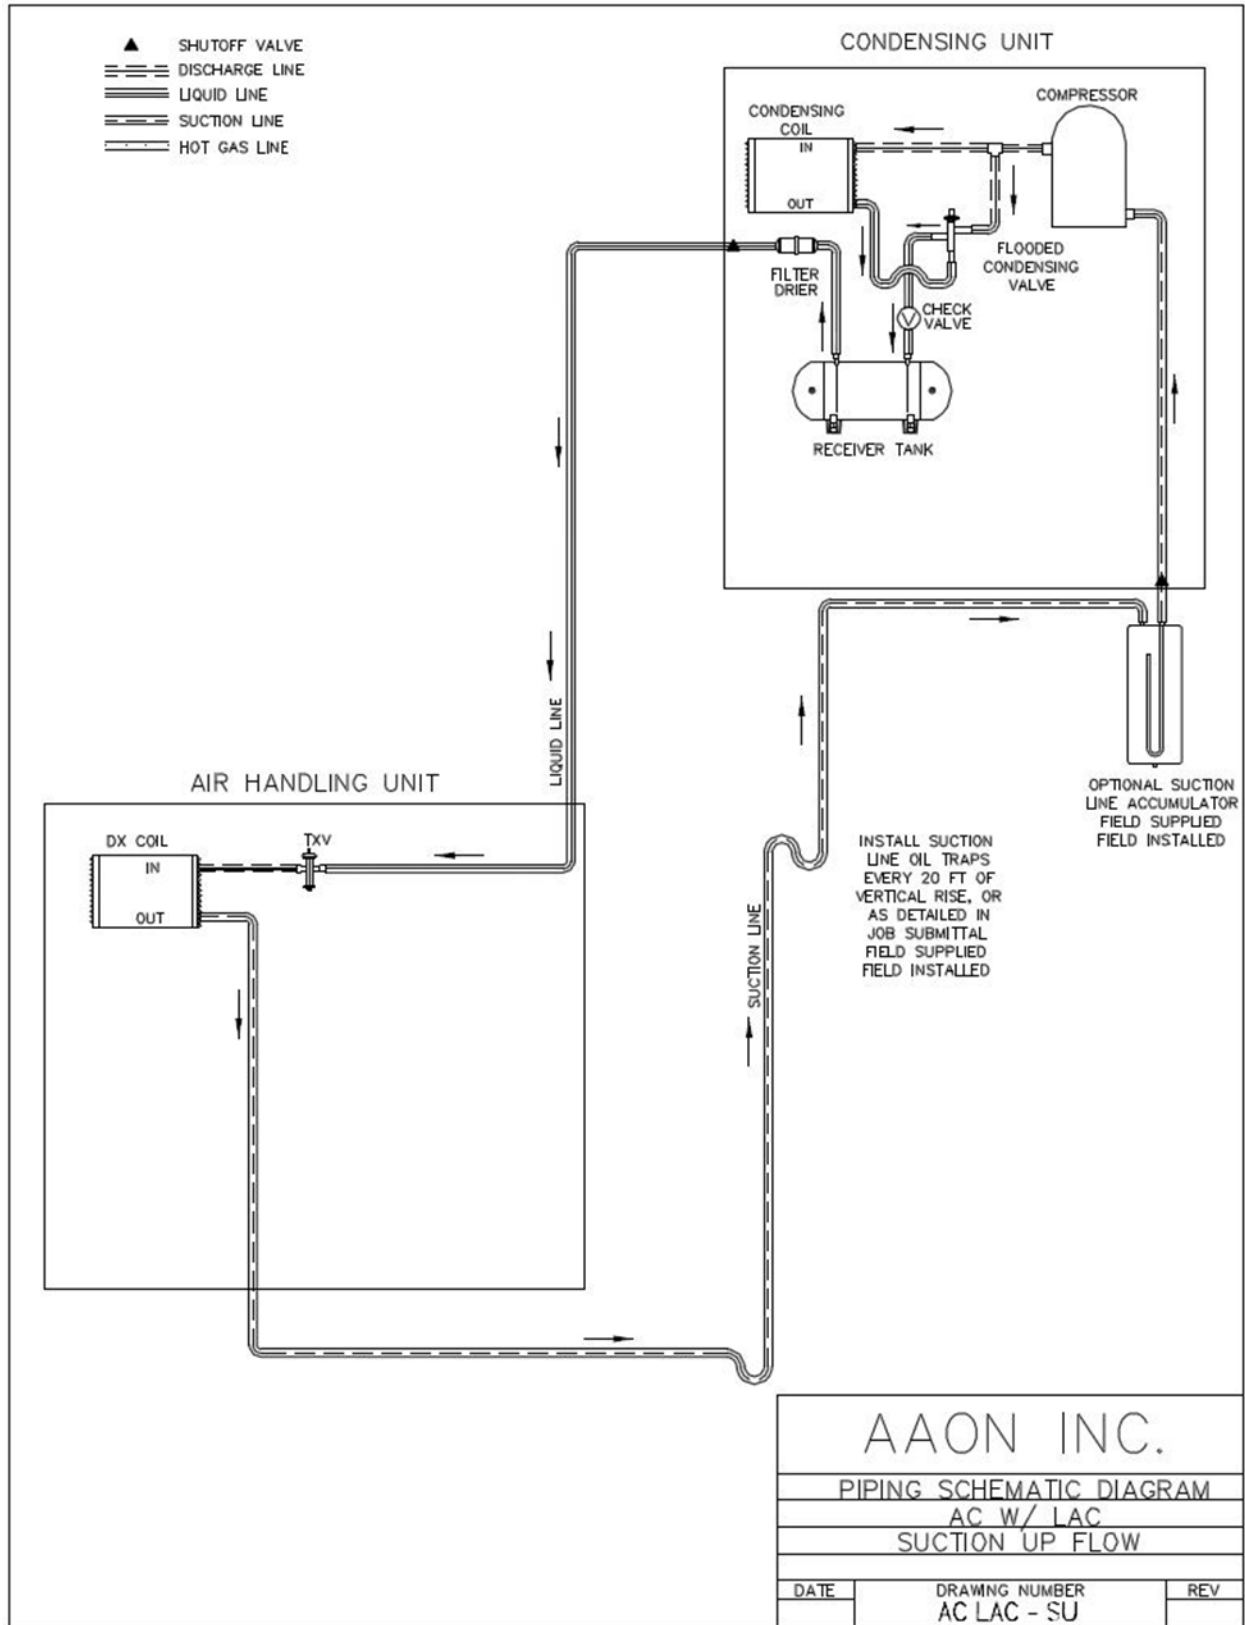


Figure 50: A/C with LAC Split System Piping, Suction Up



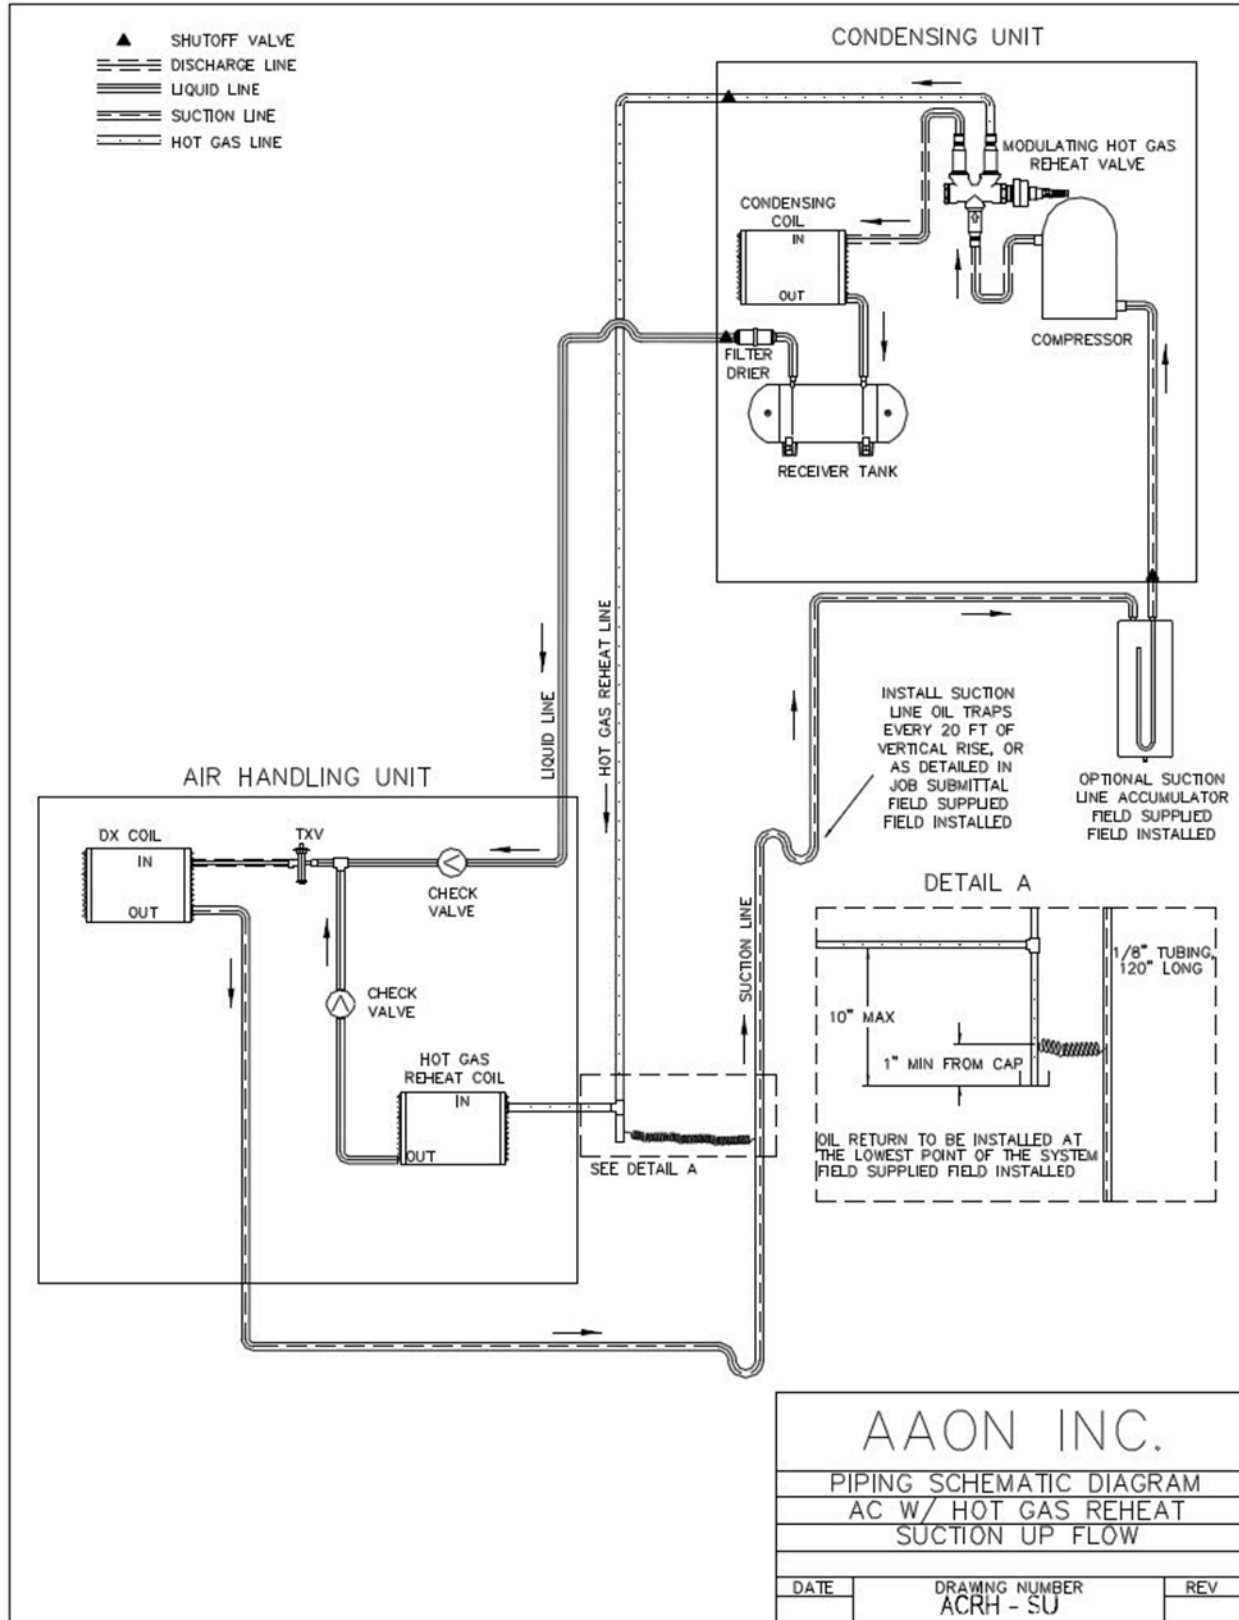


Figure 52: A/C with Modulating Hot Gas Reheat Split System Piping, Suction Up

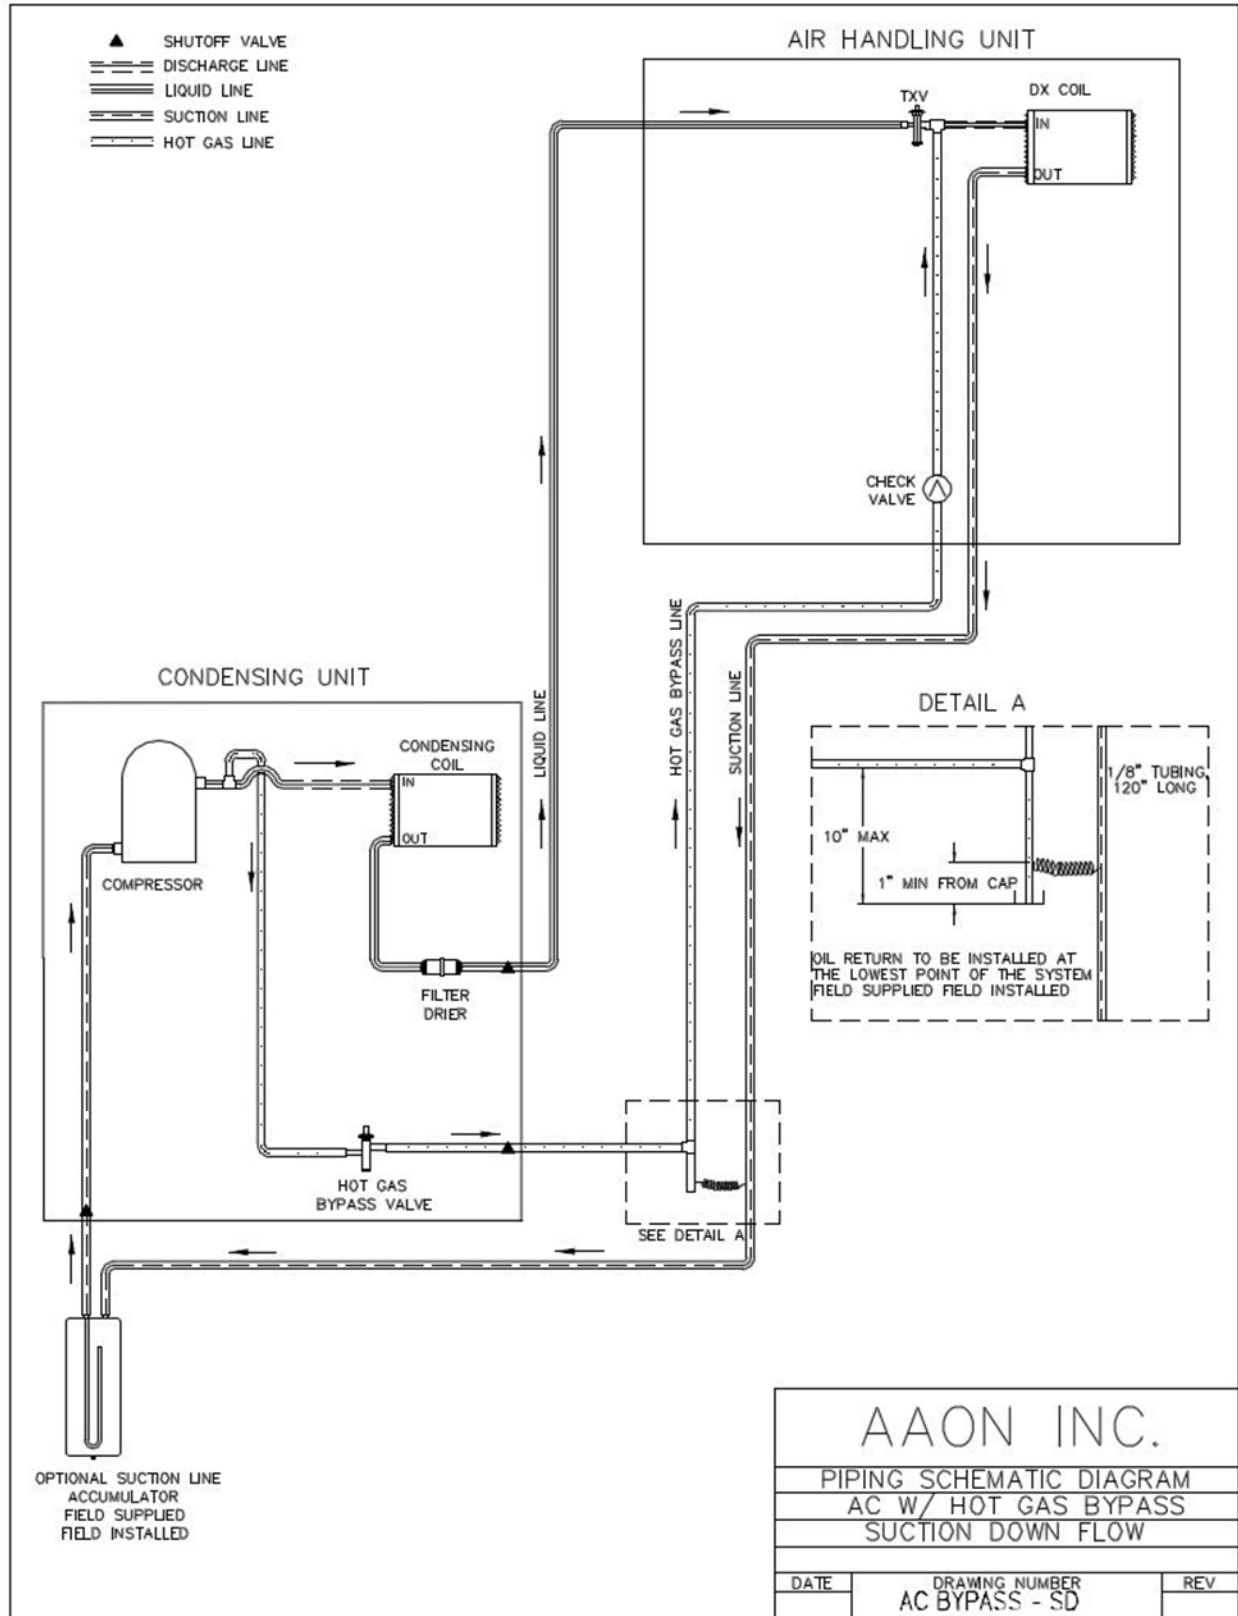


Figure 53: A/C with Hot Gas Bypass Split System Piping, Suction Down

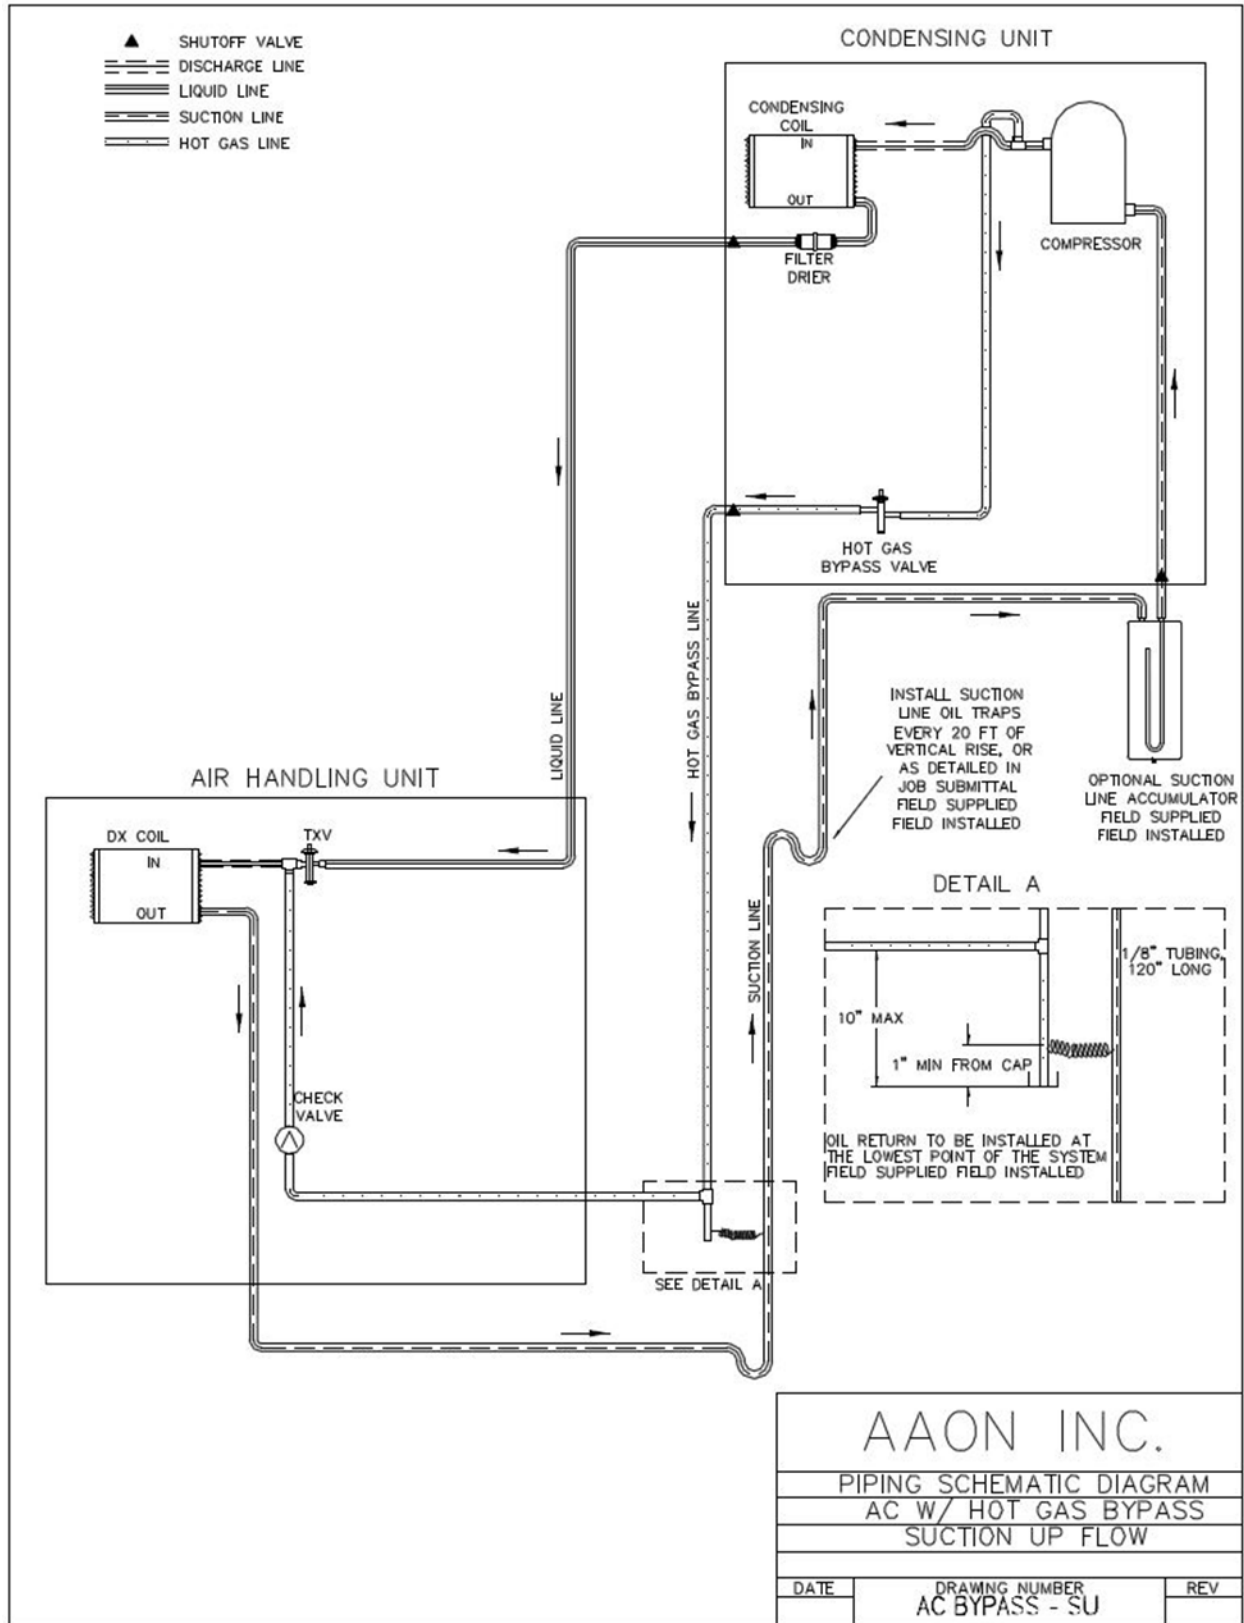


Figure 54: A/C with Hot Gas Bypass Split System Piping, Suction Up

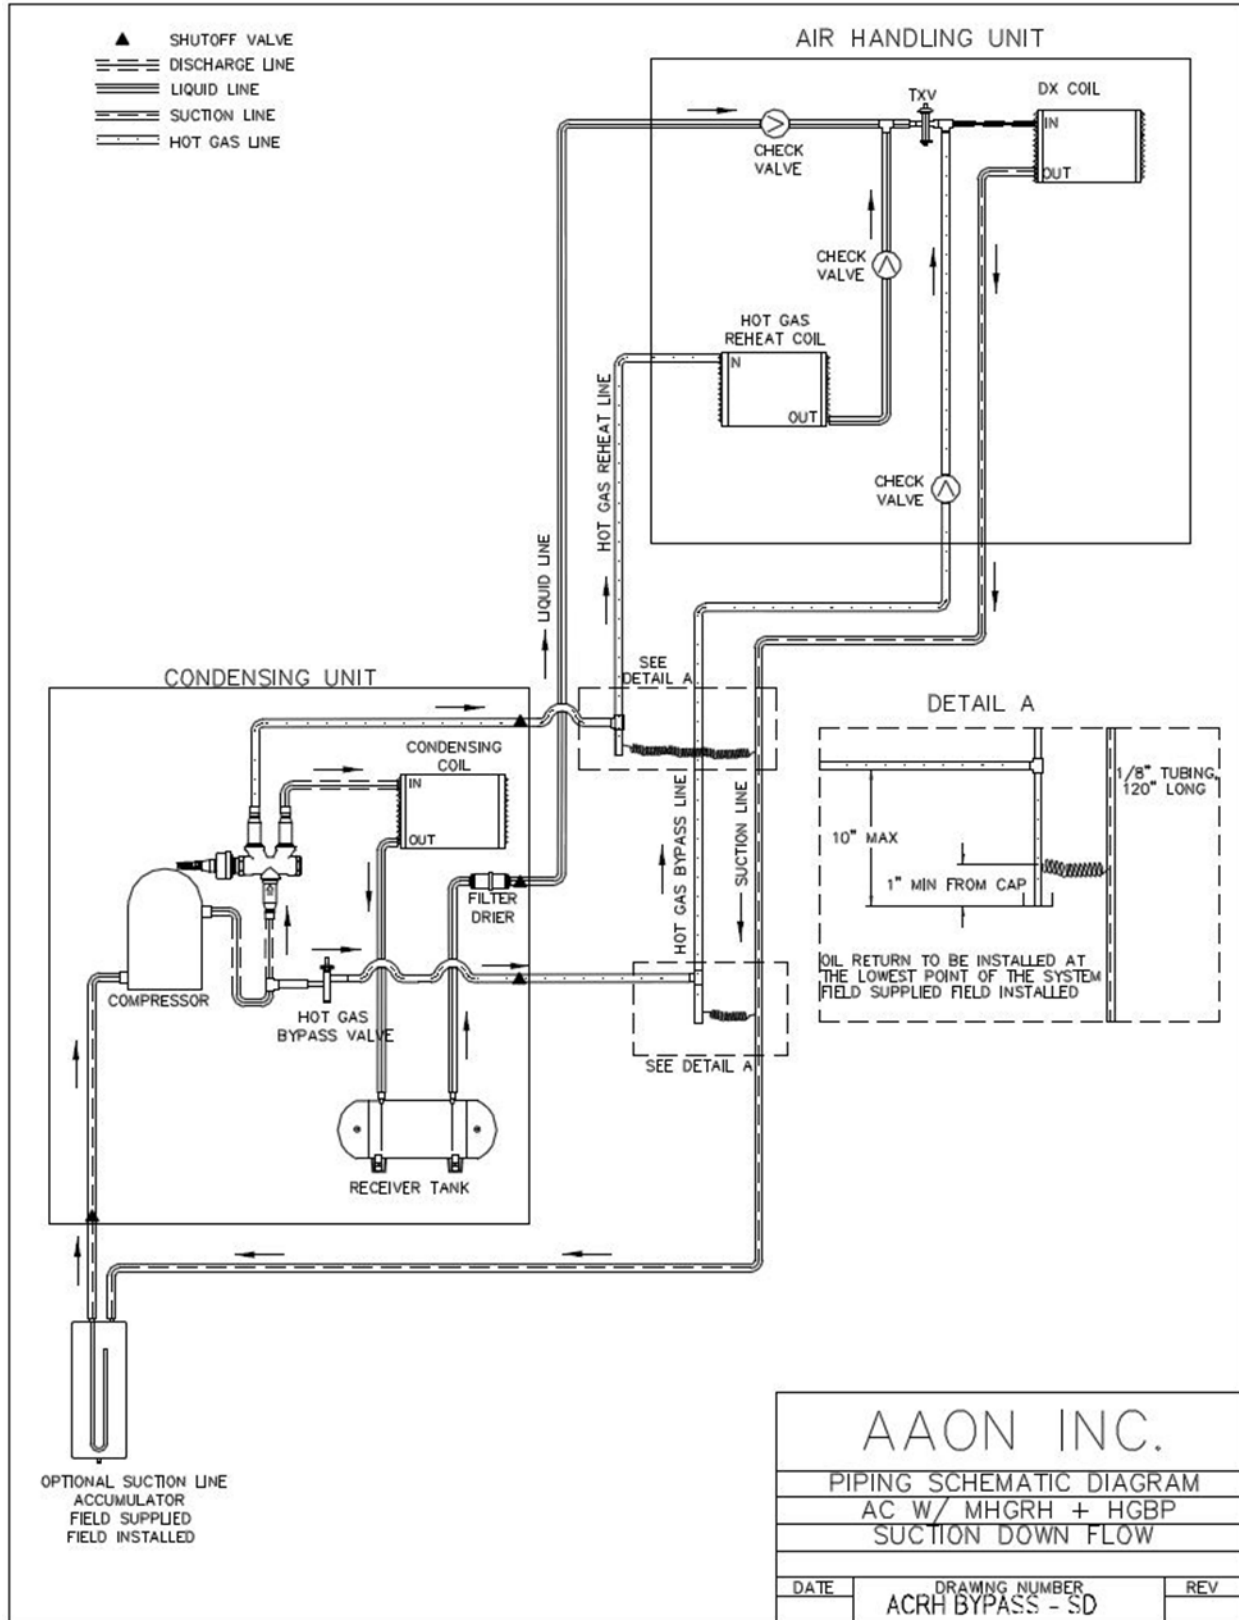


Figure 55: A/C with Modulating Hot Gas Reheat and Hot Gas Bypass Split System Piping, Suction Down

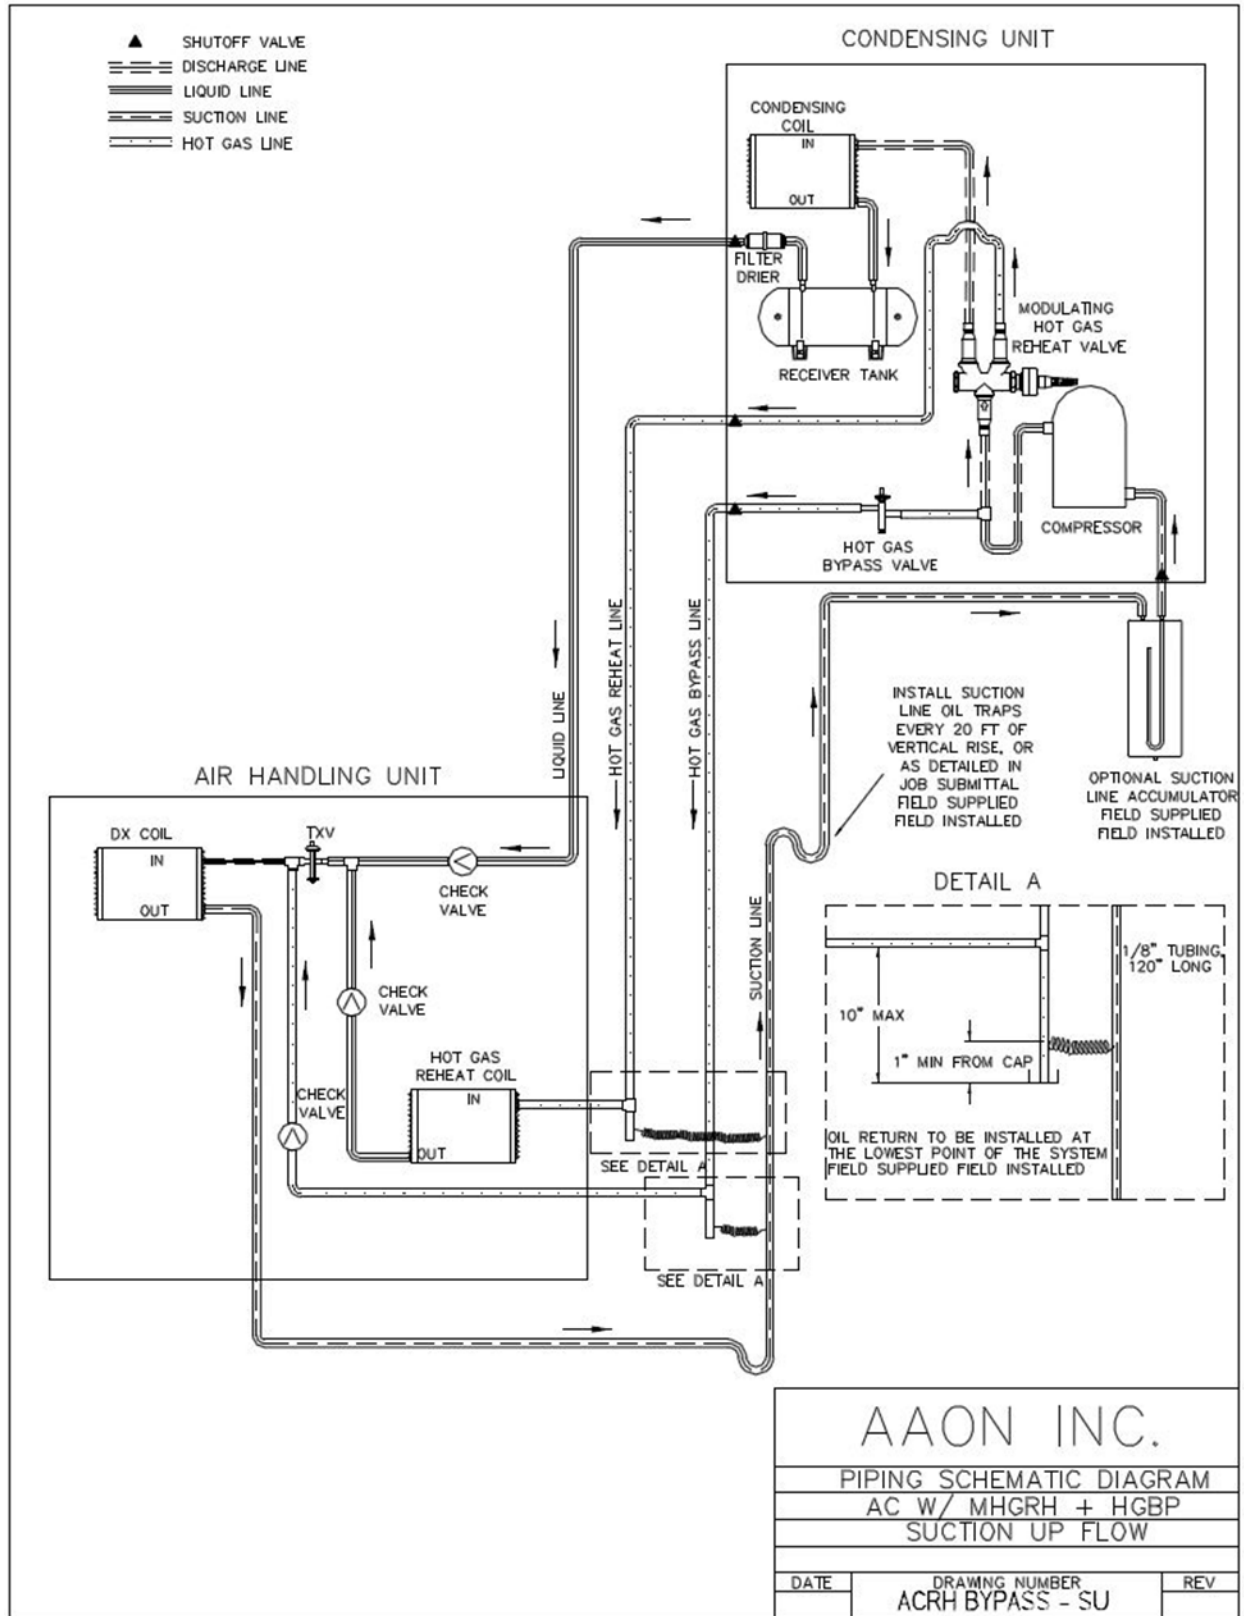


Figure 56: A/C with Modulating Hot Gas Reheat and Hot Gas Bypass Split System Piping, Suction Up

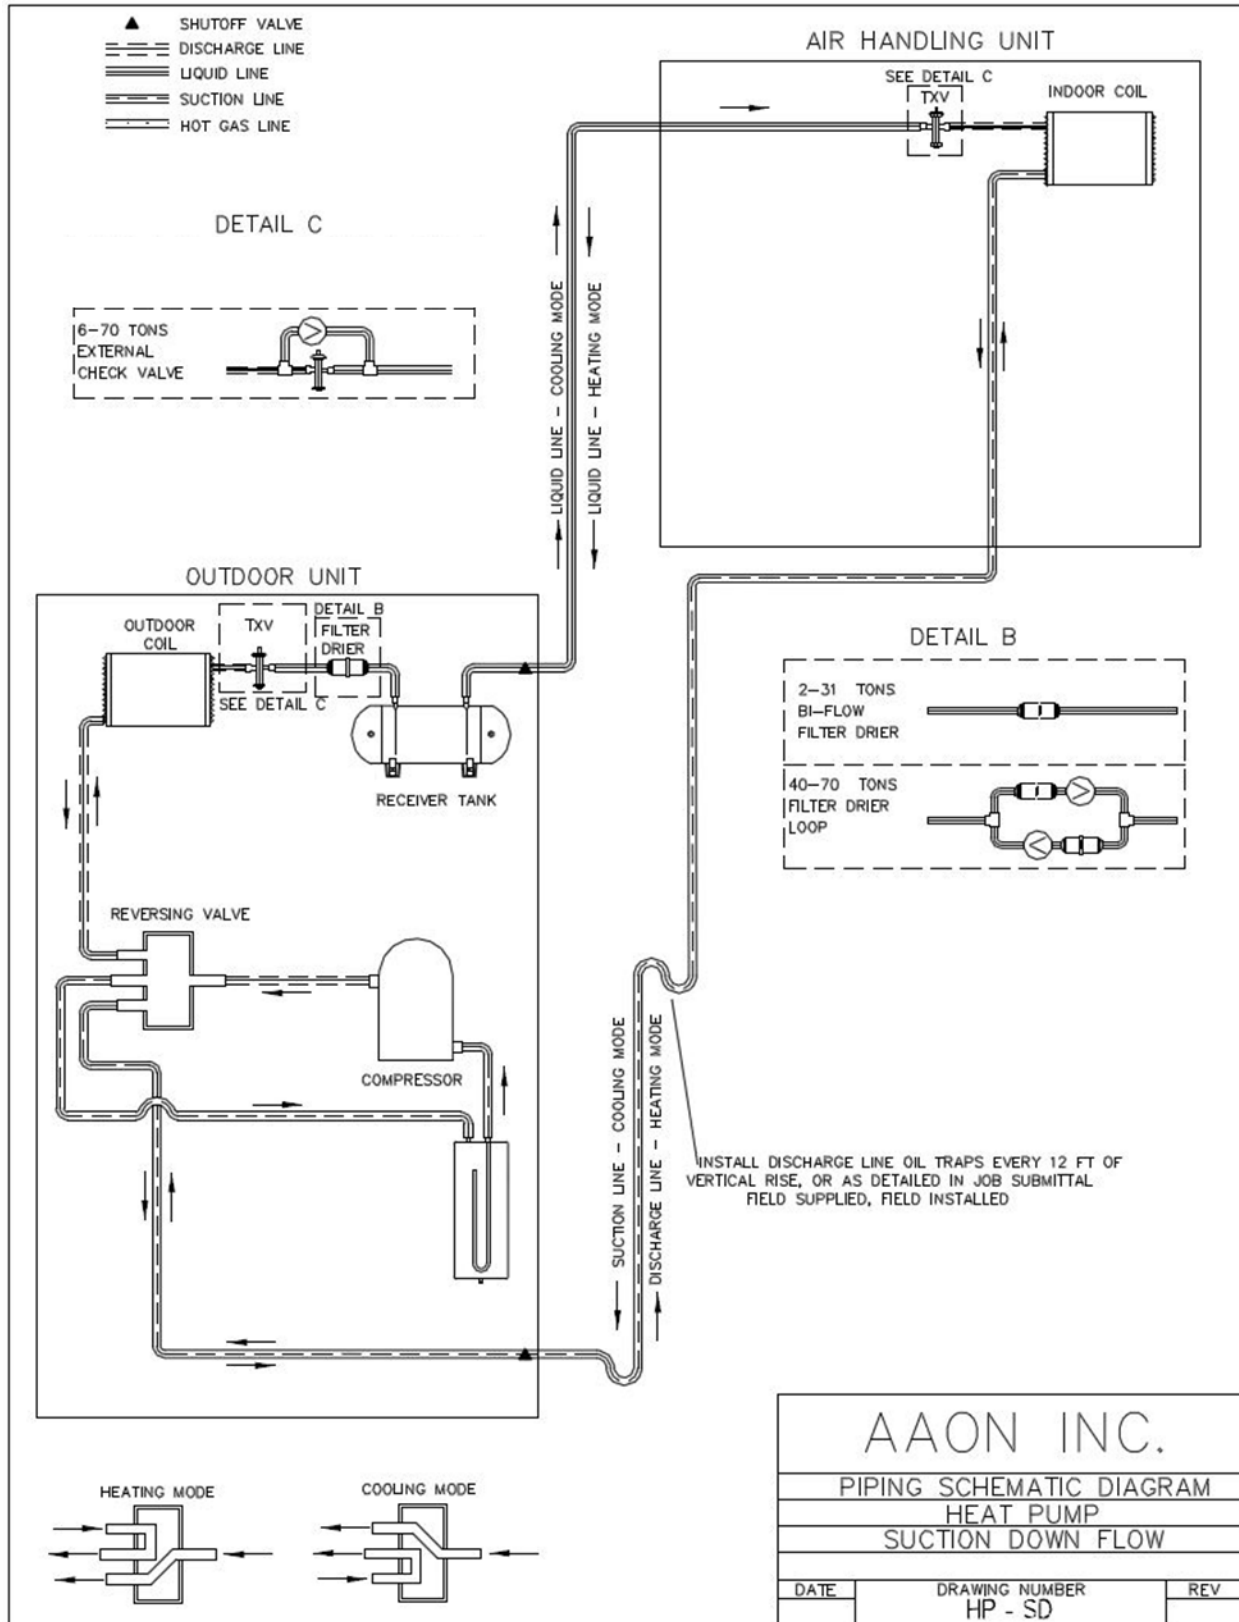


Figure 57: Heat Pump Split System Piping, Suction Down

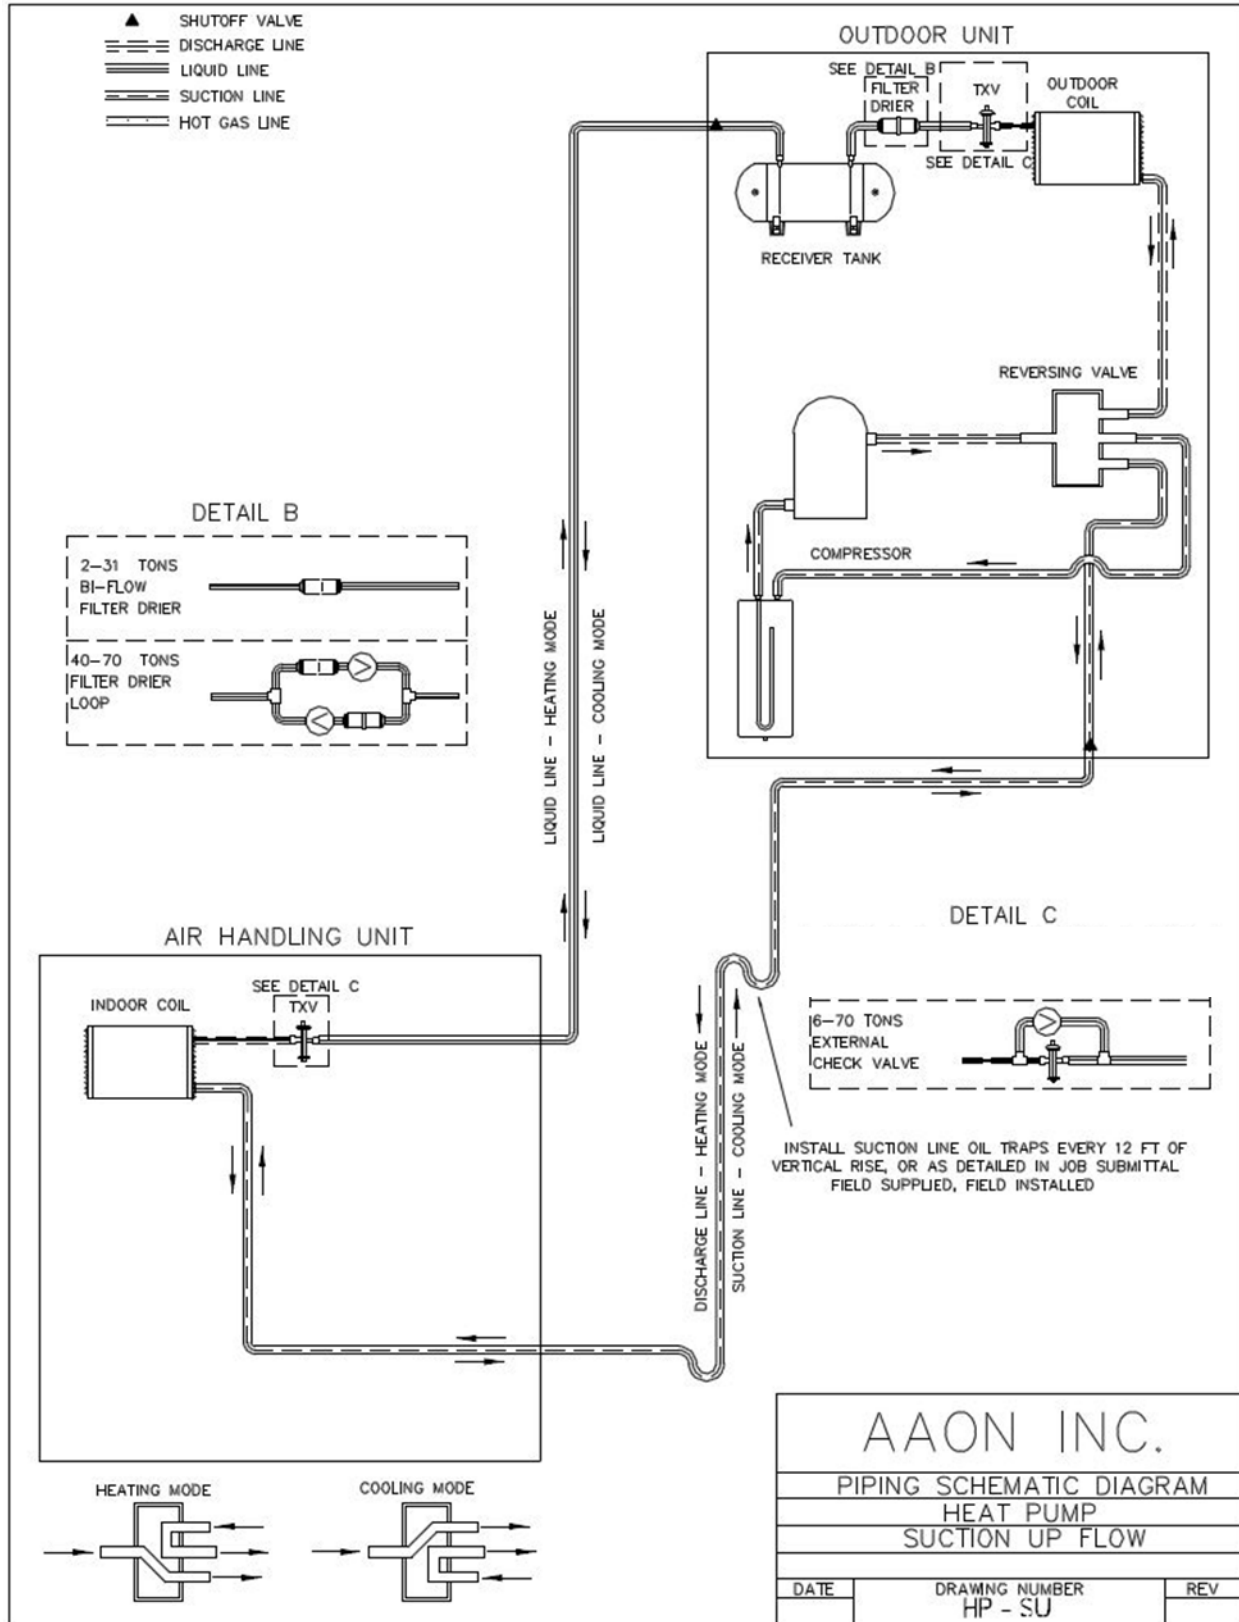


Figure 58: Heat Pump Split System Piping, Suction Up

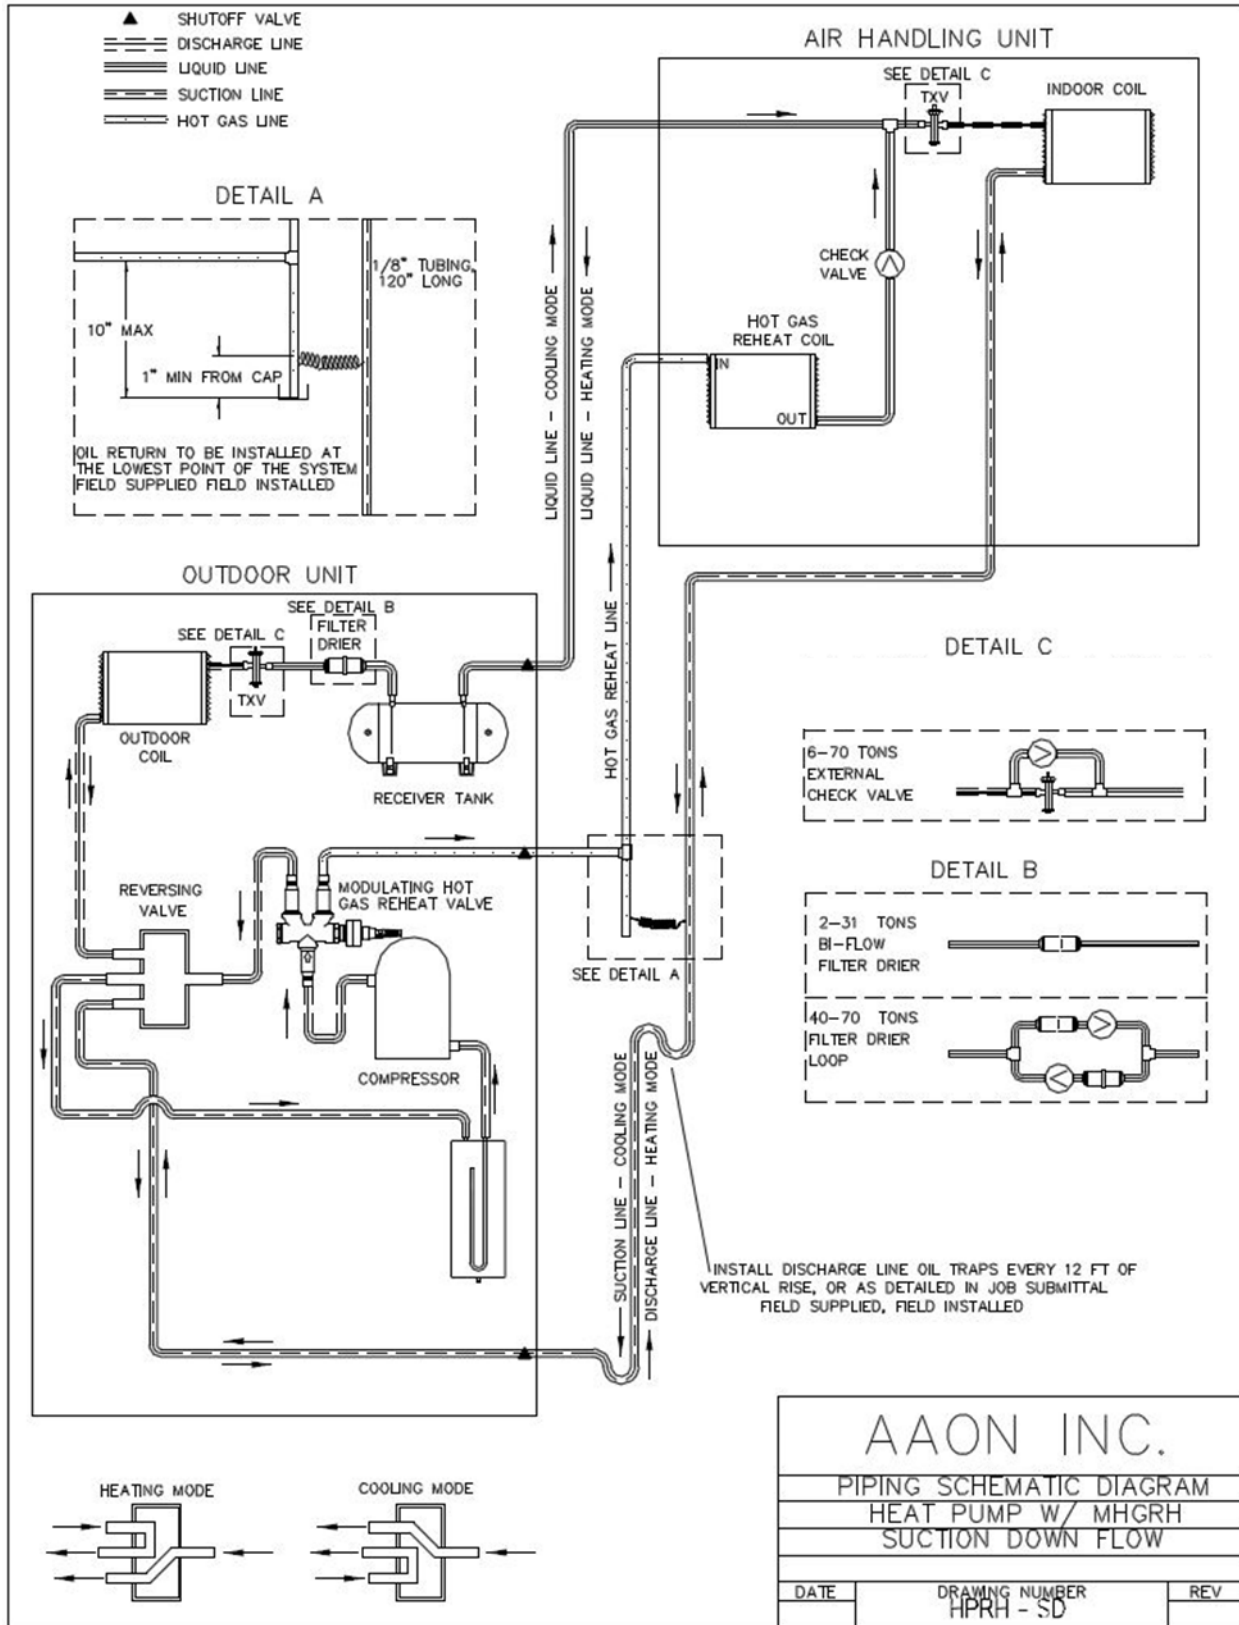


Figure 59: Heat Pump with Modulating Hot Gas Reheat Split System Piping, Suction Down

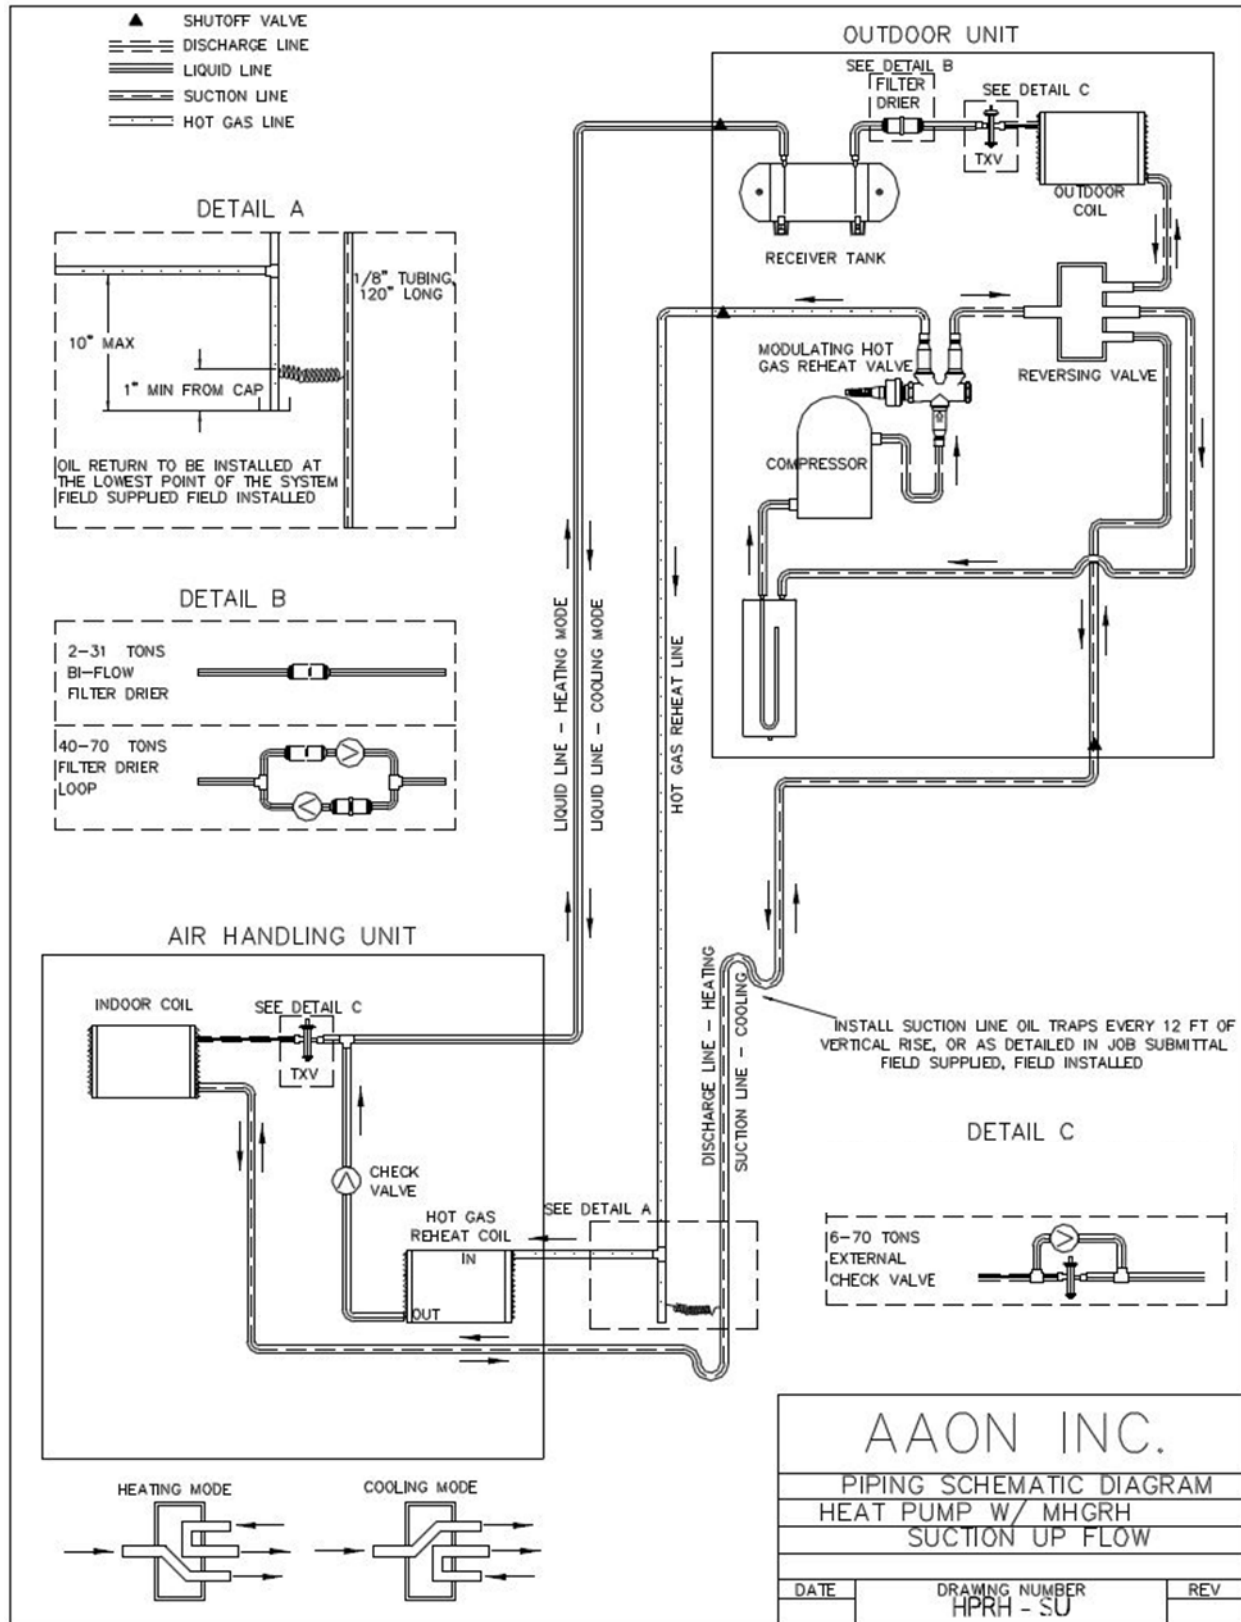


Figure 60: Heat Pump with Modulating Hot Gas Reheat Split System Piping, Suction Up

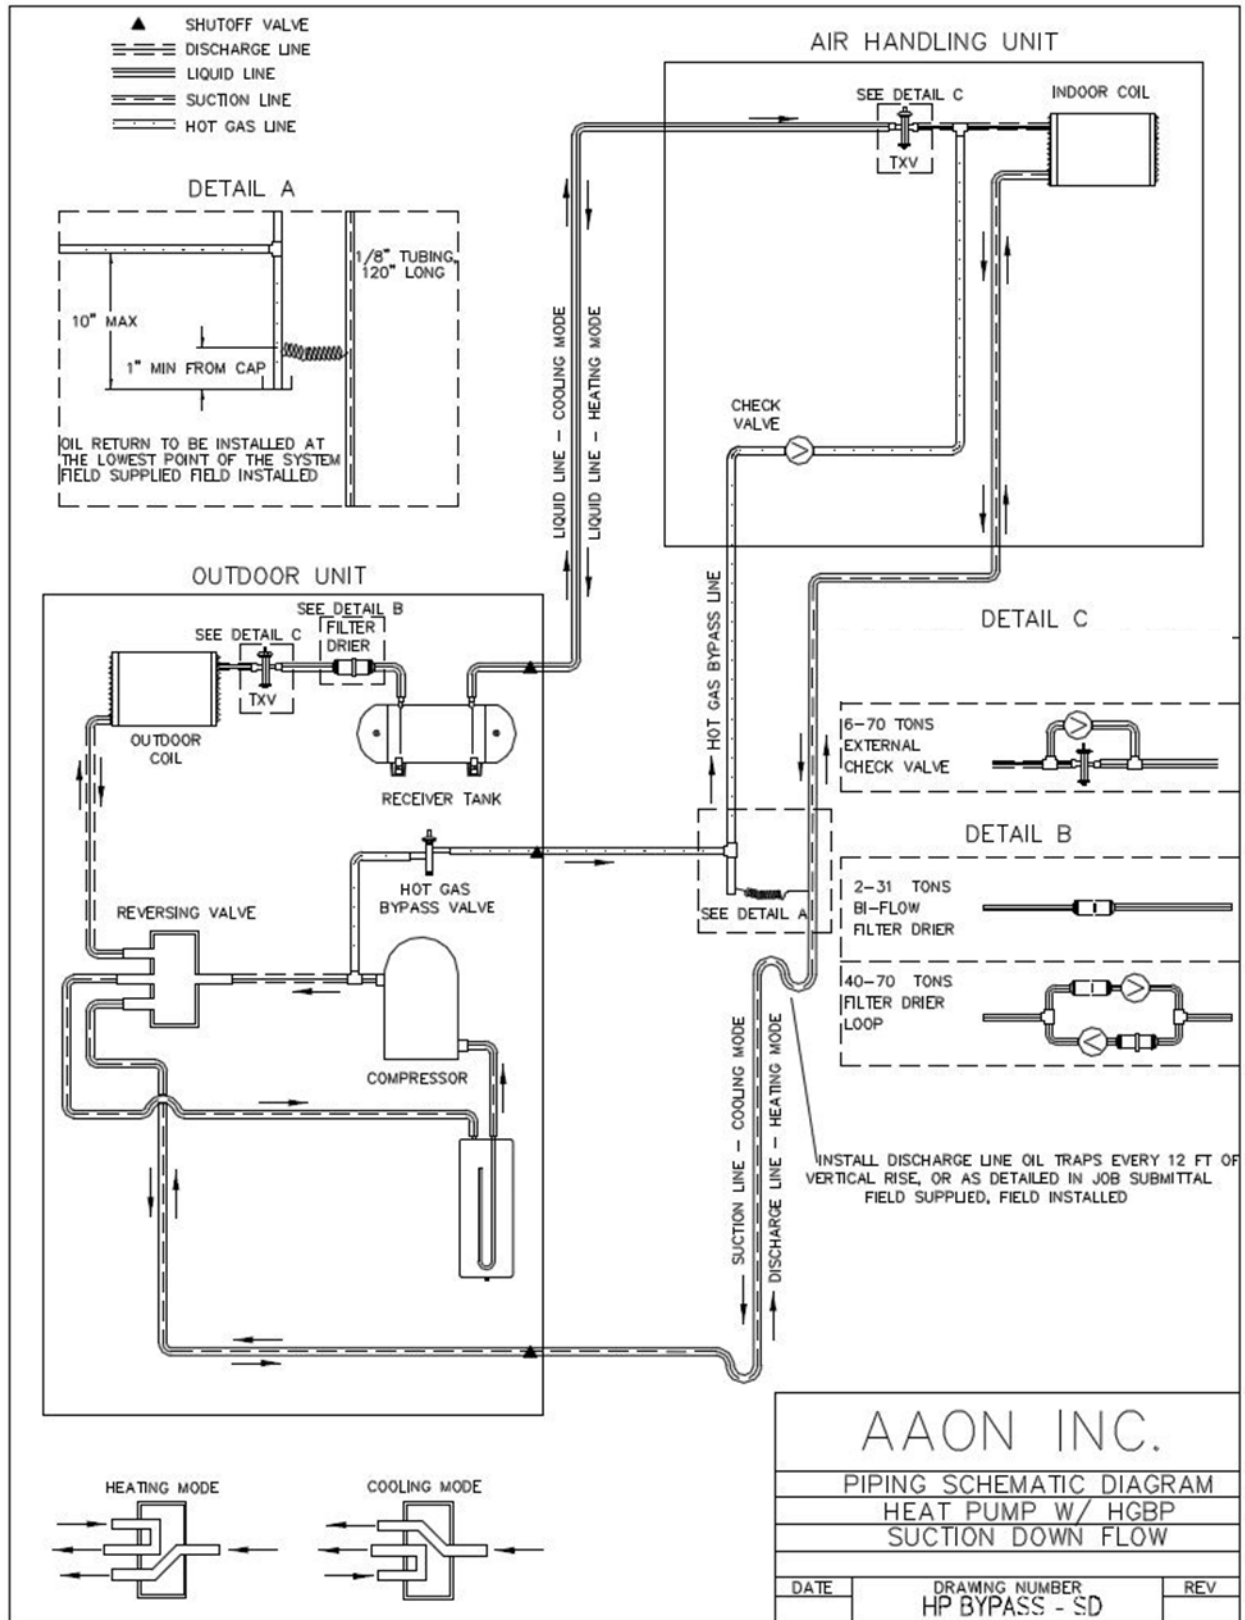


Figure 61: Heat Pump with Hot Gas Bypass Split System Piping, Suction Down

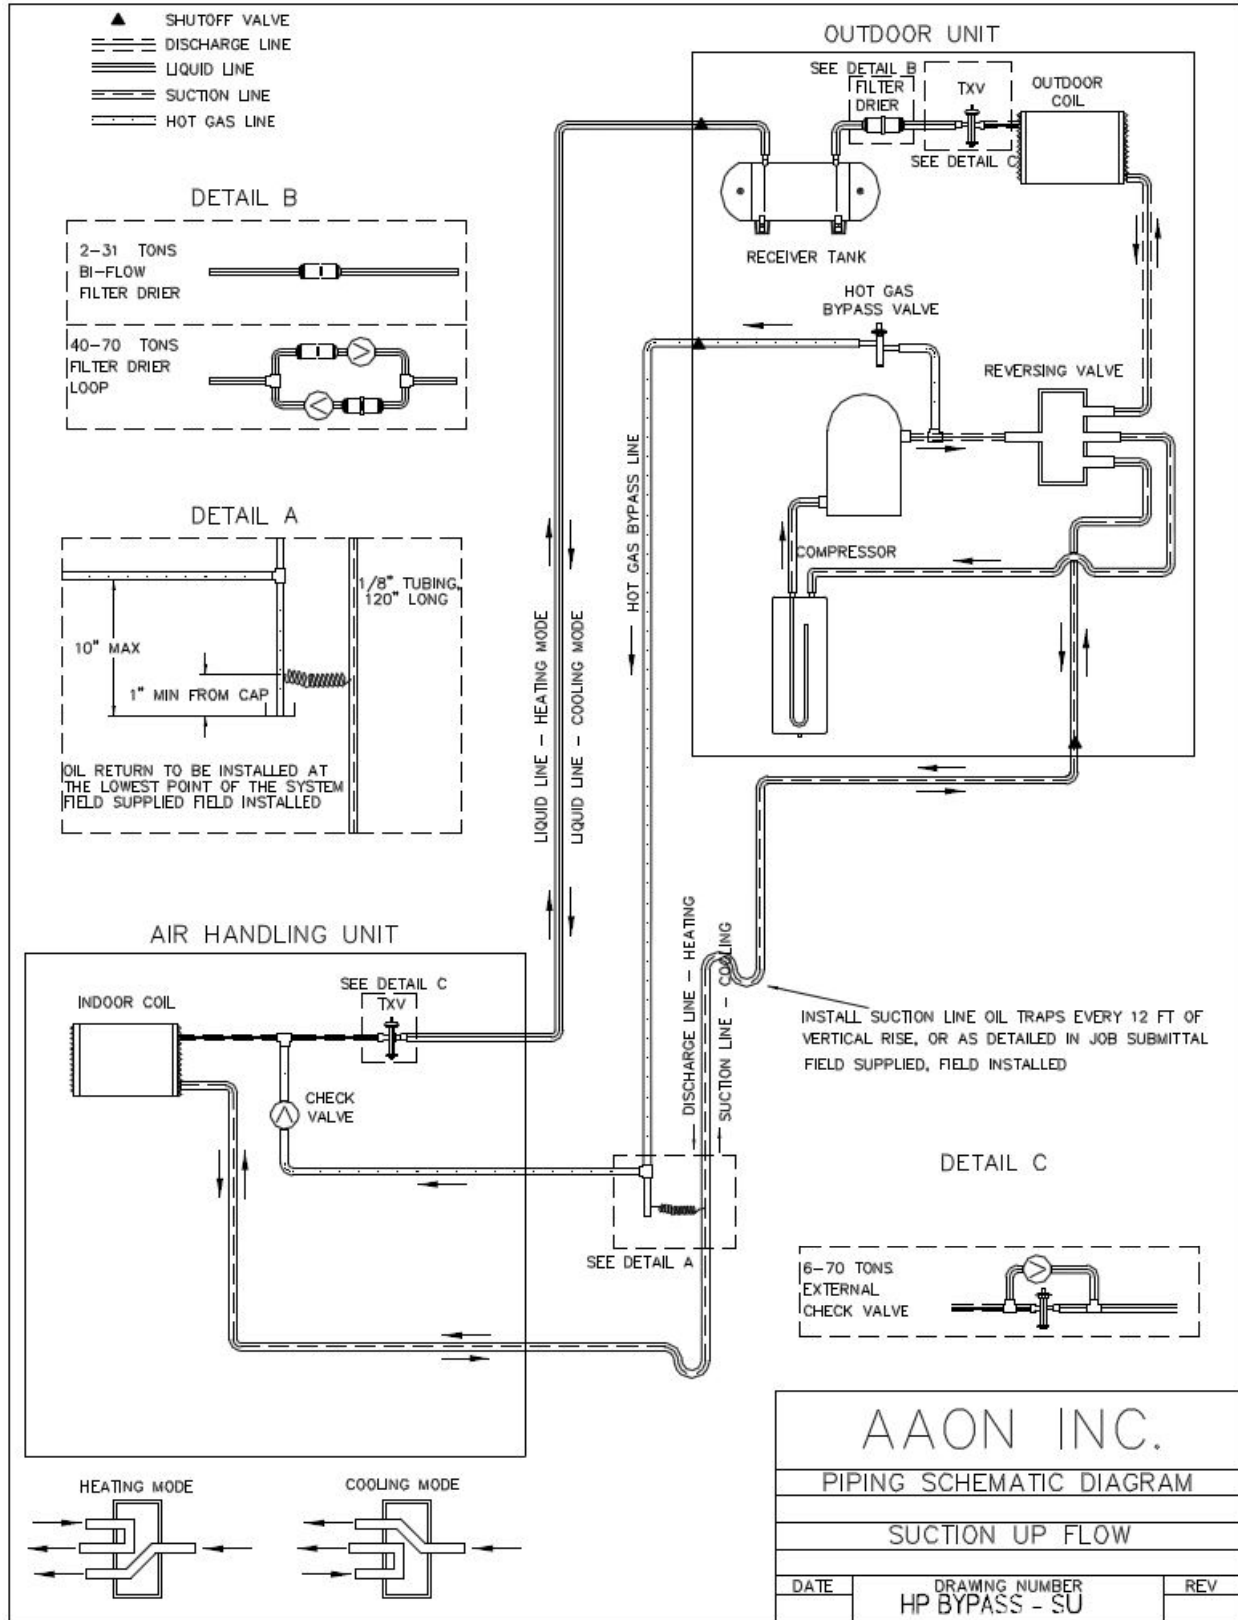


Figure 62: Heat Pump with Hot Gas Bypass Split System Piping, Suction Up

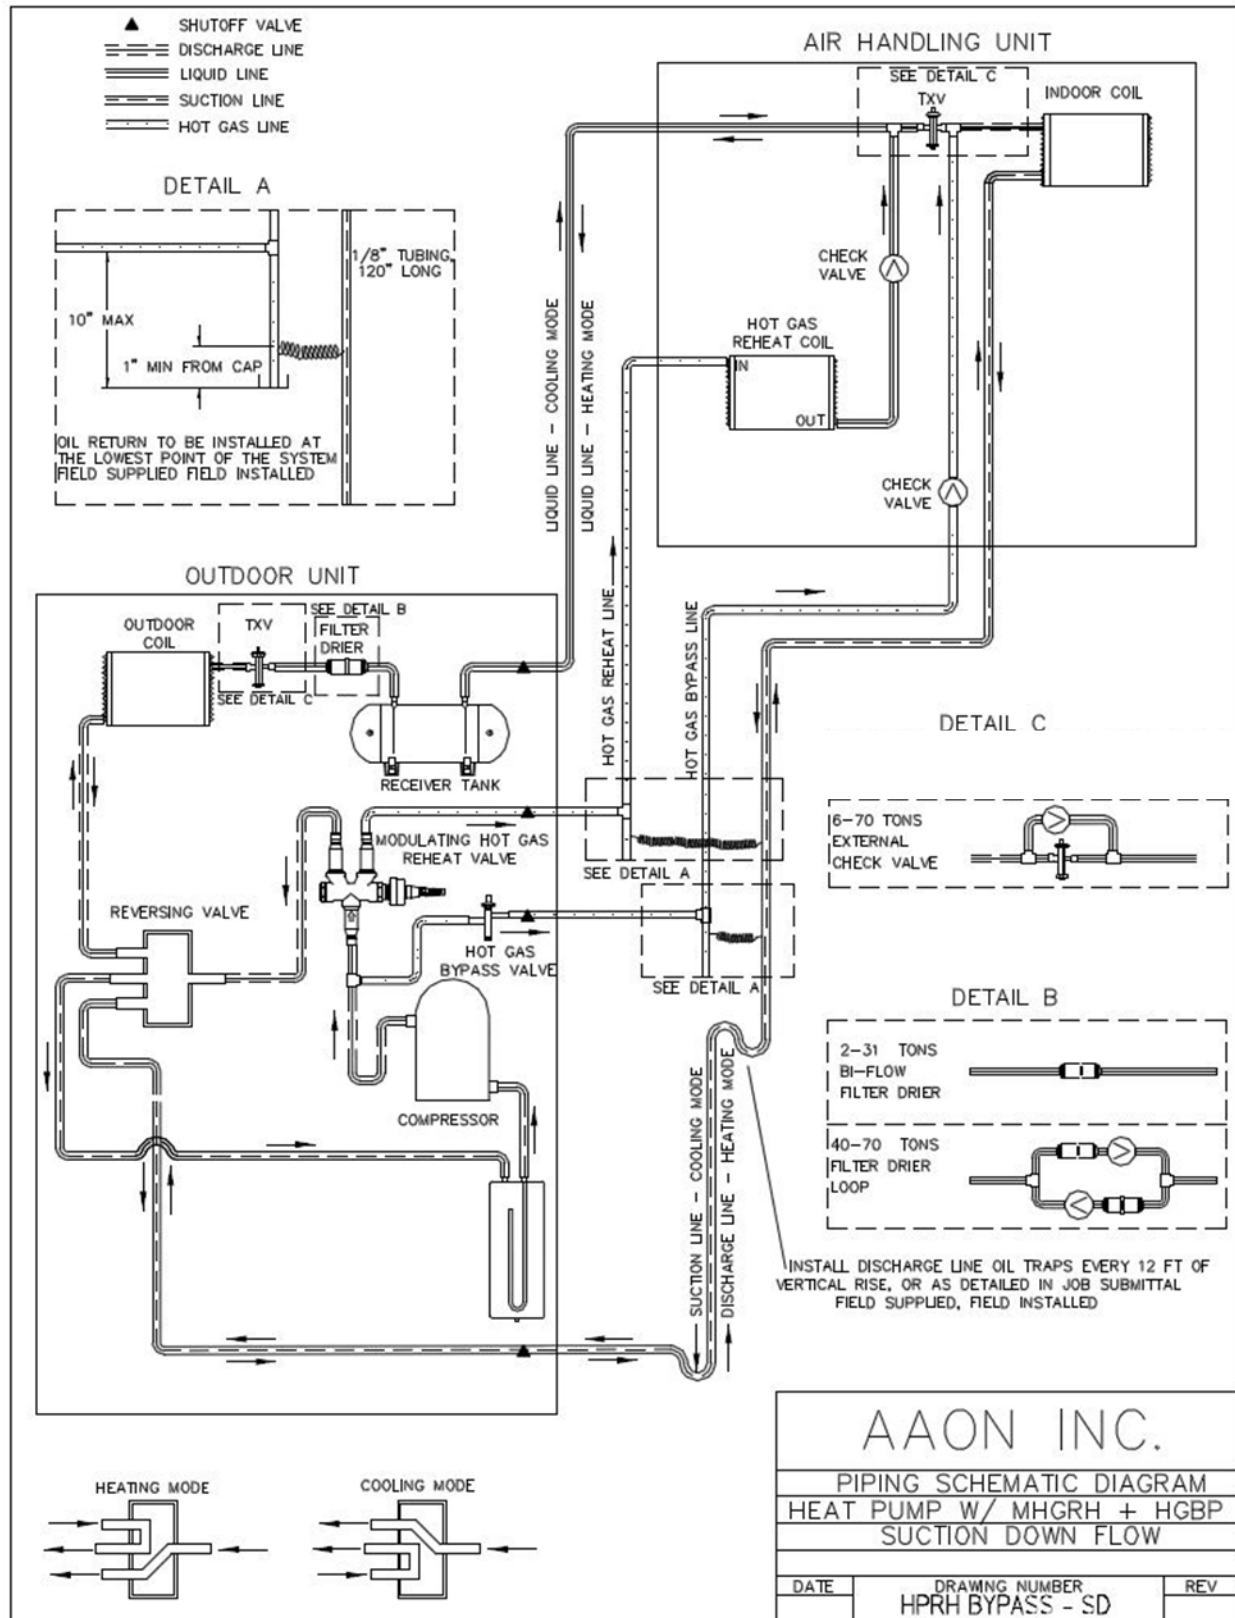


Figure 63: Heat Pump with Modulating Hot Gas Reheat and Hot Gas Bypass Split System Piping, Suction Down

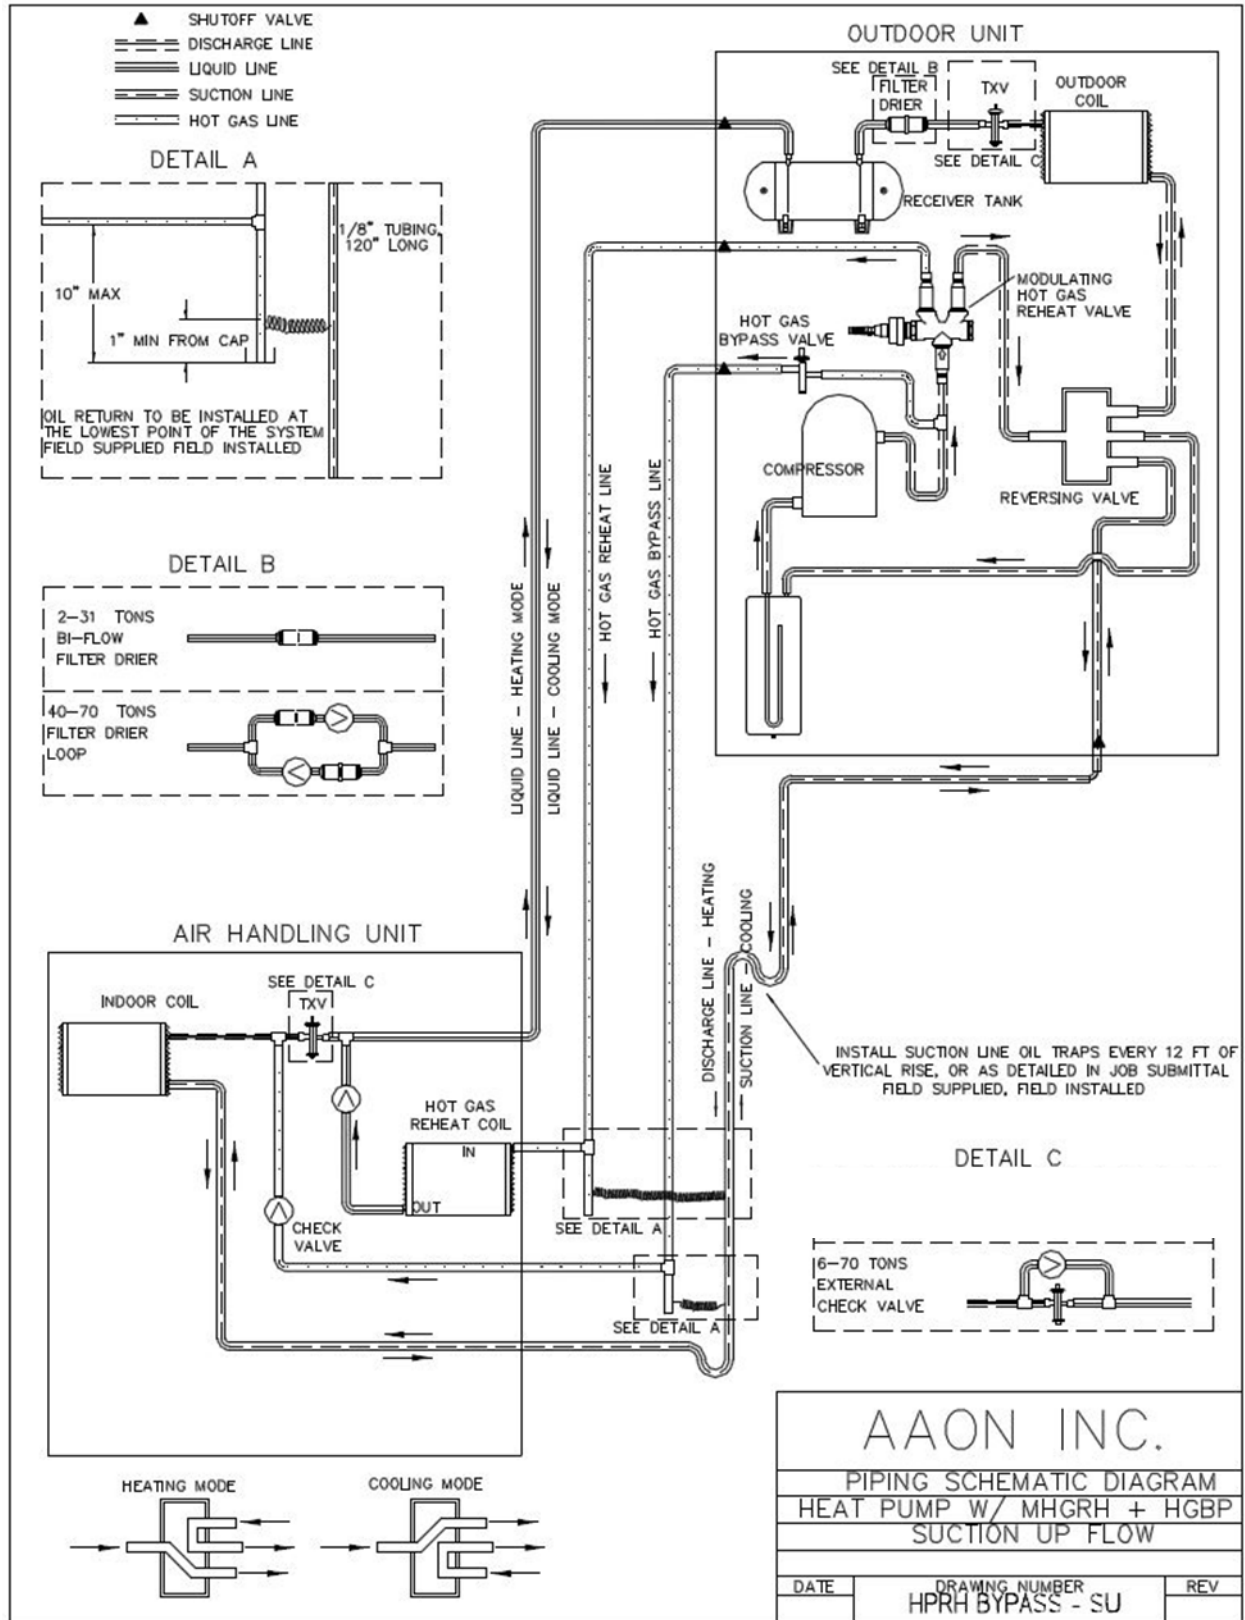


Figure 64: Heat Pump with Modulating Hot Gas Reheat and Hot Gas Bypass Split System Piping, Suction Up

21. APPENDIX C: M2 SERIES START-UP FORM

Job Name: _____	Date: _____
Installed Address: _____ _____	
Model Number: _____	
Serial Number: _____	Tag: _____
Startup Contractor: _____	
Address: _____ _____	
Phone: _____	

21.1. Pre Start-up Checklist

Installing contractor must verify the following items.	
1. Is there any visible shipping damage?	☐ YES
2. Is the unit level?	☐ YES
3. Are the unit clearances adequate for service and operation?	☐ YES
4. Do all access doors open freely and are the handles operational?	☐ YES
5. Have all shipping braces been removed?	☐ YES
6. Have all electrical connections been tested for tightness?	☐ YES
7. Does the electrical service correspond to the unit nameplate?	☐ YES
8. On 208/230V units, has transformer tap been checked?	☐ YES
9. Has overcurrent protection been installed to match the unit nameplate requirement?	☐ YES
10. Have all set screws on the fans been tightened?	☐ YES
11. Do all fans rotate freely?	☐ YES
12. Does the field water piping to the unit appear to be correct per design parameters?	☐ YES
13. Is all copper tubing isolated so that it does not rub?	☐ YES
14. Have the damper assemblies been inspected?	☐ YES
15. Are air filters installed with proper orientation?	☐ YES
16. Have condensate drain and p-trap been connected?	☐ YES
17. Is the TXV sensing bulb in the correct location?	☐ YES
18. Does the TXV sensing bulb have proper thermal contact and is properly insulated?	☐ YES
19. Is the actual refrigerant charge of the largest circuit in accordance with the required conditioned floor area?	☐ YES
20. Are ventilation and exhaust openings unobstructed?	☐ YES
21. Are markings, decals, and warnings on unit clearly visible?	☐ YES
22. Are all damaged or illegible markings and warnings replaced?	☐ YES
23. Has the functionality of the Refrigerant Detection System been verified?	☐ YES



21.2. Ambient Temperature

Ambient Dry Bulb Temperature: _____ °C/°F	Ambient Wet Bulb Temperature: _____ °C/°F
---	---

21.3. Supply Fan Assembly

Alignment ☐		Check Rotation ☐		Nameplate Amps: _____	
Number	hp	L1	L2	L3	
1					
2					
Band Size VFD Frequency: _____			VAV Controls: _____ Springs Operating Correctly ☐		

21.4. Energy Recovery Wheel Assembly

Wheels Spin Freely ☐		Check Rotation ☐		FLA: _____	
Number	hp	L1	L2	L3	
1					
2					

21.5. Power Exhaust Fan Assembly

Alignment ☐		Check Rotation ☐		Nameplate Amps: _____	
Number	hp	L1	L2	L3	
1					
2					
Band Size VFD Frequency: _____			Springs Operating Correctly ☐		

21.6. Power Return Fan Assembly

Alignment ☐		Check Rotation ☐		Nameplate Amps: _____	
Number	hp	L1	L2	L3	
1					
2					
Band Size VFD Frequency: _____			Springs Operating Correctly ☐		

21.7. Outside Air/Economizer Dampers

OA Operation Check ☐	Damper Wiring Check ☐	Gears Check ☐
RA Operation Check ☐	Damper Wiring Check ☐	Gears Check ☐
EA Operation Check ☐	Damper Wiring Check ☐	Gears Check ☐
Damper Actuator Type: _____		
Damper Actuator Type: _____		

21.8. Unit Configuration

Water-Cooled Condenser ☐	Air-Cooled Condenser ☐
No Water Leaks ☐	Condenser Safety Check ☐
Water Flow: _____	gpm: _____
Water Inlet Temperature: _____ °C/°F	Water Outlet Temperature: _____ °C/°F

21.9. Compressors/DX Cooling

Check Rotation ☐						
Number	L1 Volts/Amps	L2 Volts/Amps	L3 Volts/Amps	Head Pressure KPA/PSIG	Suction Pressure KPA/PSIG	Crankcase Heater Amps
1						
2						
3						
4						

21.10. Refrigeration System 1 - Cooling Mode

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge				N/A	N/A
Suction				N/A	
Liquid					N/A

21.11. Refrigeration System 2 - Cooling Mode

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge				N/A	N/A
Suction				N/A	
Liquid					N/A

21.12. Refrigeration System 3 - Cooling Mode

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge				N/A	N/A
Suction				N/A	
Liquid					N/A

21.13. Refrigeration System 4 - Cooling Mode

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge				N/A	N/A
Suction				N/A	
Liquid					N/A

21.14. Refrigeration System 1 - Heating Mode (Heat Pump Only)

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge				N/A	N/A
Suction				N/A	
Liquid					N/A

21.15. Refrigeration System 2 - Heating Mode (Heat Pump Only)

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge				N/A	N/A
Suction				N/A	
Liquid					N/A

21.16. Refrigeration System 3 - Heating Mode (Heat Pump Only)

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge				N/A	N/A
Suction				N/A	
Liquid					N/A

21.17. Refrigeration System 4 - Heating Mode (Heat Pump Only)

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge				N/A	N/A
Suction				N/A	
Liquid					N/A



21.18. Air-Cooled Condenser Fans

Alignment ☐		Check Rotation ☐		Nameplate Amps: _____
Number	hp	L1	L2	L3
1				
2				
3				
4				
5				
6				

21.19. Water/Glycol System

1. Has the entire system been flushed and pressure checked?	☐ YES
2. Has the entire system been filled with fluid?	☐ YES
3. Has air been bled from the heat exchangers and piping?	☐ YES
4. Is the glycol the proper type and concentration (N/A if water)?	☐ YES
5. Is there a minimum load of 50% of the design load?	☐ YES
6. Has the water piping been insulated?	☐ YES
7. What is the freeze point of the glycol (N/A if water)? _____	

21.20. Electric Heating

Stages: _____		Limit Lockout ☐		Aux Limit Lockout ☐	
Stage	Amps	Stage	Amps		
1		5			
2		6			
3		7			
4		8			



21.21. Electric Preheating

Limit Lockout ☐		Aux Limit Lockout ☐	
Outside Air Temperature Setpoint: _____ °C/°F			
Preheat Leaving Air Temperature Setpoint: _____ °C/°F			
Stage	Amps	Stage	Amps
1		3	
2		4	

21.22. A2L Mitigation Board

1. Does each port (sensor 1-3) have a male connector plugged in on both the Cabinet and Airstream board?	☐ YES
2. Do the compressor(s) and gas heat operation shut off when the Cabinet Board is in the alarm state?	☐ YES
3. Does the unit operate normally except compressor and gas heat operation when the Cabinet Board is in the alarm state?	☐ YES
4. Do the compressor(s) shut off and fan(s) stay on when the Airstream Board is in the alarm state?	☐ YES
5. Does non-compressor or gas heating/cooling stay on when both A2L Mitigation boards are in the alarm state?	☐ YES



This log must be kept with the unit. It is the responsibility of the owner and/or maintenance/service contractor to document any service, repair or adjustments. AAON Service and Warranty Departments are available to advise and provide phone help for proper operation and replacement parts. The responsibility for proper startup, maintenance and servicing of the equipment falls to the owner and qualified licensed technician.

APPENDIX D: MAINTENANCE LOG



23. LITERATURE CHANGE HISTORY

March 2020

Updated bolted base rail figure to show the metal bolt casing installed and updated instructions to make it more clear how to install it. Updated ECM potentiometer figures.

December 2023

Start of new UL 60335 version of M2 series IOM Revision A. Added New UL 60335 tables and standard. Added 35 and 65 KAIC tables. Add Min and Max Water temps and pressures table. Added 454B Pressure Temperature charts as well as metric and imperial versions of 410A and 454B. Add new warning labels. Updated Feature string. Added metric conversions to all units in the IOM.

May 2024

Removed 410a information as this will be for 454b refrigerant now due to the changeover. Additional warnings added. Text added to installation section about proper ventilation requirements. Minimum Floor Area for charge table added. Added "Refrigerant Detection System" for new mitigation board for A2L refrigerant. Additional checklist items added to Startup form. Sentence added to storage section in regard to ASHRAE 15 requirements. Added section about proper Refrigerant removal and Evacuation.

August 2024

Added process of Decommissioning the unit. Added text to General Information stating the maximum installation elevation is 11,500 ft.

October 2024

Updated part number. Added set screw adjustment information and plenum gap information.

January 2025

Updated decommissioning section. Updated RDS section, updated startup form. Updated Warnings and Caution section.

February 2025

Removed Gas Heat Options

June 2026

Updated Sections 7.3, 15, and 15.1. Updated Tables 10, 15, and 16. Replaced Table 11

September 2026

Updated revision to "D". Added "Install this appliance in accordance with local codes..." paragraph to Safety Section.



AAON

203 Gum Springs Road
Longview, TX 75602-1721

Phone: 903-236-4403

Fax: 903-234-8930

www.AAON.com

M2 Series Installation, Operation,
and Maintenance

G164890 · Rev. D · 20260915



AAON® is a subsidiary of The Aaon Group. It is the intent of The Aaon Group to provide accurate and current product information. However, in the interest of product improvement, The Aaon Group reserves the right to change pricing, specifications, and/or design of its product without notice, obligation, or liability.

Copyright © AAON®, all rights reserved throughout the world.

AAON® and AAONAIRES® are registered trademarks of The Aaon Group, Tulsa, OK.