

H3 Series

Horizontal Indoor Air Handling Units





Installation, Operation & Maintenance

A WARNING

QUALIFIED INSTALLER

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Startup and service must be performed by a Factory Trained Service Technician competent in working with flammable refrigerants. A copy of this IOM must be kept with the unit.

A WARNING

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

A WARNING

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

CONTENTS

Safety	6
H3 Base Model Description	
General Information	19
Codes and Ordinances	20
Receiving Unit	20
Storage	
Wiring Diagrams	21
Installation	
Locating the Unit	21
Lifting and Handling the Unit	26
Unit Assembly	
Control Box	
Electrical	29
Duct Connection	32
Condensate Drain Pans	
Condensate Drain Piping	33
Startup	
Filters	34
Supply Fans	34
Fan Air Flow Adjustment	34
Operation	37
Thermostat Operation	39
Split System DX Cooling Operation and Control	
Chilled Water or Non-Compressorized DX Cooling Operation	39
Steam or Hot Water Preheating Operation	
Electric Heating Operation	39
Gas Heater Operation	39
Maintenance	40
DX Cooling	40
Condensate Drain Pans	
Winterizing Coils	40
Supply Fans	40
E-Coated Coil Cleaning	40
Refrigerant Removal and Evacuation	42
Options	43
Heating Coils	43
Chilled Water Coil	44
Direct Expansion (DX) Systems	45
Evaporator Coil	46
Thermal Expansion Valve	46
Hot Gas Reheat	47
Hot Gas Bypass	47
Purge Circuit	47
Adjusting Refrigerant Charge	47

Energy Recovery Units	57
Initial Mechanical Check and Setup	57
Polymer Energy Recovery Wheel	
Energy Recovery Wheel General Cleaning	
Gas and Electric Heating	69
Gas Heating	70
Unit Location and Clearances	70
Leak Testing	72
Phase and Brownout Protection Module	
Filter Replacement	
Replacement Parts	
AAON	
Decommissioning	
Filter Information	
Refrigerant Piping Diagrams	82
Appendix A – Unit Safety Hierarchy	83
Default (A2L Priority)	83
Building Smoke Control Priority	83
H3 Series Startup Form	84
Maintenance Log	89
Maintenance Log (E-Coated Coil)	90
Literature Change History	91

G164850 · Rev. C · 250916

Index of Tables and Figures

l ables:	
Table 1 - H3 Series Clearances (Metric)	
Table 2 - H3 Series Clearances (Imperial)	. 22
Table 3 Coil Removal Clearances	
Table 4 - Nameplate Voltage Markings & Tolerances	. 29
Table 5 - Control Wiring	. 32
Table 6 - 35 KAIC Fuse Sizing	. 32
Table 7–65 KAIC Fuse Sizing	. 32
Table 8 - Drain Trap Dimensions (Metric)	. 34
Table 9 – Drain Trap Dimensions (Imperial)	
Table 10 - Plenum Fan Set Screw Specifications	
Table 11 - Steam Distributing Coil Sweat Connection Sizes	. 44
Table 12 - Hot Water Coil Sweat Connection Sizes	. 44
Table 13 - Chilled Water Coil Sweat Connection Sizes	
Table 14 – Minimum and Maximum Coil Pressures and Temperatures	. 45
Table 15 - Acceptable Refrigeration Circuit Values	. 49
Table 16 - Acceptable Microchannel Air-Cooled Condenser Coil	
Liquid Sub-Cooling Values (Metric)	. 50
Table 17 - Acceptable Microchannel Air-Cooled Condenser Coil	
Liquid Sub-Cooling Values (Imperial)	
Table 18 - Minimum Circulation Airflow and Room Area for a Given Charge	
Table 19 - Minimum Circulation Airflow and Room Area for a Given Charge (continued)	
Table 20 - Minimum Circulation Airflow and Room Area for a Given Charge (continued)	
Table 21 - Minimum Airflow for Non-Ducted Applications by Box Size	
Table 22 - R-454B Refrigerant Temperature-Pressure Chart (Metric)	
Table 23 - R-454B Refrigerant Temperature-Pressure Chart (Imperial)	
Table 24 - Electric and Gas Heating Capacities	
Table 25 - Gas Piping Supports (Metric)	. 71
Table 26 - Gas Piping Supports (Imperial)	
Table 27 - H3 Series A Cabinet Unit Filters	
Table 28 - H3 Series B Cabinet Unit Filters	
Table 29 - H3 Series C Cabinet Unit Filters	
Table 30 - H3 Series D Cabinet Unit Filters	. 79
Table 31 - H3 Series E Cabinet Unit Filters	
Table 32 - H3 Series A Cabinet Final Filters	
Table 33 - H3 Series B Cabinet Final Filters	
Table 34 - H3 Series C Cabinet Final Filters	
Table 35 - H3 Series D Cabinet Final Filters	
Table 36 - H3 Series E Cabinet Final Filters	
Table 37 - H3 Series Energy Recovery OA Filters (Feature 13 ≠ 0)	
Table 38 - H3 Series Energy Recovery RA Filters (Feature 13 ≠ 0)	. 82

Figures:	
Figure 1 - Gas Heater (81% Separated Combustion shown)	21
Figure 2 -Minimum Clearance Required for Access to Unit (H3 Series plan view)	
Figure 3 - H3 internal control panel with top access panel removed	
Figure 4 - H3 Series Platform Suspension Installation	24
Figure 5 - H3 Series Parallel Beam Suspension Installation	25
Figure 6 - H3 Series Unit Orientation	
Figure 7 - H3 Schematic with (1) Mixing Box, (2) Air Handler, and (3) Final Filter	26
Figure 8 - Low & High Voltage Quick Connect	26
Figure 9 - Apply Gasket	
Figure 10 - Connect Sections	
Figure 11 - Bar Clamp	
Figure 12 - Flange Overlap	28
Figure 13 - Self-Tapping Screw	
Figure 14 - Back View External Control Box	28
Figure 15 - External control box electrical connections	29
Figure 16 - H3 internal control panel electrical connections	30
Figure 17 - Drain Trap	
Figure 18 - Plenum Fan Gap Tolerances	35
Figure 19 - Typical wiring diagram with EC motor	
Figure 20 - Shows the jumper that is to be removed (jumped between S1 and S2)	35
Figure 21 - Potentiometer	
Figure 22 - A2L Sensor Location	
Figure 23 - Steam Distributing Piping	43
Figure 24 - Hot & Chilled Water Piping	
Figure 25 - TXV Bulb Position	46
Figure 26 - Hot Gas Purge Circuit	47
Figure 27 - Energy Recovery Wheel	
Figure 28 - Lifting Hole Locations	
Figure 29 - Polymer Energy Recovery Wheel	58
Figure 30 - Wheel Segment Removal Pattern	
Figure 31 - H3 A or B Cabinet Energy Recovery Wheel	67
Figure 32 - H3 A or B Cabinet Outside Air Filter Access	67
Figure 33 - H3 C Cabinet Energy Recovery Wheel	
Figure 34 - H3 C Cabinet Outside Air Filter Access	
Figure 35 - H3 D or E Cabinet Energy Recovery Wheel	
Figure 36 - Unit Safety Hierarchy	83
Figure 37 - A2L Priority Jumper	
Figure 38 - Building Smoke Control Priority Jumper	83

Safety

Attention must be paid to the following statements:

NOTE - Notes are intended to clarify the unit installation, operation and maintenance.

A CAUTION - Caution statements are given to prevent actions that may result in equipment damage, property damage, or personal injury.

A WARNING - Warning statements are given to prevent actions that could result in equipment damage, property damage, personal injury or death.

DANGER - Danger statements are given to prevent actions that will result in equipment damage, property damage, severe personal injury or death.

A WARNING

ELECTRIC SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings exactly could result in dangerous operation, serious injury, death or property damage.

Improper servicing could result in dangerous operation, serious injury, death or property damage.

Installation and service must be performed by a qualified technician, service agency or the gas supplier.

- Before servicing, disconnect all electrical power to the unit. More than one disconnect may be provided.
- When servicing controls, label all wires prior to disconnecting. Reconnect wires correctly.
- Verify proper operation after servicing. Secure all doors with key-lock or nut and bolt.

A WARNING

Electric shock hazard. Before servicing, disconnect all electrical power to the unit, including remote disconnects, to avoid shock hazard or injury from rotating parts. Follow proper Lockout-Tagout procedures.

A WARNING

FIRE, EXPLOSION OR CARBON MONOXIDE POISONING HAZARD

Failure to replace proper controls could result in fire, explosion or carbon monoxide poisoning. Failure to follow safety warnings exactly could result in serious injury, death or property damage. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this appliance.

A CAUTION

Unit power supply wire must be only copper or aluminum.

A WARNING

During installation, testing, servicing and troubleshooting of the equipment it may be necessary to work with live electrical components. Only a qualified licensed electrician or individual properly trained in handling live electrical components shall perform these tasks.

Standard NFPA-70E, an OSHA regulation requiring an Arc Flash Boundary to be field established and marked for identification of where appropriate Personal Protective Equipment (PPE) be worn, must be followed.

A WARNING

ROTATING COMPONENTS

Unit contains fans with moving parts that can cause serious injury. Do not open door containing fans until the power to the unit has been disconnected and fan wheel has stopped rotating.

A CAUTION

Rotation must be checked on all MOTORS of 3 phase units at startup by a qualified service technician. Fan motor rotation must be checked for proper operation. Alterations must only be made at the unit power connection.

A WARNING

GROUNDING REQUIRED

All field installed wiring must be completed by qualified personnel. Field installed wiring must comply with NEC/CEC, local and state electrical code requirements. Failure to follow code requirements could result in serious injury or death. Provide proper unit ground in accordance with these code requirements.

A WARNING

UNIT HANDLING

To prevent injury or death lifting equipment capacity shall exceed unit weight by an adequate safety factor. Always test-lift unit not more than 61 centimeters (24 inches) high to verify proper center of gravity lift point to avoid unit damage, injury or death.

A CAUTION

Failure to properly drain and vent coils when not in use during freezing temperature may result in coil and equipment damage.

Do not use oxygen, acetylene or air in place of refrigerant and dry nitrogen for leak testing. A violent explosion may result causing injury or death.

A WARNING

WATER PRESSURE

Prior to connection of condensing water supply, verify water pressure is less than maximum pressure shown on unit nameplate. To prevent injury or death due to instantaneous release of high pressure water, relief valves must be field supplied on system water piping.

A WARNING

Always use a pressure regulator, valves and gauges to control incoming pressures when pressure testing a system. Excessive pressure may cause line ruptures, equipment damage or an explosion which may result in injury or death.

A CAUTION

To prevent damage to the unit, do not use acidic chemical coil cleaners. Do not use alkaline chemical coil cleaners with a pH value greater than 8.5, after mixing, without first using an aluminum corrosion inhibitor in the cleaning solution.

A WARNING

Some chemical coil cleaning compounds are caustic or toxic. Use these substances only in accordance with manufacturer's the usage instructions. Failure to follow instructions may result in equipment damage, injury or death.

A CAUTION

Do not clean DX refrigerant coils with hot water or steam. The use of hot water or steam on refrigerant coils will cause high pressure inside the coil tubing and damage to the coil.

A CAUTION

Door compartments containing hazardous voltage or rotating parts are equipped with door latches to allow locks. Door latch are shipped with nut and bolts requiring tooled access. If you do not replace the shipping hardware with a pad lock always re-install the nut & bolt after closing the door.

A WARNING

Do not work in a closed area where refrigerant or nitrogen gases may be leaking. A sufficient quantity of vapors may be present and cause injury or death.

Connected ductwork must be free of potential ignition sources, such as hot surfaces above 700 °C (1292 °F) or electrical devices prone to arcing or sparking. Potential ignition sources within the ductwork may only be allowed if the minimum air velocity across these components is above 1 m/s (200 ft/min) during any point which the component can function.

A WARNING

This appliance contains a flammable refrigerant. Minimum floor area on nameplate is based on factory charge at a ceiling/release height of 2.2 m (7.2 ft) in accordance with UL 60335-2-40. Refer to Table 17 for different allowable room areas based on other charges and ceiling/release heights. Apply altitude adjustment factor to table values as required by local codes.

A WARNING

If this appliance is installed to serve a conditioned area less than the minimum area as indicated in Table 17, the served space must be free of continuously operating open flames or other sources of ignition. Additional ventilation is required in accordance with ASHRAE 15.

A WARNING

Only auxiliary devices approved by manufacturer or declared suitable with the refrigerant may be installed in ductwork.

A WARNING

Minimum circulation airflow is required to prevent stagnation of refrigerant in the event of a refrigerant leak. Zone dampers and VAV boxes must be operated to allow for minimum circulation airflow in the event of a refrigerant leak.

A WARNING

Do not use torch or other potential ignition source to detect refrigerant leaks. Use only electronic detector suitable for the refrigerant, or bubble method with chlorine free detergent.

A WARNING

If refrigerant leak is detected, remove/extinguish all sources of open flame. If repairing refrigerant leak requires brazing, remove all refrigerant before beginning brazing.

A WARNING

Refrigerant Detection System activated circulation airflow. In the event of refrigerant leak within airstream, indoor blower is activated to provide circulation airflow. Mitigation board provided with alarm output. Wire all zone dampers and VAV boxes to alarm output to open in the event of a refrigerant leak alarm.

WARNING

Flammable refrigerant. Be aware that refrigerant does not contain an odor.

Never attempt to open an access door or remove a panel while the unit is running. Pressure in the unit can cause excessive force against the panel.

A WARNING

Do not weld or cut foam panel with plasma cutters or a cutting torch – When burnt the foam produces dangerous fumes.

A WARNING

Ensure that sufficient dampers will be open to provide air path before fan is allowed to run.

A CAUTION

PVC (Polyvinyl Chloride) and CPVC (Chlorinated Polyvinyl Chloride) are vulnerable to attack by certain chemicals. Polyolester (POE) oils with R-454B and other used refrigerants, even in trace amounts, in a PVC or CPVC piping system will result in stress cracking of the piping and fittings and complete piping system failure.

A WARNING

Flammable refrigerant. Do not pierce or burn tubing or refrigerant containing components.

A WARNING

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children must be supervised to ensure they do not play with this appliance.

A CAUTION

In order to avoid a hazard due to inadvertent resetting of the THERMAL CUT-OUT, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

A WARNING

Ensure that there are no live electrical components or wiring exposed when adjusting charge, recovering charge, or purging the system. Ensure that earthing continuity is unbroken.

A WARNING

Do not use means to accelerate the defrosting process or to clean, other than those recommended in this manual.

Units with VFD driven motors/compressors have adjustable overload settings. These are set by the AAON factory for the protection of these motors/compressors and must not be adjusted over this factory setpoint or bypassed.

A WARNING

The appliance shall be stored in a room without continuously operating ignition sources (i.e. open flames, an operating gas appliances or operating electric heater).

A CAUTION

If an electrical component requires changing, verify specifications and intended application match the component to be replaced, including intrinsically sealed or safe specifications. Damaged sealed or intrinsically safe components must be replaced. Electrical components must be free from producing arcs or sparks. The maintenance guidelines in this manual must always be followed. If in doubt, contact Factory Technical Support.

A WARNING

The appliance shall be stored in a room without continuously operating ignition sources (i.e. open flames, an operating gas appliances or operating electric heater).

A CAUTION

Field installed pipework must be protected from physical damage in operation and service. All joints must be accessibly for inspection in accordance with applicable local codes. In the absence of local codes, install in accordance with ASHRAE 15, ASHRAE 15.2, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52. Do not install any field made joints within conditioned airstream.

A WARNING

If any damage or fault to electrical equipment exists, do not provide power to unit. If the issue can not be resolved immediately, report issue to equipment owner to ensure power is not supplied before issue is resolved.

- 1. Startup and service must be performed by a Factory Trained Service Technician competent in working with flammable refrigerants.
- 2. The unit is for indoor use only. See General Information section for more unit information.
- 3. The supply and return air ducts must be derived from the same space. It is recommended ducts be provided with access panels to allow inspection for duct tightness. When a down flow duct is used with electric heat, the exhaust duct must be an L shaped duct.
- 4. For ducted applications, supply and return must be ducted directly to the space served by the unit. If plenum return is to be utilized, the return plenum must be provided with a refrigerant detection system or ventilation in accordance with ASHRAE 15 requirements.
- 5. These units must not be used for heating or cooling at any time during any phase of construction. Very low return air temperatures, harmful vapors, and misplacement of the filters will damage the unit and its efficiency
- 6. Every unit has a unique equipment nameplate with electrical, operational, and unit clearance specifications. Always refer to the unit nameplate for specific ratings unique to the model you have purchased.
- 7. Clean duct and components upon completion of the construction setup.

- 8. When pairing with a condensing unit, ensure the refrigerant pressures for the paired system do not exceed the maximum allowable pressures listed on the unit nameplate.
- 9. Ensure that the unit is paired only with a condensing unit compatible with refrigerant marked on the nameplate.
- 10. Heatco gas-fired duct furnace cabinets are paired with AAON air handling units. The use of these cabinets must comply with all installation, operating, and maintenance requirements as detailed in the Heatco duct furnace's IOM. Refer to cabinet literature as additional considerations may need to be made. This literature is provided in the Heatco cabinet.
- 11. "The H3 is a PARTIAL UNIT AIR CONDITIONER, complying with PARTIAL UNIT requirements of UL 60335-2-40, and must only be connected to other units that have been confirmed as complying to corresponding PARTIAL UNIT requirements of UL 60335-2-40/CSA C22.2 No. 60335-2-40, or UL 1995/CSA C22.2 No. 236.
- 12. READ THE ENTIRE INSTALLATION, OPERATION AND MAINTENANCE MANUAL. OTHER IMPORTANT SAFETY PRECAUTIONS ARE PROVIDED THROUGHOUT THIS MANUAL.
- 13. Keep this manual and all literature safeguarded near or on the unit.

Model Options : Unit Feature Options

H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F LB - 0 C 0 - 0 0 A A A C 0 0 B H3 - A B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 B B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 B B B - 3 - 0 C 0 - F LB - 0 C 0 - 0 C 0 - 0 C 0 A A A C 0 0 B A A C 0 0 B A A C 0 0 B A A C 0 0 B A A C 0 0 B A A C 0 0 B A A C 0

BASE MODEL

SERIES AND GENERATION

H3 = Horizontal - Back Intake, Front Discharge

UNIT SIZE

A = Up to 1,200 cfm

B = Up to 2,000 cfm

C = Up to 4,000 cfm

D = Up to 6,000 cfm

E = Up to 10,000 cfm

UNIT ORIENTATION

R = Right Hand Connections

L = Left Hand Connections

REVISION

B = Second Revision

VOLTAGE

 $1 = 230 \text{V} / 1 \Phi / 60 \text{Hz}$

 $2 = 230V/3\Phi/60Hz$

 $3 = 460V/3\Phi/60Hz$

 $4 = 575V/3\Phi/60Hz$

 $8 = 208V/3\Phi/60Hz$

 $9 = 208V/1\Phi/60Hz$

CORROSION PROTECTION

0 = Standard

A = Interior Corrosion Protection

Model Option A: COOLING

15 116 117 118 119 220 221 222 23

A1: COOLING TYPE

0 = No Cooling

2 = Chilled Water Cooling

4 = R-454B DX Cooling

A2: COOILNG ROWS

0 =No Cooling

4 = 4 Row Coil

6 = 6 Row Coil

8 = 8 Row Coil

A3: COOLING STAGES

0 = No Cooling

1 = Single Circuit

2 = Two Circuits - Interlaced Coil

D = Double Serpentine

F = Single Serpentine

H = Half Serpentine

Q = Quarter Serpentine

A4: COOLING FPI

0 = No Cooling

A = 10 fpi

B = 8 fpi

C = 12 fpi

D = 14 fpi

Model Options : Unit Feature Options

Model Option B: HEATING B1: HEATING TYPE

- 0 =No Heating
- 1 = Hot Water
- 6 = Hot Water (Reheat position)
- 4 = Steam Distributing
- 7 = Electric Heating (UL 60335 Compliant)
- J = HeatBoost Open Combustion Natural Gas Heat
- K = HeatBoost Separated Combustion Natural Gas Heat
- L = HeatBoost Open Combustion LP Gas Heat
- M = HeatBoost Separated Combustion LP Gas Heat
- N = HeatBoost Open Combustion Natural Gas Heat High Altitude
- P = HeatBoost Separated Combustion Natural Gas Heat - High Altitude
- Q = HeatBoost Open Combustion LP Gas Heat -High Altitude
- R = HeatBoost Separated Combustion LP Gas Heat High Altitude

B2: HEATING DESIGNATION

- 0 = No Heating
- 1 = 1 Row Coil
- 2 = 2 Row Coil
- 4 4 Row Coil
- A = 7 kW (5.3 kW @ 208 V)
- B = 14 kW (10.5 kW @ 208V)
- C = 21 kW (15.8 kW @ 208V)
- OR 50 MBH input
- D = 28 kW (21.0 kW @ 208V)
- E = 35 kW (26.3 kW @ 208V)
- F = 42 kW (31.5 kW @ 208V)
- G = 49 kW (37.0 kW @ 208V)
- OR 90 MBH input H = 56 kW (42.0 kW @ 208V)
 - OR 100 MBH input
- J = 63 kW (47.3 kW @ 208V)
 - OR 125 MBH input
- K = 70 kW (52.5 kW @ 208V)
 - OR 135 MBH input
- L = 150 MBH input
- M = 84 kW (63.0 kW @ 208V)
 - OR 180 MBH input
- P = 200 MBH input

- N = 225 MBH input
- Q = 250 MBH input
- R = 360 MBH input
- S = 400 MBH input
- T = 300 MBH input

B3: HEATING STAGES

- 0 =No Heating
- 1 = 1 Stage
- 2 = 2 Stage
- 3 = 3 Stage
- 4 = 4 Stage 5 = 5 Stage
- 6 = 6 Stage
- A = Modulating 3:1 93% Efficient
- B = Modulating 5:1 93% Efficient
- C = Modulating 3:1 81% Efficient
- D = Modulating 5:1 81% Efficient
- S = Modulating/SCR Electric
- F = Single Serpentine 12 fpi
- H = Half Serpentine 12 fpi
- Q = Quarter Serpentine 12 fpi
- K = Single Serpentine 8 fpi
- L = Half Serpentine 8 fpi
- M = Quarter Serpentine 8 fpi
- N = Single Serpentine 10 fpi
- P = Half Serpentine 10 fpi
- R = Quarter Serpentine 10 fpi

Feature 1: SUPPLY FAN

1A: SUPPLY AIR BLOWER CONFIGURATION

- E = 1 Blower + 1 Perm Magnet AC Totally Enclosed Motor + 1 VFD
- F = 2 Blowers + 2 Perm Magnet AC Totally Enclosed Motors + 2 VFDs

1B: SUPPLY AIR BLOWER

$$\begin{split} E &= 13.5\text{" Backward Curved Plenum, } 50\% \text{ Width} \\ F &= 13.5\text{" Backward Curved Plenum, } 70\% \text{ Width} \\ G &= 15\text{" Backward Curved Plenum, } 70\% \text{ Width} \\ H &= 22\text{" Backward Curved Plenum, } 70\% \text{ Width} \end{split}$$

Model Options

1 = 15" Backward Curved Plenum

2 = 15" Backward Curved Plenum, 50% Width

3 = 18.5" Backward Curved Plenum

4 = 18.5" Backward Curved Plenum, 70% Width

1C: SUPPLY AIR BLOWER MOTOR

1 = 1 hp

2 = 2 hp

3 = 3 hp

4 = 5 hp

1D: SUPPLY BLOWER CONTROL/CONTROL VENDORS

C = Field Installed Controls by Others

D= Field Installed Controls by Others + Isolation Relays

E = VCC-X AAON Orion Controls System

Feature 2: REFRIGERATION OPTIONS

0 = Standard

A = Single Circuit External Hot Gas Bypass

B = Dual Circuit External Hot Gas Bypass

C = Heat Pump

D = Option B + H

F = Options C + H

H = Modulating Hot Gas Reheat

P = Option H (Circuit 1) + Option A (Circuit 2)

R = Option C + A

S = Option C + B

T = Option C + H + A

U = Option C + H + B

Feature 3: SPECIAL CONTROLS

0 = Standard

 $\label{eq:alpha} A = Constant\ Volume\ Controller\ -\ CV\ Cool\ +\ CV$ Heat

C = VAV Controller - VAV Cool + CV Heat

E = Make Up Air Controller - CV Cool + CV Heat

H = DX-DOAS Controls

J = DX DOAS Controls Heat Pump

Feature 4: ADDITIONAL CONTROLS

Unit Feature Options

0 = Standard - None

A = Phase and Brownout Protection

B = Return and Supply Air Firestat

C = Return Air Smoke Detector

D = Options A + B

E = Options A + C

F = Options B + C

G = Options A + B + C

H = Remote Safety Shutdown Terminals

J = Energy Recovery Wheel Rotation Detection

K = Options A + H

L = Options A + J

M = Options B + H

N = Options B + J

P = Options C + H

Q = Options C + JR = Options H + J

S = Options A + B + H

T = Options A + B + J

U = Options A + C + H

V = Options A + C + J

W = Options A + H + J

Y = Options B + C + H

Z = Options B + C + J

1 = Options B + H + J

2 = Options C + H + J

3 = Options A + B + C + H

4 = Options A + B + C + J

5 = Options A + B + H + J

6 = Options A + C + H + J

7 = Options B + C + H + J

8 = Options A + B + C + H + J

Model Options : Unit Feature Options

<u>Feature 5: MIXING BOX</u> 5A: RETURN AIR DAMPER POSITION

0 = No Mixing Box

F = Front

L = Left Hand (Front OA Damper Required)

R = Right Hand (Front OA Damper Required)

T = Top (Front OA Damper Required)

5B: OUTSIDE AIR DAMPER POSITION

0 =No Mixing Box

F = Front

L = Left Hand (Front RA Damper Required)

R = Right Hand (Front RA Damper Required)

T = Top (Front RA Damper Required)

5C: MIXING BOX DAMPER CONTROL

0 =No Mixing Box

A = 2 Position Actuators (24V)

B = Fully Modulating Actuators (DDC)

C = Fixed Position Dampers

D = Fully Modulating Actuator - Enthalpy Limit

E = Fully Modulating Actuator - Sensible Limit

Feature 6: FILTER BOX 6A: PRE FILTER BOX

0 = Standard - None

6B: UNIT FILTER

0 = No Unit Filters

A = 2" Pleated - MERV 8

B = 4" Pleated - MERV 8

C = 4" Pleated - MERV 11

D = 4" Pleated - MERV 13

E = 4" Pleated - MERV 14

F = 2" Pleated - MERV 8 + 4" Pleated - MERV 8

G = 2" Pleated - MERV 8 + 4" Pleated - MERV 11

H = 2" Pleated - MERV 8 + 4" Pleated - MERV 13

J = 2" Pleated - MERV 8 + 4" Pleated - MERV 14

6C: FINAL FILTER BOX

0 = Standard - None

A = 2" Pleated -30% Eff.

B = 12" Cartridge - MERV 11

C = 12" Cartridge - MERV 13

D = 12" Cartridge - MERV 14

E = 2" Pleated - MERV 8 + 12" Cartridge - MERV11

F = 2" Pleated - MERV 8 + 12" Cartridge - MERV13

G = 2" Pleated - MERV 8 + 12" Cartridge - MERV 14

H = 4" Pleated - 30% Eff.

Feature 7: FILTER OPTIONS

0 =No Filter Options

A = Magnehelic Gauge

B = Clogged Filter Switch

C = Options A + B

D = Magnehelic Gauge - Unit Filter + ERV Filter

F = Clogged Filter Switch - Unit Filter + ERV Filter

G = Options D + F

Feature 8: COIL COATING

0 = No Coil Coating

A = E-coated Cooling and Heating Coils

D = Stainless Steel Coil Casing

E = Option A + D

Feature 9: EXPANSION VALVE

0 =No Expansion Valve

A = Thermal Expansion Valves

<u>Feature 10: EXPANSION VALVE</u> CONTROLS

0 = No Expansion Valve

A = Standard Control

Feature 11: EXTERNAL PAINT

0 = Standard - No Paint

A = AAON Gray Paint

B = Special Paint

7 8 8 9 9 11 11 113 14A 14B B1 B2 B3 H3 - A R B - 3 - 0 - 4 6 1 C - 1 2 F : E 2 1 E - 0 C 0 - F T B - 0 G 0 - 0 0 A A A C 0 0 B $\mathbf{A} \ \mathbf{0} \$ 15 16 16 16 17 17 17 19 19 20 20 22 22 22 23 23

Feature 12: TONNAGE

Model Options

0 = Standard - None

A = 2 ton Capacity

B = 3 ton Capacity

C = 4 ton Capacity

D = 5 ton Capacity

E = 6 ton Capacity

F = 7 ton Capacity

G = 8 ton Capacity

U = 9 ton Capacity

H = 10 ton Capacity

V = 11 ton Capacity

W = 13 ton Capacity

J = 14 ton Capacity

Y = 15 ton Capacity

Z = 16 ton Capacity

K = 17 ton Capacity

1 = 18 ton Capacity

2 = 20 ton Capacity

L = 22 ton Capacity

M = 25 ton Capacity

3 = 26 ton Capacity

N = 30 ton Capacity

P = 31 ton Capacity

Q = 34 ton Capacity

R = 40-45 ton Capacity

S = 50-55 ton Capacity

4 = 60 ton Capacity

T = 63 ton Capacity

5 = 70 ton Capacity

Feature 13: ENERGY RECOVERY TYPE

 $\overline{0}$ = No Energy Recovery Wheel

A = Energy Recovery Wheel - Total + High CFM, Polymer

C = Energy Recovery Wheel - Total + High CFM, 1% Purge, Polymer

E = Energy Recovery Wheel - Sensible + High CFM,

G = Energy Recovery Wheel - Sensible + High CFM, 1% Purge, Polymer

Feature 14: POWER **14A: POWER OPTIONS**

0 =Standard Power Block

14B: ELECTRICAL RATING

0 = Standard - 5 kAIC

J = 10 kAIC

Feature 15: CONTROL PANEL

0 = Internal Control Panel (Top or Bottom Access Required)

Unit Feature Options

B = Medium Control Panel - 25" x 22"

C = Large Control Panel - 48" x 22"

D = Removable Internal Controls Panel (Single Side Access)

Feature 16: SHIPPING SPLITS

0 =No Shipping Splits

A = 1 Shipping Split (2 pallets)

B = 2 Shipping Splits (3 pallets)

C = 3 Shipping Splits (4 pallets)

D = 4 Shipping Splits (5 pallets) E = 5 Shipping Splits (6 pallets)

H = Special Shipping Split (SPA Required)

Feature 17: ENERGY RECOVERY CABINET

 $\overline{0 = \text{No}}$ Energy Recovery Wheel

B = Side RA + Back EA + Back OA Connections

P = OA + Economizer Dampers - Side RA + Back EA + Back OA Connections

Feature 18: PREHEAT

0 = Standard - None

Model Options : Unit Feature Options

Feature 19: EXHAUST FAN

0 = No Exhaust Fan

A = 250 mm Exhaust Fan, 800 W EC Motor

B = 310 mm Exhaust Fan, 1.0 kW EC Motor

D = 355 mm Exhaust Fan, 1.7 kW EC Motor

E = 450 mm Exhaust Fan, 3.0 kW EC Motor

F = 450 mm Exhaust Fan, 6.0 kW EC Motor

G = Dual 310 mm Exhaust Fan, 1.0 kW EC Motor

J = Dual 355 mm Exhaust Fan, 1.7 kW EC Motor

K = Dual 450 mm Exhaust Fan, 3.0 kW EC Motor

L = Dual 450 mm Exhaust Fan, 6.0 kW EC Motor

M = Option A + Piezo Ring

N = Option B + Piezo Ring

Q = Option D + Piezo Ring

R = Option E + Piezo Ring

S = Option F + Piezo Ring

T = Option G + Piezo Rings

V = Option J + Piezo Rings

W = Option K + Piezo Rings

Y = Option L + Piezo Rings

Feature 20: CRATING

0 = Standard - None

A = Export Crating

C = Options A + E

E = Shipping Shrink Wrap

Feature 21: ADDITIONAL CONTROLS2

0 = Standard - None

D = High Condensate Level Switch

Feature 22: WARRANTY

0 = Standard - 1 Year Parts

A = 2 Year Parts Only Warranty (Begins at Date of Shipment)

B = 3 Year Parts Only Warranty (Begins at Date of Shipment)

C = 4 Year Parts Only Warranty

(Begins at Date of Shipment)

D = 5 Year Parts Only Warranty (Begins at Date of Shipment)

Feature 23: TYPE

0 = Standard

X = Special Pricing Authorization

General Information

AAON® H3 Series indoor air handling units have been designed for indoor installation only. Units are assembled, wired, charged with dry nitrogen and run-tested at the factory. H3 Series units are not intended for residential use. Startup and service must be performed by a Factory Trained Service Technician. H3 Series units are intended for installation up to 3500 meters (11,500 ft).

A WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Startup and service must be performed by a Factory Trained Service Technician. A copy of this IOM must be kept with the unit.

A CAUTION

These units must not be used for heating or cooling at any time during any phase of construction. Very low return air temperatures, harmful vapors, and misplacement of the filters will damage the unit and its efficiency.

A CAUTION

This equipment is protected by a standard limited warranty under the condition that initial installation, service, startup and maintenance is performed according to instructions set forth in this manual. This manual must be read in its entirety prior to installation and before performing any service maintenance work.

Equipment described in this manual is available with many optional accessories. If you have questions after reading this manual in its entirety, consult other factory documentation or contact your AAON Sales Representative to obtain further information before manipulating this equipment or its optional accessories

Certification of Cooling Models

- a. Certified as a commercial central air conditioner with or without electrically operated compressors.
- b. Certified for indoor installation only.
- **c.** Certified with refrigerant R-454B coils or with chilled water cooling coils.

Codes and Ordinances

H3 Series units have been tested and certified, by ETL, in accordance with UL Safety Standard 60335-2-40 4th Edition, ANSI Safety Standard Z21.47-2016.

H3 Series units are rated:

- IEC 60529 IPX0
- UL 60335-2-40 Class I Appliance

Size system in accordance with the American Society of Heating, Refrigeration and Air Conditioning Engineers Handbook.

Installation of H3 Series units must conform to the following codes:

- International Mechanical Code (IMC 2018 where revision not specified by State)
- Installation of Air Conditioning and Ventilating Systems Standard (NFPA 90A)
- National Electrical Code (NFPA 70)

Additional conditions for installation outside of these codes may be required for any region, state and/or city within the United States of America. It is the responsibility of the building system designer, qualified technician and person(s) responsible for the operation and maintenance of the AAON equipment to know and adhere to International and local code requirements in conjunction with the requirements of this document.

A CAUTION

The Clean Air Act of 1990 bans the intentional venting of refrigerant as of July 1, 1992. Approved methods of recovery, recycling, or reclaiming must be followed.

A WARNING

Coils and sheet metal surfaces present sharp edges and care must be taken when working with equipment.

A WARNING

Failure to observe the following instructions will result in premature failure of your system and possible voiding of the warranty.

Receiving Unit

When received, check the unit for damage that might have occurred in transit. If damage is found it must be noted on the carrier's Freight Bill. A request for inspection by carrier's agent must be made in writing at once.

Check nameplate to ensure the correct model sizes and voltages have been received to match the job requirements.

If repairs must be made to damaged goods, notify the factory before any repair action is taken in order to protect the warranty. Some alteration, repair, and manipulation of equipment without the manufacturer's consent may void the product warranty. Contact the AAON Technical Support for assistance with handling damaged goods, repairs, and freight claims: (918) 382-6450.

Note: Upon receipt check shipment for items that ship loose such as remote sensors. Consult order and shipment documentation to identify potential loose-shipped items. Loose-shipped items may have been placed inside unit cabinet for security. Installers and owners must secure all doors with locks or nuts and bolts to prevent unauthorized access.

Storage

This equipment is not suitable for outdoor use of storage. If installation will not occur immediately following delivery, store equipment in a dry protected area away from construction traffic and in the proper orientation as marked on the packaging with all internal packaging in place. Secure all loose-shipped items. Unit must be stored in accordance with ASHRAE 15 requirements for machine rooms

Wiring Diagrams

Unit specific wiring diagrams are laminated and affixed inside the controls compartment door.

Installation

AAON equipment has been designed for quick and easy installation. Startup and service must be performed by Factory Trained Service Technician.

The H3 unit can either be shipped assembled or shipped in sections. See the Unit Assembly section of this document for instructions on assembling the sections.

If unit is to be installed indoors, or in areas without sufficient ventilation, provide venting from all pressure relief outlets to outdoors in accordance with ASHRAE 15 requirements.

Locating the Unit

Placement of the unit relative to ductwork, electrical and plumbing must be carefully considered. Return air plenum or duct can be mounted directly to the return air flanges. Use flexible gasket material to seal the duct to the unit.

Verify floor, foundation or suspension support can support the total unit weight, including accessory weights. Unit must be level in both horizontal axes to support the unit and reduce noise and vibration from the unit. If unit is to be installed in areas without sufficient ventilation, provide venting from all pressure relief outlets to outdoors in accordance with ASHRAE 15 requirements.

For units with supplementary electric heat installed with free air discharge, the supply air discharge opening must be located a minimum of 1.83 meters (6 feet) above the finished floor.

Separated combustion gas fired unit combustion air inlets and vent (flue) gas discharges are located in the unit roof. See Figure 1.

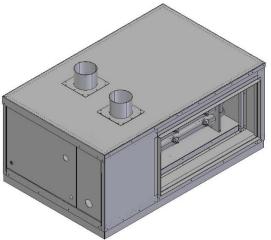


Figure 1 - Gas Heater (81% Separated Combustion shown)

The open combustion gas fired unit has a louvered door instead of the combustion air inlet on the unit roof.

A WARNING

Flue discharge vents must be located at least 120 inches away from any opening through which combustion products could enter the building.

Distances from adjacent public walkways, adjacent buildings, operable windows and building openings, shall conform to local codes and/or the National Fuel Gas Code, ANSI Z223.1/NFPA 54, or the National Gas & Propane Code, CSA B149.1

Heatco duct-furnace Installation Requirements

All unit installations must be in accordance with the National Fuel Gas Code ANSI Z223.1 (NFPA 54) in the United States and Can/CGA-B149 Installation Code in Canada, and all other applicable local codes and ordinances. These requirements include but are not limited to:

- Furnace Location and clearances
- Circulating airflow and ductwork
- Combustion air supply to the heating equipment
- Venting of the products of combustion (flue gases)
- Gas supply, piping and connections Refer to provided Heatco IOM for all installation requirements.

Allow adequate space for piping access and panel removal. To ensure proper access for field service, maintain minimum clearances for field piping and other obstructions as indicated by Table 1 and Table 2. Consult local building codes for additional service clearance requirements.

Condensate drain connection for the coils is located on the access side of the unit. The high efficiency gas heater condensate drain connection is located on the front side of the unit. See Figure 2

Table 1 - H3 Series Clearances (Metric)

Unit Size	Access Side Clearance	All Other Sides ³	Top or Bottom ⁴
H3- A	0.91 meters		55.9 cm
Н3-В			57.2 cm
Н3-С		15.3 cm	68.6 cm
H3- D	1.14 meters		68.6 cm
Н3-Е	1.52 meters		86.4 cm

Table 2 - H3 Series Clearances (Imperial)

Unit	Access Side	All Other	Top or
Size	Clearance	Sides ³	Bottom ⁴
H3- A			22 in.
Н3-В	36 in.		22.5 in.
Н3-С		6 in.	27 in.
H3- D	45 in.		27 in.
Н3-Е	60 in.		34 in.

- 1. Values in table apply to both combustible and non-combustible surfaces.
- 2. Additional clearance may be required to allow for coil removal. See Table 3
- 3. May be installed flush depending upon local codes. Maintain a minimum of 6 inches to combustibles for installation of Heatco duct furnace
- 4. Heatco duct-furnaces with back-toback heat exchanger configuration require 36 in. for each access side. All other applicable installation considerations are also required."
- 5. Top or bottom clearance is 15.2 centimeters (6 inches) if no internal control panel. For units with internal control panel, the clearance in the table is needed for either top or bottom, but not both. The clearance is for supply fan removal.

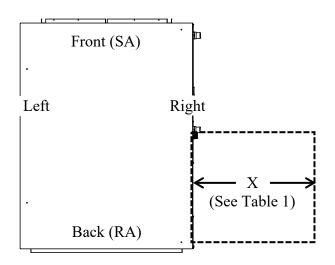


Figure 2 -Minimum Clearance Required for Access to Unit (H3 Series plan view)

Table 3 Coil Removal Clearances

Unit Size	Access Side		Access Side	
Н3-А	0.8 m	2.7 ft		
Н3-В	1.1 m	3.7 ft		
Н3-С	1.6 m	5.2 ft		
H3- D	2.2 m	7.2 ft		
Н3-Е	2.6 m	8.5 ft		

Internal Control Panel

H3 units with internal control panel have removable access panels on the top and bottom of the supply fan section. The supply flanges can be interchanged with the access panels if necessary as the openings have the same dimensions, except on size E.



Figure 3 - H3 internal control panel with top access panel removed.

Floor Mounted Units

Make sure the unit is level and mounted on a field supplied platform with a minimum height to allow for proper depth of the condensate line p-trap. Other installation provisions may be necessary according to job specifications.

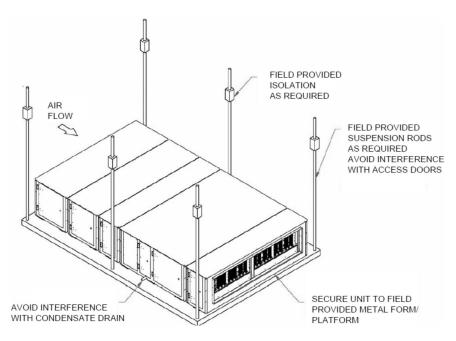


Figure 4 - H3 Series Platform Suspension Installation

Suspended Units

H3 Series horizontal air handling units are equipped for suspended installations. Lift the unit into position by supporting the unit with the skid used for shipping. The air handling unit must be installed level and care must be taken to prevent damage to the cabinet.

Other installation provisions may be necessary according to job specifications. Figure 4 and Figure 5 show factory

recommended methods for suspended installations. It is the responsibility of the specifying engineer or installing contractor to ensure the installation is structurally safe and sound.

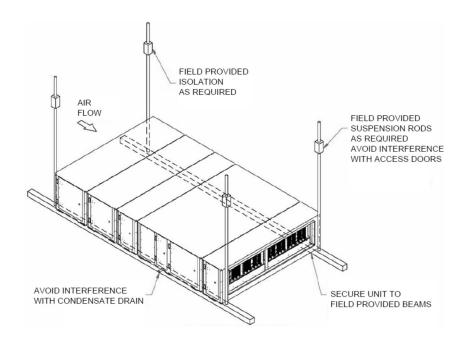


Figure 5 - H3 Series Parallel Beam Suspension Installation

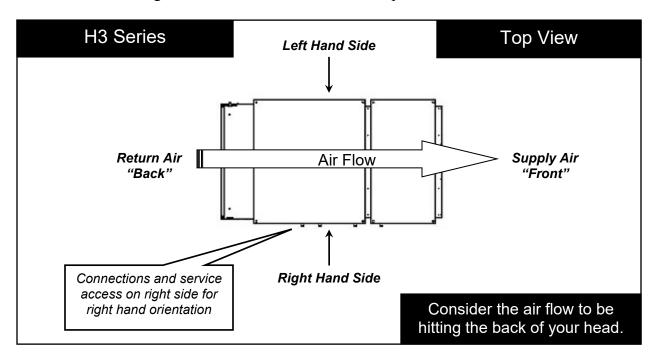


Figure 6 - H3 Series Unit Orientation

Note: Access doors may be on the "left" or "right" side as designated by the unit orientation on the configurator string. "Back" will always be the same side as the pre-filter and return air opening. "Front" will always be the side opposite the pre-filter and return air opening.

Lifting and Handling the Unit

Before lifting unit, be sure that all shipping material has been removed from unit.

Care must be taken if using spreader bars, blocking or other lifting devices to prevent damage to the cabinet, coil or fans.



UNIT HANDLING

Incorrect lifting can cause damage to the unit, injury or death. Lifting equipment capacity must exceed unit weight by an adequate safety factor. Always test lift unit not more than 61 centimeters (24 inches) high to verify proper center of gravity lift point.

Unit Assembly

Although H3 Series units are shipped factory assembled as standard, the unit may be ordered as shipping splits for certain applications such as for assembly in existing structures where modules must be manipulated separately. If the unit was ordered as shipping splits, then they must be assembled in the field.

Locate the schematic in the equipment's literature packet.

1. Identify and Situate Splits

- a. H3 Units can have the following ship split sections:
 - 1. Mixing Box
 - 2. Air Handler
 - 3. Final Filter
 - 4. Electric Heat
 - 5. Energy Recovery
 - 6. Heatco Gas Heater

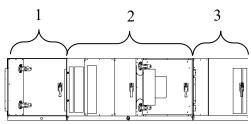


Figure 7 - H3 Schematic with (1) Mixing Box, (2) Air Handler, and (3) Final Filter

2. Connect Power and Control Wiring between sections

H3 Series units are equipped with low and high voltage quick connects to connect wiring from one section to the next. It might be necessary to increase the hole size in the cabinet in order to get the quick connector through the opening. See the Electrical section for more information.



Figure 8 - Low & High Voltage Quick
Connect

A color-coded wiring diagram is laminated and affixed to the inside of the control compartment access door.

H3 Series units are equipped with a single point power connection. Wiring from the unit to external controls and power sources must be provided in the field.

3. Connect Sections

Remove the access side panel from the mixing box by removing the screws. It is also helpful to remove the access side panel from the air handling unit module.



Apply 13 mm (½") thick, 16 mm (5/8") wide adhesive gasket around the edges of the box without the flanges.



Figure 9 - Apply Gasket

Push the mixing box and air handling sections together so that the flange from the air handling section is inside of the mixing box.



Figure 10 - Connect Sections

Use clamps to pull the sections together on the inside of the unit.



Use bar clamps or other non-destructive winching device to pull the tops of the modules together tightly.



Figure 11 - Bar Clamp

At each of the pre-drilled holes in the flange, drill 8mm (5/16") hex head self-tapping screws to secure the two sections together. You may need a screwdriver extension to reach all of them.

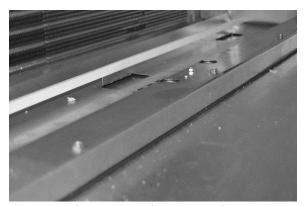


Figure 12 - Flange Overlap

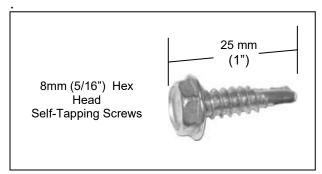


Figure 13 - Self-Tapping Screw

4. Final Sealing

It is very important to keep air from infiltrating the unit cabinet. Seal all piping penetrations with Armaflex, Permagum or other suitable sealant. Also seal around drain connections, electrical connections and all other inlets where air may enter the cabinet. This is especially important when the unit is installed in an unconditioned area.

A CAUTION

Proper sealing of the electrical and piping entries into the unit must be verified. Failure to seal the entries may result in damage to the unit and property.

Control Box

Some H3 units include an external control box that must be mounted in the field. The control box is designed with two mounting holes on the back panel. Make sure the wall fasteners can hold the weight of the control box. See Figure 14

External control boxes provided with conduit exceeding 0.2 m (6ft) in length must have conduit supported in compliance with the National Electrical Code NFPA 70. FMC and LMFC conduit must be supported within 30.5 cm (12 in.) of both the unit and the external control box and at intervals no more than 1.4 m (4.5 ft) along the length.



Figure 14 - Back View External Control Box

Electrical

For units not equipped with incoming power disconnect, means for all pole disconnection must be provided in the fixed wiring in accordance with local or national electrical codes. Verify the unit nameplate agrees with power supply. Connect power and control field wiring as shown on the unit specific wiring diagram provided laminated and attached to the door in the controls compartment.

Table 4 - Nameplate Voltage Markings & Tolerances

Nameplate Nominal System		Operating Voltage Range ¹		Acceptable Performance Range ²		
	Voltage	Voltage	Min	Max	Min	Max
	115	120	104	127	108	126
	208/230	208/240	187	254	187	252
	208	208	187	228	187	228
60	230	240	208	254	216	252
	265	277	240	293	249	291
	460	480	416	508	432	504
	575	600	520	635	540	630
50	230	230	198	254	208	254
30	400	400	344	440	360	440

Notes:

- 1. Operating voltage is the min and max voltage for which the unit can function. Never operate outside of this min and max voltage.
- 2. The Acceptable Performance Range is the min and max voltage for which the unit performance is designed and rated to give acceptable performance.

Route power and control wiring, separately, through the utility entry in the unit. Do not run power and control signal wires in the same conduit.

A WARNING

The foam insulation releases dangerous fumes when it is burnt. Do not cut a foam part with a cutting torch or plasma cutter. Do not weld to a foam filled part.

All units require field supplied electrical overcurrent and short circuit protection. Device must not be sized larger than the Maximum Overcurrent Protection (MOP) shown on the unit nameplate.

Codes may require a disconnect switch be within sight of the unit.

It is recommended that the field installed overcurrent protection or disconnect switch not be installed on the unit.

On units with external control box, electrical supply can enter through either side of the controls compartment.



Figure 15 - External control box electrical connections

On units with internal control panel, electrical supply can enter through the supply air side (front) of the H3 unit.



Figure 16 - H3 internal control panel electrical connections

A single point connection to a terminal block is provided. High voltage conductors must enter the control panel in a separate opening and separate conduit than low voltage conductors.

Field wired disconnecting means of power, external to the unit, must be incorporated in the fixed wiring in accordance with the wiring rules and provide full disconnection of all poles under overvoltage Category III conditions.

A WARNING

Electric shock hazard. Before attempting to perform any installation, service, or maintenance, shut off all electrical power to the unit at the disconnect switches. Unit may have multiple power supplies. Failure to disconnect power could result in dangerous operation, serious injury, death, or property damage.

To pass wires through the wall or roof of the unit, cut a hole and pass the conduit through it. Use the following procedure to cut a round hole in a foam panel.

Cutting Electrical Openings

- 1. Locate the placement of the hole. Be sure that the conduit will not interfere with the operation of any component or prevent access of any door or removable panel. Field cut openings must be a minimum of 15.24 centimeters (6 inches) away from all components and wiring to prevent damage due to drilling or cutting.
- 2. Drill a pilot hole all the way through the foam panel.
- 3. Using a hole saw, cut the hole through the metal on both sides of the foam part.
- 4. With a knife cut the foam out of the hole.
- 5. After the conduit is installed in the hole caulk the entire perimeter of the hole on both sides with an industrial grade silicone sealant or a duct seal compound.

A CAUTION

Proper sealing of the electrical entries into the unit must be verified. Failure to seal the entries may result in damage to the unit and property.

If a larger cut-out is needed for additional duct connections not provided by the factory, it is very important that the foam be completely sealed. Fabricate insulation covers from sheet metal to cover the foam at the cut. Seal the edges and corners not covered using silicone caulking or a duct seal compound.

If a reciprocating saw is used to make the cutout, take care that the metal skins of the foam part do not separate from the foam resulting in reduced structural integrity of the part.

Size supply conductors based on the unit Minimum Current Ampacity (MCA) rating.

Supply conductors must be rated a minimum of 75°C (167°F).

Protect the branch circuit in accordance with code requirements. The unit must be electrically grounded in accordance with local codes, or in the absence of local codes, the current National Electric Code, ANSI/NFPA 70 or the current Canadian Electrical Code CSA C22.1.

Note: Units are factory wired for 208V, 230V, 460V or 575V. In some units, the 208V and 230V options may also be provided in single or three phase configurations. The transformer configuration must be checked by a qualified technician prior to startup.

Wire power leads to the unit's terminal block or main disconnect. All wiring beyond this point has been completed by AAON and cannot be modified without effecting the unit's agency/safety certification.

Supply voltage must be within the min/max range shown on the unit nameplate. Available short circuit current must not exceed the short circuit current rating (SCCR) shown on the unit nameplate.

A CAUTION

Three phase voltage imbalance will cause motor overheating and premature failure.

Three phase voltage imbalance will cause motor overheating and premature failure. The maximum allowable imbalance is 2%.

Voltage imbalance is defined as 100 times the maximum deviation from the average voltage divided by the average voltage. Example:

(221V+230V+227V)/3 = 226V, then 100*(226V-221V)/226V = 2.2%, which exceeds the allowable imbalance.

Check voltage imbalance at the unit disconnect switch and at the compressor terminal. Contact your local power company for line voltage corrections.

A qualified technician must check for proper motor rotation and check blower motor amperage listed on the motor nameplate is not exceeded.

A CAUTION

Rotation must be checked on all MOTORS of three phase units. Supply fan motors must all be checked by a qualified service technician at startup and any wiring alteration must only be made at the unit power connection.

Wire control signals to the unit's low voltage terminal block located in the controls compartment.

If any factory installed wiring must be replaced, use a minimum 105°C (221°F) type AWM insulated conductors.

Thermostat Control Wiring

If a thermostat is used for unit control, locate the thermostat on an inside wall that is between 1.2 and 1.5 meters (4 - 5 feet) above the floor where it will not be subjected to drafts, sun exposure, or heat from electrical fixtures of appliances. Control wiring must deliver adequate voltage to components to assure proper operation. Control voltage returning from controller circuit must be a minimum of 21 VAC. To assure proper wiring use the following chart to determine the allowable wiring distances.

Table 5 - Control Wiring

	,	
Wire Size (Standard) Copper Conductors Only	Total Wire Distance Allowable	
20 AWG	60.96 m	200 ft
18 AWG	106.7 m	350 ft
16 AWG	152.4 m	500 ft
14 AWG	228.6 m	750 ft
12 AWG	381.0 m	1250 ft

Total Wire Distance Allowable = (Quantity of Control Wires) x (Control Wire Distance)

Take the total wire distance allowable and divide by the number of wires to be connected. This indicates the distance allowable for that size wire. The wiring to the unit must not exceed the total wire distance allowable. If the voltage at the connectors is less than 21 VAC, isolation relays must be installed. If under external control 21 VAC must be field verified.

All external devices must be powered via a separate external power supply.

Example:

A total of 8 wires must be pulled 75 ft (22.9 m) to a control the unit. What size wire must be used?

According to the Table 5, 16 AWG allows for 63ft (500 ft/8 wires) and 14 AWG allows for 94ft (750 ft/8 wires). Thus, 14 AWG must be used.

A CAUTION

Ensure that wires are protected from damage and wear caused by normal operation of unit and environmental factors.

Fuses and Circuit Breakers

The interrupting rating of fuses and circuit breakers is to be determined based on the KAIC rating of the unit. Refer to the wiring diagram for fuse sizing.

Table 6 - 35 KAIC Fuse Sizing

35 KAIC Construction			
Component	Description	Interrupting Rating (kA)	
Fuse	Class CC, 600V, 0.5A - 30A	200	
Fuse	Class J, 600V, 35A - 600A	200	
Disconnect	3P, 600V, 15A - 600A	35	

Table 7–65 KAIC Fuse Sizing

65 KAIC Construction			
Component	Description	Interrupting Rating (kA)	
Fuse	Class CC, 600V, 0.5A - 30A	200	
Fuse	Class J, 600V, 35A - 600A	200	
Disconnect	3P, 600V, 15A - 600A	65	

Duct Connection

Attach duct to flanges provided on the unit. The installer is responsible for sealing ducts to the flanges to prevent water leaks.

See Figure 6 for return and supply air duct locations. Size the ductwork in accordance with the ASHRAE Handbook. Ductwork must be installed in accordance with NFPA Standard 90A.

When attaching duct to the unit, use a flexible/compressible material rated for duct connections. A 7.6 centimeter (3 inch) flexible connector for both return and supply duct connections is recommended.

Condensate Drain Pans

Units require field installed drain p-traps and lines to be connected to the condensate drain pans of the unit.

For condensate drain lines, the line must be the same pipe size or larger than the drain connection, include a p-trap, and pitch downward toward drain. Use an air break with long runs of condensate lines. See Installation section of this manual for more information.

A CAUTION

Do not operate unit without a p-trap. Failure to install a p-trap may result in overflow of condensate water.

Condensate Drain Piping

A p-trap and drain line must be installed on the drain connection, with the p-trap not to exceed 15.25 cm (6") from the drain connection. The lines must be the same pipe size or larger than the drain connection, include a p-trap, and pitch downward toward drain. Use an air break with long runs of condensate lines.

A CAUTION

Use an emergency drain pan for all applications where a risk of water damage to surrounding structure or furnishings. Refer to local codes.

Draw-through cooling coils will have a negative static pressure in the drain pan area. This will cause an un-trapped drain to back up due to air being pulled up through the condensate drain piping.

Condensate drain trapping and piping must conform to all applicable governing codes.

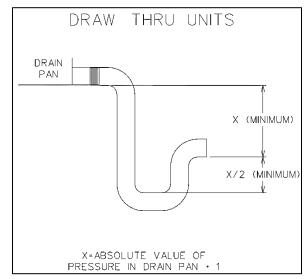


Figure 17 - Drain Trap

Note: The drain pan connection is a 24.4mm (1") MPT fitting.

The X dimension on the draw-through trap must be at least equal to the absolute value of the negative static pressure in the drain pan plus 2.54 centimeters (one inch). To calculate the static pressure at the drain pan add the pressure drops of all components upstream of the drain pan, including the cooling coil, and add the return duct static pressure. Include the dirt allowance pressure drop for the filters to account for the worst-case scenario.

The height from top of the bottom bend of the trap to the bottom of the leaving pipe must be at least equal to one half of the X dimension. This ensures that enough water is stored in the trap to prevent losing the drain seal during unit startup

Note: The absolute value of the fan inlet pressure will always be greater than or equal to the absolute value of the static pressure in the drain pan on draw-through units, so the fan inlet pressure is a safe value to use for the drain pan static pressure.

Table 8 - Drain Trap Dimensions (Metric)

Draw-Through			
Drain Pan Pressure	Trap Dimensions		
Negative Static	X	X/2	
(mm of mercury)	(mm)	(mm)	
-0.93	38.10	19.05	
-1.87	50.80	25.40	
-2.80	63.50	31.75	
-3.74	76.20	38.10	
-4.67	88.90	44.45	
-5.60	101.60	50.80	
-6.54	114.30	57.15	
-7.47	127.00	63.50	

Table 9 – Drain Trap Dimensions (Imperial)

Draw-Through		
Drain Pan Pressure	Trap Dimensions	
Negative Static	X	X/2
(inches of water)	(in.)	(in.)
-0.50	1.50	0.75
-1.00	2.00	1.00
-1.50	2.50	1.25
-2.00	3.00	1.50
-2.50	3.50	1.75
-3.00	4.00	2.00
-3.50	4.50	2.25
-4.00	5.00	2.50

Startup

(See back of the manual for startup form)



Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Startup and service must be performed by a Factory Trained Service Technician. A copy of this IOM must be kept with the unit.

A WARNING

Electric shock hazard. Shut off all electrical power to the unit to avoid shock hazard or injury from rotating parts.

During startup, it is necessary to perform routine checks on the performance of the unit. This includes checking of the air flow, the air filters and refrigerant charge.

Filters

Do not operate the unit without filters in place. Operation of the equipment without filters in place can result in clogged coils. Units are shipped with the selected filters installed. If filters have been removed during installation, open the filter access door and re-install the correct filters with the airflow indicator arrows pointing in the direction of airflow.

Check filters after a few days of operation after the unit has been started up as dust and debris from construction may cause premature filter loading. Replace the filters if necessary.

Supply Fans

H3 Series units are equipped with direct drive backward curved plenum supply fan assemblies that deliver the air volume specified according to unit size and job requirements.

Fan Air Flow Adjustment

For single set screw applications, tighten the set screw to the required torque setting Table 10 using a calibrated torque wrench. For double set screw applications, tighten one set screw to half of the required torque setting Table 10 using a calibrated torque wrench. Tighten the second set screw to the full

required torque setting then tighten the first set screw to the full required torque setting.

Table 10 - Plenum Fan Set Screw Specifications

SET SCREW DIAMETER	TORQUE (Nm [IN-LBS])
6.4 mm (1/4")	9 [80]
7.9 mm (5/16")	14.2 [126]
9.5 mm (3/8")	27.12 [240]

The gap tolerances that are allowed between the blower and the inlet cone for the plenum fan blowers are shown in Figure 19. The inlet cone can be moved as necessary to center the cone in relation to the blower. The blower can be moved on the motor shaft to set the correct overlap. These tolerances are critical to the performance of the blower.

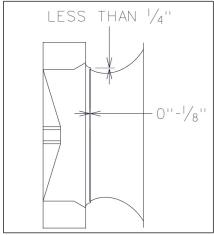


Figure 18 - Plenum Fan Gap Tolerances

On some H3 Series units, a specific air volume is delivered by the fans with Electronically Commutated Motors (ECM). Field air flow adjustment may be required at startup.

Electrically Commutated Motor Airflow Adjustment

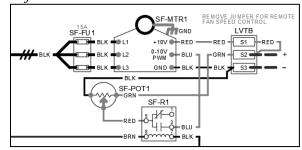


Figure 19 - Typical wiring diagram with EC motor

If the application is for the motor to run at a constant speed, the potentiometer can be utilized without any change. If the application is to vary the motor speed for changing conditions, remove the jumper indicated on the terminal strip (red wire).

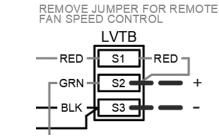


Figure 20 - Shows the jumper that is to be removed (jumped between S1 and S2).

Note, the potentiometer is still active in the electrical loop. Refer to Figure 20.

Set the potentiometer dial for the maximum fan speed for a particular application. Maximum fan speed is determined by the ECat submittal. Typically, this max speed will be the rpm set at the factory.



Figure 21 - Potentiometer

The fan speed can be modulated using the 0-10 VDC input signal.

To check fan output from the factory, the potentiometer can be dialed to 100%. By sending a 5V signal*, for instance, the rpm can be measured and this reading can be converted to cubic meters (cubic feet) of air moved by the fan.

It is advised that a medium range signal* be utilized for this procedure. The highest signal sent by the controller can then be determined by adjustment.

A CAUTION

Before completing startup and leaving the unit a complete operating cycle must be observed to verify that all components are functioning properly.

Operation

Unit operations must be controlled with thermostat or unit controller, never at the main power supply, except for emergency or complete shutdown of the unit.

Refrigerant Detection System

Each unit is equipped with a Refrigerant Detection System (RDS) to detect leaked refrigerant within the conditioned airstream and in the cabinet. The RDS consists of refrigerant detection sensors in the conditioned airstream and cabinet connected to a corresponding mitigation board. In the event of a refrigerant leak, the RDS sensors will send an alarm to the mitigation board. Each A2L mitigation board is equipped with alarm output in the form of a NO/NC relay.

Applications using AAON VCC-X controls: In the event of an airstream RDS alarm, the compressor operation is disabled and the

compressor operation is disabled and the indoor blower is enabled to provide circulation airflow in accordance with UL 60335-2-40. In the event of a Cabinet or Gas Heat RDS alarm, compressor operation and gas heat operation is disabled. The indoor blower, and any form of heat other than gas, will resume normal operation. RDS alarm outputs are available via **BACNet** communication through the VCC-X controller.

For applications not using AAON VCC-X controls, mitigation board outputs will be wired to the low voltage terminal block.

In all cases, the mitigation board and VCCX-X board will remain in alarm state for five minutes after the RDS sensor has cleared the alarm below the concentration setpoint.

For VAV applications and applications utilizing zone dampers, the VAV boxes and zone dampers must be wired to the mitigation board output to open all VAV boxes and zone dampers to allow for the required circulation airflow to prevent stagnation of leaked refrigerant. Other applications requiring additional refrigerant leak mitigation measures as required by local code and ASHRAE 15 may be notified of detected refrigerant by this alarm output.

Verify functionality of RDS by removing sensor connection at the mitigation board and ensuring that all sequences above take place, including the opening of VAV boxes and zone dampers and additional mitigation procedures, if applicable. Refer to the *A2L Mitigation Board Technical Guide* for operation. See Figure 22 for sensor location.

Smoke control procedures may override the RDS alarm functions.



Refrigerant sensors may only be replaced with manufacturer approved sensors.

A CAUTION

Certain applications may allow the unit to bring in unconditioned air. Freeze protection needs to be considered in the final application.

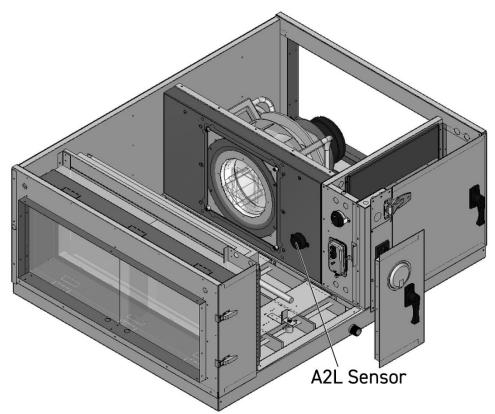


Figure 22 A2L Sensor Location

A CAUTION

Additional mitigation procedures or fault conditions initiated outside of AAON controls are the responsibility of the Building Engineer and must give appropriate priority in accordance with local codes.

Thermostat Operation

Heating

Thermostat system switch - "Heat"
Thermostat fan switch - "Auto" or "On"
Thermostat temperature set to desired point.

Cooling

Thermostat system switch - "Cool"
Thermostat fan switch - "Auto" or "On"
Thermostat temperature set to desired point.

Air Circulation

Thermostat system switch - "Off"
Thermostat fan switch - "Auto" or "On"
No change of the thermostat temperature.
With these settings, the supply blower will run continuously but the supply air will not be heated, cooled, or dehumidified.

System Off

Thermostat system switch - "Off"
Thermostat fan switch - "Auto"
No change of the thermostat temperature.
With these settings the system is shut down, with the exception of control system power.

Night and Weekend Unoccupied Operation

To reduce the operating time of the unit when the space is unoccupied, such as nights and weekends, it is recommended that the temperature setting be raised about -15 °C (5°F) while unoccupied during the cooling season and lowered about -12.2°C (10°F) during the heating season.

Split System DX Cooling Operation and Control

When a call for cooling (G and Y1, Y2, etc.) is made the supply blower motors and compressors will energize.

Chilled Water or Non-Compressorized DX Cooling Operation

Valve controls for chilled water cooling coil and non-compressorized DX coil are by others.

Steam or Hot Water Preheating Operation

Valve control for steam and hot water heating coils are by others. Heating is accomplished by passing steam or hot water through the steam or hot water coil assembly.

Electric Heating Operation

When a call for heating (G and W1, W2, etc.) is made the supply fan motors and electric resistance heaters will energize. Heating is accomplished by passing electrical current through a specified amount of resistance heaters which will produce the required heat.

On a fault condition the main limit located in the supply air or the auxiliary limit located downstream the supply blower will remove power from all contactors.

Gas Heater Operation

When heat (G and W1, W2, etc.) is called for the combustion motor starts and the ignition control is energized. See Gas Heater section for more details.

Refrigerant sensors are located near the gas heat section to detect leaked refrigerant. See Refrigerant Detection System section for more information.

Maintenance

(See back of the manual for maintenance log.)

At least once each year, a qualified service technician must check out the unit. Inspect supply fans, evaporator coils and air filters monthly.

A WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a qualified installer. A copy of this IOM must be kept with the unit.

Periodically during operation, it is necessary to perform routine service checks on the performance of the unit. This includes checking of the air flow, the air filters, condenser water flow and refrigerant charge.

See Startup section for information on air flow adjustment and refrigerant charge adjustment.

DX Cooling

Set unit controls to cooling mode of operation with supply fans on. Check the fans for correct operating direction, amperage and voltage.

Condensate Drain Pans

Drain pans will have moisture present and require periodic cleaning to prevent microbial growth. Cleaning of the drain pans will also prevent any possible plugging of the drain lines and overflow of the pan itself. Cleaning of the drain pans and inside of the unit must be done only by qualified personnel.

Winterizing Coils

In some cases it may be necessary to winterize water coils to prevent them from freezing.

First completely drain the coils. There is a drain located below the 'water in' connection and a vent connection located above the 'water out' connection. Auxiliary drain piping can also be added to exterior water piping if yearly winterizing is necessary.

After the coil is drained, fill with an antifreeze solution using a circulating pump. Then thoroughly drain.

Supply Fans

A CAUTION

Blower wheels must be inspected for excessive dust build up periodically and cleaned if required. Excessive dust build up on blower wheels may cause an unbalanced state; leading to vibration and/or component failure. Damages due to excessive dust build up will not be covered under factory warranty.

A WARNING

Electric shock hazard. Shut off all electrical power to the unit to avoid shock hazard or injury from rotating parts.

E-Coated Coil Cleaning

Documented routine cleaning of e-coated coils is required to maintain coating warranty coverage for fin and tube and microchannel coils. See the AAON E-Coated Coil Maintenance Record sheet.

A WARNING

Electric shock hazard. Shut off all electrical power to the unit to avoid shock hazard or injury from rotating parts.

Surface loaded fibers or dirt must be removed prior to water rinse to prevent restriction of airflow. If unable to back wash the side of the coil opposite of the coils entering air side, then surface loaded fibers or dirt must be removed with a vacuum cleaner. If a vacuum cleaner is not available, a *soft non-metallic* bristle brush may be used. In either case, the tool must be applied in the direction of the fins. Coil surfaces can be easily damaged (fin edges bent over) if the tool is applied across the fins.

Use of a water stream, such as a garden hose, against a surface loaded coil will drive the fibers and dirt into the coil. This will make cleaning efforts more difficult. Surface loaded fibers must be completely removed prior to using low velocity clean water rinse.

Α monthly clean water rinse is recommended for coils that are applied in coastal or industrial environments to help to remove chlorides, dirt, and debris. It is very when important rinsing, that temperature is less than 54.4°C (130°F) and pressure is less than 689.5 kpa (100 psig) to avoid damaging the fin edges. An elevated water temperature (not to exceed 54.4°C [130°F]) will reduce surface tension, increasing the ability to remove chlorides and dirt.

A CAUTION

High velocity water from a pressure washer or compressed air should only be used at a very low pressure to prevent fin and/or coil damages. The force of the water or air jet may bend the fin edges and increase airside pressure drop. Reduced unit performance or nuisance unit shutdowns may occur.

A CAUTION

Harsh chemicals, household bleach, or acid cleaners should not be used to clean outdoor or indoor e-coated coils. These cleaners can be very difficult to rinse out of the coil and can accelerate corrosion and attack the E-coating. If there is dirt below the surface of the coil, use the recommended coil cleaners.

For routine quarterly cleaning, first clean the coil with the below approved coil cleaner. After cleaning the coils with the approved cleaning agent, use the approved chloride remover to remove soluble salts and revitalize the unit.

Recommended Coil Cleaner

The following cleaning agent, when used in accordance with the manufacturer's directions, has been approved for use on ecoated coils to remove mold, mildew, dust, soot, greasy residue, lint, and other particulate:

- Enviro-Coil Cleaner: AAON PN: V82540
- GulfClean TM Coil Cleaner; AAON PN: G074480

Recommended Chloride Remover

GulfClean Salt ReducerTM ; AAON PN: G074490

GulfClean Salt ReducerTM is used to remove soluble salts from the e-coated coil, follow the manufacturer's instructions. This product is not intended for use as a degreaser. Any grease or oil film must first be removed with GulfClean TM Coil Cleaner.

Remove Barrier - First ensure the power to the unit is off and locked out. Clean the area around the unit if needed to ensure leaves, grass or loose debris will not be blown into the coil. Soluble salts adhere themselves to the substrate. For the effective use of this product, the product must be able to come in contact with the salts. These salts may be beneath any soils, grease or dirt; therefore, these barriers must be removed prior to application of this product. As in all surface preparation, the best work yields the best results.

Application - Apply GulfClean TM Coil Cleaner directly onto the substrate. Sufficient product must be applied uniformly across the substrate to thoroughly wet out surface, with no areas missed. This may be accomplished by use of a pump-up sprayer or conventional spray gun. Apply the cleaner to unit interior air exiting side coil surfaces first. Work in sections/panels moving side to side and from top to bottom. Allow the cleaning solution to soak for 5 to 10 minutes. Then move on to the exterior using the same method.

Rinse - Using pressurized potable water such as a garden hose, (< 689.5 kpa [100 psi]), rinse the coils and continue to always work in sections/panels.

Continue until all coil areas on the inside of the unit have been rinsed. Note: Coils must always be cleaned / back flushed, opposite of airflow to prevent impacting the dirt into the coil.

Repeat these steps with GulfClean TM Salt Reducer. When finished replace all panels and tops that were removed.

Refrigerant Removal and Evacuation

If removal of refrigerant is required for any maintenance or servicing, conventional procedures must be used and removal of refrigerant must be in accordance with local and national regulations.

Safety precautions must be taken prior to beginning work to ensure that the risk of fire due to flammable refrigerants is minimized. Work is to be undertaken under a controlled procedure to reduce the amount of refrigerant vapor present while work is being performed. All maintenance staff and others working in the area are to be instructed on the nature of work being performed. Care should be taken to ensure that working in a confined space is avoided.

Check area with a refrigerant detector suitable for use with the refrigerant prior to and during work in order to be aware of potential flammable environment. Keep a dry powder or CO2 fire extinguisher nearby if any hot work is being performed.

Ensure that work area is sufficiently ventilated before breaking into the system. Ventilation must continue throughout all of the work. Ensure that ventilation safely removes flammable refrigerant to an area that will adequately disperse refrigerant to avoid concentration above flammable levels.

Refrigerant must be recovered into the correct recovery cylinders in accordance with local and national regulations. Recovery

A WARNING A

Prior to performing work that can result in release of a flammable refrigerant, inspect area to ensure it is free of any potential ignition sources. "No Smoking" signs are to be displayed while performing work.

cylinders must be labeled properly. Ensure that the correct number of cylinders are available for holding the entire charge of the system. Cylinders must have pressure relief and shut-off valves that are in proper working order. Fully evacuate a recovery cylinder before use.

The recovery equipment must be in good working order with a set of instructions concerning the equipment that is at hand. Ensure that equipment is suitable for the recovery of flammable refrigerant used. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales must be available and in good working order. Ensure hoses are complete with leak-free disconnect couplings and in good condition.

When removing refrigerant to open the system, evacuate the system and flush or purge the system continuously with an inert gas when using a flame to open the circuit. The system must be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerant. Compressed air or oxygen must not be used. When pulling a vacuum, ensure that the outlet of the vacuum pump is not near any potential ignition source and in a well ventilated area.

The recovered refrigerant is to be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged.

Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. Do not heat the compressor body by using an open flame or other ignition sources to accelerate this process. Remove any drained oil safely.

Options

Heating Coils

One or two row hot water and steam heating and preheating coils can be factory installed. These coils are supplied from a building hot water source. All valve controls for heating coil operation are field supplied and field installed. Hot water and steam coil connections are spun copper tube.

Connect the steam heating supply to the top of the coil and the return to the bottom.

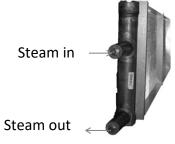


Figure 23 - Steam Distributing Piping

Table 11 - Steam Distributing Coil Sweat Connection Sizes

Model (H3-)	Supply ar Connection	
A-E	5.4 cm	2 1/8"

Air handling units with steam heating coils MUST BE installed high enough to allow for a minimum of 0.31 meters (1 foot) condensate drop leg off of the steam coil, or as recommended by the steam trap manufacturer. Lines must be insulated with approved insulation and be properly fastened, sloped, and supported according to local code requirements.

Table 12 - Hot Water Coil Sweat Connection Sizes

Model (H3-)	Supply and Return Connection Size (OD)					
A	2.2 cm	7/8"				
В	2.9 cm	1 1/8"				
С	3.5 cm	1 3/8"				
D & E	4.1 cm	1 5/8"				

Connect the hot water heating supply to the bottom of the coil and return to the top.



Figure 24 - Hot & Chilled Water Piping

Do not subject water coils to entering air temperatures below 3.3°C (38°F) to prevent coil freeze-up. If air temperature across the coil is going to be below this value, use a glycol solution to match the coldest air expected.

Water supply lines must be insulated, properly fastened, drained, and supported according to local code requirements.

Chilled Water Coil

Factory installed four, six or eight row chilled water cooling coils can be factory mounted. These coils are supplied from a building chilled water source. All valve controls for the cooling coil operation are field supplied and field installed.

Table 13 - Chilled Water Coil Sweat Connection Sizes

Model (H3-)	11 0	and Return n Size (OD)
A	2.9 cm	1 1/8"
В	3.5 cm	1 3/8"
С	4.1 cm	1 5/8"
D & E	5.4 cm	2 1/8"

Connect the chilled water supply to the bottom of the coil and return to the top.

Water supply lines must be insulated with closed cell type pipe insulation or insulation that includes a vapor barrier. Lines must be properly fastened, drained and supported according to local code requirements, and job specifications.

Table 14 – Minimum and Maximum Coil Pressures and Temperatures

		Chilled Water	Hot Water			
Min. Entering Air	3	15.6°C (60°F)	4.4 °C (40°F)			
Max Entering Air		37.8°C (100°F)	26.7°C (80°F)			
Min. Entering Water	3	1.7°C (35°F)	60°C (140°F)			
Max Entering Water	5	18.3°C (65°F)	93.3°C (200°F)			
Min. Water Pressure		103 kpa (15 psig)				
Max Water Pressure		2068kpa ((300 psig)			

A WARNING

Piping shall be in accordance with national and local codes. Pressure limiting devices, backflow preventers and all other safety requirements are the sole responsibility of the installing contractor.

A CAUTION

Ensure water piping entries into the unit are properly sealed. Failure to seal the entries may result in damage to the unit and property.

A CAUTION

CRANKCASE HEATER OPERATION

Some units are equipped with compressor crankcase heaters, which must be energized at least 24 hours prior to cooling operation, to clear any liquid refrigerant from the compressors.

Direct Expansion (DX) Systems

All DX refrigerant coils are factory charged with a nitrogen holding charge. All DX systems include evaporator coils and thermal expansion valves (TXV).

Never turn off the main power supply to the unit, except for servicing, emergency, or complete shutdown of the unit. When power is cut off from the unit, crankcase heaters cannot prevent refrigerant migration into the split system condensing unit compressors. This means the compressor may cool down and liquid refrigerant may accumulate in the compressor. The compressor is designed to pump refrigerant gas and damage may occur when power is restored.

If power to the unit must be off for more than an hour, turn the thermostat system switch to "OFF", or turn the unit off at the control panel, and leave the unit off until the main power switch has been turned on again for at least 24 hours for units with compressor crankcase heaters. This will give the crankcase heater time to clear any liquid accumulation out of the compressor before it is started.

Always control the unit from the thermostat, or control panel, never at the main power supply, except for emergency or complete shutdown of the unit.

During the cooling season, if the air flow is reduced due to dirty air filters or any other reason, the cooling coils can get too cold which will cause excessive liquid to return to the compressor. As the liquid concentration builds up, oil is washed out of the compressor, leaving it starved for lubrication.

The compressor life will be seriously shortened by reduced lubrication and the pumping of excessive amounts of liquid oil and refrigerant.

Note: Low Ambient Operation

Air-cooled DX units without a low ambient option, such as condenser fan cycling or the -17.8°C (0°F) low ambient option, will not operate in the cooling mode of operation properly when the outdoor temperature is below 12.8°C (55°F). Low ambient and/or economizer options are recommended if cooling operation below 12.8°C (55°F) is expected.

Evaporator Coil

The air handling unit coils are pressurized. The copper caps must be punctured to permit a gradual escape of the pressure prior to unsweating those caps. Immediately couple the tubing to the indoor unit to avoid exposing the coils to moisture. A properly sized filter drier is furnished in the condenser. When making solder connections, make sure dry nitrogen flows through the lines, when heating the copper, to prevent oxidization

inside of the copper. Field piping between the condensing unit and the air handler is required. Line sizes must be selected to meet actual installation conditions, not simply based on the connection sizes.



REFRIGERANT PIPING

Line sizes must be selected to meet actual installation conditions, not simply based on the connection sizes at the condensing unit or air handling unit.

Thermal Expansion Valve

Thermal expansion valve bulbs must be mounted with good thermal contact on a horizontal section of the suction line close to the evaporator, but outside the cabinet, and well insulated. On suction lines less than or equal to 22.2 mm (7/8") OD, mount in the 12 o'clock position. On suction lines greater than 22.2 mm (7/8") OD, mount in either the 4 o'clock or 8 o'clock position.

 


Figure 25 - TXV Bulb Position

Hot Gas Reheat

Hot Gas Reheat (HGRH) is available for use with DX systems that need humidity control. The AAON modulating hot gas reheat system diverts hot discharge gas from the condenser to the air handling unit through the hot gas line. Field piping between the condensing unit and the air handler is required. Line sizes must be selected to meet actual installation conditions, not simply based on the connection sizes.

The line delivers the hot discharge gas to the reheat coil and/or the hot gas bypass valve, so it is sized as a discharge line.

Hot Gas Bypass

Hot Gas Bypass is available for use with DX systems that may experience low suction pressure during the operating cycle. This may be due to varying load conditions associated with VAV applications or units supplying a large percentage of outside air. Hot Gas Bypass is not necessary in units with variable capacity compressors. The system is designed to divert refrigerant from the compressor discharge to the low pressure side of the system in order to keep the evaporator from freezing and to maintain adequate refrigerant velocity for oil return at minimum load.

Hot discharge gas is redirected to the evaporator inlet via an auxiliary side connector (ASC) to false load the evaporator when reduced suction pressure is sensed. Field piping between the condensing unit and the evaporator is required. Line sizes must be selected to meet actual installation conditions, not simply based on the connection sizes.

Purge Circuit

The purge circuit is required on hot gas reheat or hot gas bypass lines. The purge circuit needs to be field furnished and installed at the lowest point of the line set.

With this installation, oil drains into the drain leg of the hot gas reheat line. Oil accumulates until it reaches the level of the 3.2 mm (1/8") OD capillary tubing.

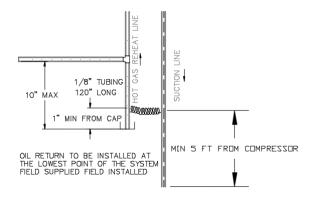


Figure 26 - Hot Gas Purge Circuit

The combination of capillary action and the pressure difference between the hot gas reheat line (high pressure) and the suction line (low pressure) causes the oil to travel through the capillary tube into the suction line of the first circuit to return the oil to the compressor. The capillary tube connection to the suction line of the first circuit must be a minimum of 1.5 meters (5 feet) from the inlet to the compressor to allow the oil time to dissipate into the suction vapor and not slug the compressor with liquid oil.

Adjusting Refrigerant Charge

Adjusting the charge of a system in the field must be based on determination of liquid subcooling and evaporator superheat. On a system with a TXV, liquid sub-cooling is more representative of the charge than evaporator superheat but both measurements must be taken.

When charge is adjusted in the field, the total system charge must be written on the decal near the nameplate using a permanent marker. Ensure that the space served by the unit has a sufficient floor area in accordance with Table 17.

A CAUTION

The Clean Air Act of 1990 bans the intentional venting of refrigerant (CFC's and HCFC's) as of July 1, 1992. Approved methods of recovery, recycling or reclaiming must be followed. Fines and/or incarceration may be levied for non-compliance.

Before Charging

Refer to the Unit Nameplate to determine which refrigerant must be used to charge the system.

Unit being charged must be at or near full load conditions before adjusting the charge.

Units equipped with hot gas bypass must have the hot gas bypass valve closed to get the proper charge.

Units equipped with hot gas reheat must be charged with the hot gas reheat valves closed while the unit is in cooling mode to get the proper charge. After charging, operate the unit in reheat (dehumidification) mode to check for correct operation.

Units equipped with heat pump options must be charged in cooling mode to get the proper charge. After charging, operate the unit in heating mode to check for correct charge. Charge may need to be adjusted for heating mode. If adjustments are made in the heating mode, cooling mode must be rerun to verify proper operation. After adding or removing charge the system must be allowed to stabilize, typically 10-15 minutes, before making any other adjustments.

The type of unit and options determine the ranges for liquid sub-cooling and evaporator superheat. Refer to the tables below when determining the proper sub-cooling.

For units equipped with low ambient (-17.78°C [0°F]) option see the special charging instructions in the CF Series Installation and Operation Manual.

Checking Liquid Sub-Cooling
Measure the temperature of the liquid line as it leaves the condenser coil.

Read the gauge pressure at the liquid line close to the point where the temperature was taken. Use liquid line pressure as it will vary from discharge pressure due to condenser coil pressure drop.

Convert the pressure obtained to a saturated temperature using the appropriate refrigerant temperature-pressure chart.

Subtract the measured liquid line temperature from the saturated temperature to determine the liquid sub-cooling.

Compare calculated sub-cooling to the table below for the appropriate unit type and options.

Table 15 - Acceptable Refrigeration Circuit Values

	Cooling Mode Liquid Sub- Cooling Values (°C)	Cooling Mode Liquid Sub-Cooling Values (°F)
Cooling Only Unit ⁴	4.4 - 8.3	8-15
Cooling Only Unit with Hot Gas Reheat ^{1,4}	2.8 - 8.3	5-15
Heat PumpUnit ^{2,4}	1.1 - 2.2	2-4
Heat Pump Unit with Hot Gas Reheat ^{3,4}	1.1 - 3.3	2-6
Cooling Only Unit with LAC ⁴	4.4 - 8.3	8-15
Cooling Only Unit with Hot Gas Reheat & LAC ⁴	4.4 - 8.3	8-15

Notes:

- 1. Must be charged with the hot gas valve closed. After charging, operate the unit in reheat (dehumidification) mode to check for correct operation.
- 2. The sub-cooling value in this table is for the unit running in cooling mode of operation. If unit is a heat pump, operate the unit in heating mode to check for correct operation after charging in cooling.
- 3. The sub-cooling value in this table is for the unit running in cooling mode of operation and the hot gas valve closed. After charging, operate the unit in reheat (dehumidification) mode to check for correct operation and then in heating mode to check for correct operation.
- 4. Sub-cooling must be increased by 0.6°C (1°F) per 3.1 meters (10 feet) of vertical liquid line rise for R-454B (AHU above CU). For example, a cooling only unit with hot gas reheat and a vertical liquid drop can charge to a sub-cooling value between 2.8 and 8.3°C (5-15°F), but a cooling only unit with hot gas reheat and a vertical liquid rise of 9.1 m (30 ft) must charge to a sub-cooling value of at least between 4.4 and 8.3°C (8-15°F). DO NOT OVERCHARGE. Refrigerant overcharging leads to excess refrigerant in the condenser coils resulting in elevated compressor discharge pressure.

Table 16 - Acceptable Microchannel Air-Cooled Condenser Coil Liquid Sub-Cooling Values (Metric)

		Cooling Mode Liquid Sub-Cooling Values(°C)											
Ambient		Evaporator Coil Saturation Temperature (°C)											
(°C)	4.4	7.2	8.9	10.0	12.8								
19.4	5.0 - 7.8	4.4 - 7.2	4.4 - 7.2	3.9 - 6.7	2.8 - 5.6								
22.2	5.6 - 8.3	5.0 - 7.8	5.0 - 7.8	4.4 - 7.2	3.9 - 6.7								
27.8	5.6 - 8.3	5.6 - 8.3	5.6 - 8.3	5.0 - 7.8	3.9 - 6.7								
35.0	5.6 - 8.3	5.6 - 8.3	5.6 - 8.3	5.0 - 7.8	4.4 - 7.2								
40.6	6.1 - 8.9	6.1 - 8.9	5.6 - 8.3	5.6 - 8.3	4.4 - 7.2								
46.1	5.6 - 8.3	6.1 - 8.9	6.1 - 8.9	6.1 - 8.9	5.0 - 7.8								

		Cooling Mode Liquid Sub-Cooling Values(°F)										
Ambient		Evaporator Coil Saturation Temperature (°F)										
(°F)	40	45	48	50	55							
67	9 - 14	8 - 13	8 - 13	7 - 12	5 - 10							
72	10 - 15	9 - 14	9 - 14	8 - 13	7 - 12							
82	10 - 15	10 - 15	10 - 15	9 - 14	7 - 12							
95	10 - 15	10 - 15	10 - 15	9 - 14	8 - 13							
105	11 - 16	11 - 16	10 - 15	10 - 15	8 - 13							
115	10 - 15	11 - 16	11 - 16	11 - 16	9 - 14							

Table 17 - Acceptable Microchannel Air-Cooled Condenser Coil Liquid Sub-Cooling Values (Imperial)

Notes:

- 1. Microchannel condenser coils are more sensitive to charge. The system must be running in cooling mode with compressor, supply airflow & condenser fan speed at full load. The subcooling value changes depending on the ambient temperature reading and the evaporator coil saturation temperature. To find the correct sub-cooling value, find the ambient temperature on the first column and follow that across to the SST (4.4-12.8°C [40-55°F]).
- 2. Superheat for Microchannel condenser coils must be between 4.4 and 8.3°C (8 15°F).

Checking Evaporator Superheat

Measure the temperature of the suction line close to the evaporator.

Read gauge pressure at the suction line close to the evaporator.

Convert the pressure obtained to a saturated temperature using the appropriate refrigerant temperature-pressure chart.

Subtract the saturated temperature from the measured suction line temperature to determine the evaporator superheat.

Compare calculated superheat to the acceptable cooling mode superheat values between 4.4 and 8.3°C (8 - 15°F) for all system types. Superheat will increase with long suction line runs.

For refrigeration systems with tandem compressors, it is critical that the suction superheat setpoint on the TXV is set with one compressor running. The suction superheat must be between 5.6 and 7.2°C (10-13°F) with one compressor running. The suction superheat will increase with compressors in a tandem running. Inadequate suction superheat can allow liquid refrigerant to return to the compressors which will wash the oil out of the compressor. Lack of oil lubrication will destroy a compressor. Measure liquid sub-cooling with both a refrigeration system compressors in running.

A CAUTION

Thermal expansion valve must be adjusted between 4.4 and 8.3°C (8-15°F) of suction superheat. Failure to have sufficient superheat will damage the compressor and void the warranty.

Adjusting Sub-Cooling and Superheat Temperatures

The system is overcharged if the sub-cooling temperature is too high and the evaporator is fully loaded (low loads on the evaporator result in increased sub-cooling) and the evaporator superheat is within the temperature range as shown in the table above (high superheat results in increased sub-cooling).

Correct an overcharged system by reducing the amount of refrigerant in the system to lower the sub-cooling.



DO NOT OVERCHARGE!

Refrigerant overcharging leads to excess refrigerant in the condenser coils resulting in elevated compressor discharge pressure. Maximum allowable charge is 130.4 kg (4600 oz). See Table 17.

If the sub-cooling is correct and the superheat is too high, the TXV may need adjustment to correct the superheat. Before adjusting the TXV, verify the sensing bulb is in the correct position according to Figure 23 and follow the guidelines below.

- 1. The suction line is clean where the sensing bulb is attached.
- 2. The entire length of the sensing bulb is in contact with the suction line.
- 3. Place the sensing bulb several centimeters (inches) downstream of the equalizer line.
- 4. The sensing bulb is fully insulated.
- 5. If the sensing bulb is installed on a vertical portion of the suction line, place the sensing bulb upstream of suction line trap.

Table 18 - Minimum Circulation Airflow and Room Area for a Given Charge

Charge	o of	Min Circ	ulation		Minir	num Roon	num Room Area in m² (ft²)			
Largest Ci			Airflow in		(6 ft)	3 m (10 ft)	3.7 m	(12 ft)	
_	kg (oz)				ceiling/release		, ,		ceiling/	
	,		,	hei	ght	height		hei	ght	
1.4	50	144	85	5	57	3	34	3	28	
1.9	66	190	112	7	76	4	45	3	37	
2.3	82	236	139	9	94	5	56	4	46	
2.8	98	282	166	10	112	6	67	5	55	
3.2	114	328	193	12	131	7	78	6	64	
3.7	130	374	220	14	149	8	89	7	72	
4.1	146	419	247	16	167	9	100	8	81	
4.6	162	465	274	17	186	10	111	8	90	
5.0	178	511	301	19	204	11	122	9	99	
5.5	194	557	328	21	222	12	133	10	108	
6.0	210	603	355	22	241	13	144	11	117	
6.4	226	649	382	24	259	14	155	12	126	
6.9	242	695	409	26	277	15	166	13	135	
7.3	258	741	436	27	296	16	177	13	144	
7.8	274	787	463	29	314	17	188	14	153	
8.2	290	833	490	31	332	19	199	15	162	
8.7	306	879	517	33	351	20	210	16	171	
9.2	326	937	551	35	373	21	224	17	182	
9.6	340	977	575	36	389	22	234	18	189	
10.2	360	1034	609	38	412	23	247	19	201	
10.8	380	1092	643	40	435	24	261	20	212	
11.3	400	1149	676	43	458	26	275	21	223	
12.0	424	1218	717	45	486	27	291	22	236	
12.7	448	1287	758	48	513	29	308	23	250	
13.4	472	1356	798	50	541	30	324	24	263	
14.1	496	1425	839	53	568	32	341	26	276	
14.7	520	1494	879	55	596	33	357	27	290	
15.4	544	1563	920	58	623	35	374	28	303	
16.3	576	1655	974	61	660	37	396	30	321	
17.2	608	1747	1028	65	696	39	418	31	339	
18.1	640	1839	1082	68	733	41	440	33	357	
19.1	672	1931	1136	72	770	43	462	35	374	
20.0	704	2023	1191	75	806	45	484	36	392	
20.9	736	2115	1245	78	843	47	506	38	410	
21.8	768	2207	1299	82	880	49	528	40	428	

Table 19 - Minimum Circulation Airflow and Room Area for a Given Charge (continued)

Char	go of	Min Circ	ulation		Minir	num Roon	num Room Area in m² (ft²)			
	ge of Circuit in	Min Circ Airflo		1.8 m	1.8 m (6 ft)		3 m (10 ft)		(12 ft)	
_	(oz)	m³/hr			release'		release	ceiling/		
				hei	ght	hei	height		ght	
22.7	800	2299	1353	85	916	51	550	41	446	
23.6	832	2391	1407	89	953	53	572	43	464	
24.5	864	2482	1461	92	990	55	594	45	481	
25.4	896	2574	1515	95	1026	57	616	46	499	
26.3	928	2666	1569	99	1063	59	638	48	517	
27.2	960	2758	1623	102	1100	61	660	50	535	
28.1	992	2850	1678	106	1136	63	682	51	553	
28.6	1010	2902	1708	107	1157	64	694	52	563	
30.1	1060	3046	1793	113	1214	68	729	55	591	
31.5	1110	3189	1877	118	1271	71	763	57	619	
32.9	1160	3333	1962	123	1329	74	797	60	646	
34.3	1210	3477	2046	129	1386	77	832	63	674	
35.7	1260	3620	2131	134	1443	80	866	65	702	
37.1	1310	3764	2215	139	1501	84	900	68	730	
38.6	1360	3908	2300	145	1558	87	935	70	758	
40.0	1410	4051	2385	150	1615	90	969	73	786	
41.4	1460	4195	2469	155	1672	93	1003	76	814	
42.8	1510	4339	2554	161	1730	96	1038	78	841	
44.2	1560	4482	2638	166	1787	100	1072	81	869	
45.6	1610	4626	2723	171	1844	103	1107	83	897	
47.1	1660	4770	2807	177	1901	106	1141	86	925	
48.5	1710	4913	2892	182	1959	109	1175	89	953	
49.9	1760	5057	2976	187	2016	112	1210	91	981	
51.3	1810	5201	3061	193	2073	116	1244	94	1009	
52.7	1860	5344	3146	198	2131	119	1278	96	1036	
54.1	1910	5488	3230	203	2188	122	1313	99	1064	
55.6	1960	5632	3315	209	2245	125	1347	101	1092	
57.0	2010	5775	3399	214	2302	128	1381	104	1120	
59.5	2100	6034	3551	223	2405	134	1443	109	1170	
62.4	2200	6321	3721	234	2520	140	1512	114	1226	
65.2	2300	6608	3890	245	2635	147	1581	119	1282	
68.0	2400	6896	4059	255	2749	153	1649	124	1337	
70.9	2500	7183	4228	266	2864	160	1718	129	1393	
73.7	2600	7470	4397	277	2978	166	1787	135	1449	
76.5	2700	7758	4566	287	3093	172	1856	140	1505	
79.4	2800	8045	4735	298	3207	179	1924	145	1560	
, ,,,,	2000	5575	7,33	230	3201	1,3	1727	173	1300	

Table 20 - Minimum Circulation Airflow and Room Area for a Given Charge (continued)

				Minimum Room Area in m ² (ft ²)						
Charg Largest C kg (d	ircuit in	Airflo	Min Circulation Airflow in m³/hr (CFM)		Airflow in 1.8 m (6 ft)		3 m (ceiling/	3 m (10 ft) ceiling/release height		(12 ft) release ght
82.2	2900	8332	4904	309	3322	185	1993	150	1616	
85.0	3000	8620	5073	319	3436	192	2062	155	1672	
87.9	3100	8907	5243	330	3551	198	2131	160	1727	
90.7	3200	9194	5412	341	3665	204	2199	166	1783	
93.6	3300	9482	5581	351	3780	211	2268	171	1839	
96.4	3400	9769	5750	362	3895	217	2337	176	1895	
99.2	3500	10056	5919	372	4009	223	2405	181	1950	
102.1	3600	10344	6088	383	4124	230	2474	186	2006	
104.9	3700	10631	6257	394	4238	236	2543	192	2062	
107.7	3800	10918	6426	404	4353	243	2612	197	2118	
110.6	3900	11206	6595	415	4467	249	2680	202	2173	
113.4	4000	11493	6765	426	4582	255	2749	207	2229	
116.2	4100	11780	6934	436	4696	262	2818	212	2285	
119.1	4200	12068	7103	447	4811	268	2887	217	2340	
121.9	4300	12355	7272	458	4925	275	2955	223	2396	
124.7	4400	12642	7441	468	5040	281	3024	228	2452	
127.6	4500	12930	7610	479	5155	287	3093	233	2508	
130.4	4600	13217	7779	490	5269	294	3161	238	2563	

Table 21 - Minimum Airflow for Non-Ducted Applications by Box Size

Box Size	Maximum C Single Circu	•	Minimum A Non-Ducted A in m³/h r	pplications
Α	20.1	706	705	415
В	36.9	1300	1201	707
С	70.9	2500	2241	1319
D	99.2	3500	3264	1921
Е	130.4	4600	4815	2834

Table 22 - R-454B Refrigerant Temperature-Pressure Chart (Metric)

°C	KPA	°C	KPA	°C	KPA	°C	KPA	°C	KPA
-6.7	484.5	8.3	843.3	23.3	1348.0	38.3	2034.6	53.3	2946.9
-6.1	495.6	8.9	859.3	23.9	1370.0	38.9	2064.1	53.9	2985.7
-5.6	506.9	9.4	875.3	24.4	1392.2	39.4	2093.9	54.4	3024.9
-5.0	518.2	10.0	891.6	25.0	1414.6	40.0	2123.9	55.0	3064.5
-4.4	529.7	10.6	908.1	25.6	1437.3	40.6	2154.3	55.6	3104.5
-3.9	541.5	11.1	924.8	26.1	1460.3	41.1	2185.0	56.1	3144.9
-3.3	553.3	11.7	941.7	26.7	1483.5	41.7	2216.1	56.7	3185.8
-2.8	565.4	12.2	958.8	27.2	1507.0	42.2	2247.4	57.2	3227.0
-2.2	577.6	12.8	976.2	27.8	1530.8	42.8	2279.1	57.8	3268.6
-1.7	589.9	13.3	993.7	28.3	1554.8	43.3	2311.1	58.3	3310.7
-1.1	602.5	13.9	1011.5	28.9	1579.0	43.9	2343.5	58.9	3353.2
-0.6	615.2	14.4	1029.4	29.4	1603.6	44.4	2376.2	59.4	3396.1
0.0	628.1	15.0	1047.6	30.0	1628.4	45.0	2409.2	60.0	3439.5
0.6	641.2	15.6	1066.0	30.6	1653.5	45.6	2442.6	60.6	3483.3
1.1	654.4	16.1	1084.7	31.1	1678.8	46.1	2476.2	61.1	3527.6
1.7	667.8	16.7	1103.5	31.7	1704.4	46.7	2510.3	61.7	3572.3
2.2	681.4	17.2	1122.6	32.2	1730.4	47.2	2544.7	62.2	3617.4
2.8	695.2	17.8	1141.9	32.8	1756.6	47.8	2579.4	62.8	3663.0
3.3	709.2	18.3	1161.5	33.3	1783.0	48.3	2614.5	63.3	3709.2
3.9	723.3	18.9	1181.3	33.9	1809.9	48.9	2650.0	63.9	3755.7
4.4	737.6	19.4	1201.3	34.4	1836.9	49.4	2685.7	64.4	3802.7
5.0	752.2	20.0	1221.5	35.0	1864.3	50.0	2721.9	65.0	3850.3
5.6	766.9	20.6	1242.0	35.6	1891.9	50.6	2758.5	65.6	3898.4
6.1	781.8	21.1	1262.8	36.1	1919.8	51.1	2795.4		
6.7	796.9	21.7	1283.7	36.7	1948.1	51.7	2832.7		
7.2	812.2	22.2	1304.9	37.2	1976.7	52.2	2870.4		
7.8	827.7	22.8	1326.3	37.8	2005.5	52.8	2908.4		

Table 23 - R-454B Refrigerant Temperature-Pressure Chart (Imperial)

°F	PSIG	°F	PSIG	°F	PSIG	°F	PSIG	°F	PSIG
20	70.3	47	122.3	74	195.5	101	295.1	128	427.4
21	71.9	48	124.6	75	198.7	102	299.4	129	433.0
22	73.5	49	127.0	76	201.9	103	303.7	130	438.7
23	75.2	50	129.3	77	205.2	104	308.0	131	444.5
24	76.8	51	131.7	78	208.5	105	312.5	132	450.3
25	78.5	52	134.1	79	211.8	106	316.9	133	456.1
26	80.3	53	136.6	80	215.2	107	321.4	134	462.0
27	82.0	54	139.1	81	218.6	108	326.0	135	468.0
28	83.8	55	141.6	82	222.0	109	330.6	136	474.1
29	85.6	56	144.1	83	225.5	110	335.2	137	480.2
30	87.4	57	146.7	84	229.0	111	339.9	138	486.3
31	89.2	58	149.3	85	232.6	112	344.6	139	492.6
32	91.1	59	151.9	86	236.2	113	349.4	140	498.8
33	93.0	60	154.6	87	239.8	114	354.3	141	505.2
34	94.9	61	157.3	88	243.5	115	359.1	142	511.6
35	96.9	62	160.1	89	247.2	116	364.1	143	518.1
36	98.8	63	162.8	90	251.0	117	369.1	144	524.6
37	100.8	64	165.6	91	254.8	118	374.1	145	531.3
38	102.9	65	168.5	92	258.6	119	379.2	146	538.0
39	104.9	66	171.3	93	262.5	120	384.3	147	544.7
40	107.0	67	174.2	94	266.4	121	389.5	148	551.5
41	109.1	68	177.2	95	270.4	122	394.8	149	558.4
42	111.2	69	180.1	96	274.4	123	400.1	150	565.4
43	113.4	70	183.1	97	278.4	124	405.4		
44	115.6	71	186.2	98	282.5	125	410.8		
45	117.8	72	189.3	99	286.7	126	416.3		
46	120.0	73	192.4	100	290.9	127	421.8		

Energy Recovery Units

Some H3 units have been equipped with an energy recovery wheel. This section is provided to assure the energy recovery feature will be properly setup to perform in accordance with the job specifications for your particular application.

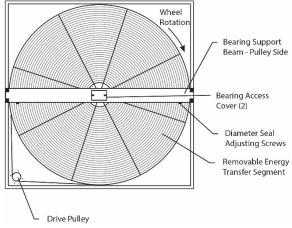


Figure 27 - Energy Recovery Wheel

The Energy Recovery Cassette consists of a frame wheel, wheel drive system, and energy transfer segments. Segments are removable for cleaning or replacement. The segments rotate through counter flowing exhaust and outdoor air supply streams where they transfer heat and/or water vapor from the warm, moist air stream to the cooler and/or drier air stream.

The initial setup and servicing of the energy recovery wheel is very important to maintain proper operation efficiency and building occupant comfort.

Normal maintenance requires periodic inspection of filters, the cassette wheel, drive belts, air seals, wheel drive motor, and its electrical connections.

Wiring diagrams are provided with each motor. When wired according to wiring diagram, motor rotates clockwise when viewed from the shaft/pulley side.

By carefully reviewing the information within this section and following the instructions, the risk of improper operation and/or component damage will be minimized.

It is important that periodic maintenance be performed to help assure trouble free operation.

Initial Mechanical Check and Setup Outdoor air intake adjustments must be made according to building ventilation, or local

according to building ventilation, or local code requirements.

After the unit installation is complete, open the cassette access door and determine that the energy wheel rotates freely when turned by hand. Apply power and observe that the wheel rotates at approximately 30 RPM. If the wheel does not rotate when power is applied, it may be necessary to readjust the "diameter air seals".

Handle cassettes with care. Lift all cassettes by the bearing support beam. Holes are provided on both sides of the bearing support beams to facilitate rigging as shown in the following illustration.

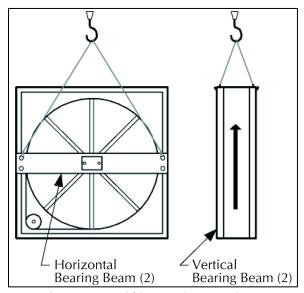


Figure 28 - Lifting Hole Locations

Polymer Energy Recovery Wheel

This section is provided to assure the energy recovery feature will be properly setup to perform in accordance with the job specifications for your particular application.


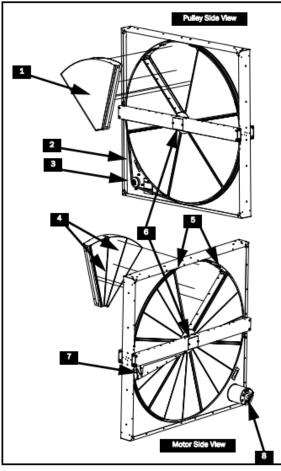


Figure 29 - Polymer Energy Recovery Wheel


- 1. Removable Segment
- 2. Permanent Tension Belt
- 3. Pulley
- 4. Embedded Segment Stiffeners
- 5. Segment Retaining Latches
- 6. Bearing Beam and Bearing Access Cover Plate (Diameter Seals are behind Bearing Beam on both sides)
- 7. Adjustable Purge
- 8. Motor

Polymer Wheel Set Purge Angle

When installed, the purge angle is factory set to 5 degrees. If a different angle is required, complete the following steps to adjust the purge:

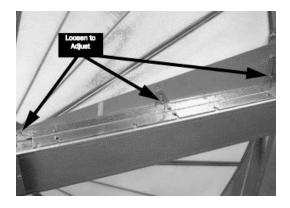

- 1. Loosen the three purge adjusting screws.
- 2. Adjust purge sector to the specified angle.

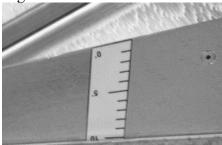

- 3. Tighten the purge adjusting screws.
- 4. Turn the wheel by hand clockwise (when viewed from pulley side) to check for interference.

Polymer Wheel Check Purge Seal


If a purge is installed, check for a slight interference fit between the seal and the face of the wheel by sliding a piece of paper ("feeler gauge") between the seal and the media a multiple locations along the purge seal as you rotate the wheel slowly by hand (clockwise when viewed from the pulley side). Verify that the media slightly grabs the paper during rotation.



If it is necessary to adjust a purge seal to the face of the wheel, loosen the two or three screws along the bearing beam and adjust to the proper distance from the media surface. Tighten the screws and retest the seal.

Polymer Wheel Air Seal Adjustments

Pile type air seals across both sides of the energy wheel diameter are factory adjusted to provide close clearance between the air seal and wheel.

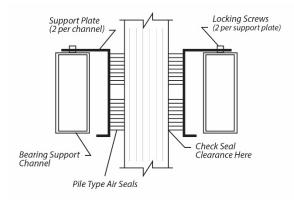

Cross Section of Air Seal Structure

Racking of the unit or cassette during installation, and/or mounting of the unit on a non-level support or in other than the factory orientation can change seal clearances. Tight seals will prevent rotation.

Polymer Wheel to Air Seal Clearance

To check wheel to seal clearance; first disconnect power to the unit, in some units the energy recovery wheel assembly can be pulled out from the cabinet to view the air seals. On larger units, the energy recovery wheel may be accessible inside the walk-in cabinet.

A business card or two pieces of paper can be used as a feller gauge, (typically each 1 mm [.004"] thick) by placing it between the face of the wheel and pile seal.


Using the paper, determine if a loose slip fit exist between the pile seal and wheel when the wheel is rotated by hand.

To adjust air seal clearance, loosen all seal plate retaining screws holding the separate seal retaining plates to the bearing support channels and slide the seals plates away from the wheel. Using the paper feeler gauge, readjust and retighten one seal plate at a time to provide slip fit clearance when the wheel is rotated by hand.

Confirm that the wheel rotates freely. Apply power to the unit and confirm rotation. Visually inspect the belt and ensure the belt is tracking near the center of the rim. Verify the wheel speed is approximately 45-50 RPM. Confirm there is no excessive noise such as scraping, brushing, or banging.

Polymer Wheel Orientation & Support

The Energy Recovery Cassette may be mounted in any orientation. However, Care must be taken to make certain that the cassette frame remains flat and the bearing beams are not racked.

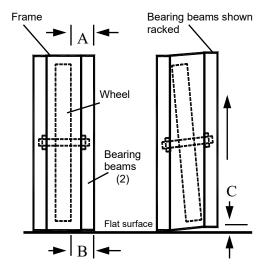

Avoid Racking of Cassette Frame

To verify, make certain that the distance between wheel rim and bearing beam is the same at each end of the bearing beam, to within 6.4 mm (1/4") (dimension A & B). This amount of racking can be compensated for by adjusting the diameter seals.


If greater than 1/4 inch (dimension C), racking must be corrected to ensure that drive belt will not disengage from wheel.

Polymer Wheel Startup


Open the access door and determine that the energy recovery wheel rotates freely when turned by hand with no interference noise. Apply power and observe that the wheel rotates. If the wheel does not rotate when power is applied, it may be necessary to readjust the "diameter air seals".

- By hand, turn wheel clockwise (as viewed from the pulley side), to verify wheel turns freely through 360° rotation.
- 2. Before applying power to drive motor, confirm wheel segments are fully engaged in wheel frame and segment retainers are completely fastened. (See Segment Installation Diagram).

- 3. With hands and objects away from moving parts, activate unit and confirm wheel rotation. Wheel rotates clockwise (as viewed from the pulley side).
- 4. If wheel has difficulty starting, turn power off and inspect for excessive interference between the wheel surface and each of the four (4) diameter seals. To correct, loosen diameter seal adjusting screws and back adjustable diameter seals away from surface of wheel, apply power to confirm wheel is free to rotate, then re-adjust and tighten hub and diameter seals, as shown in hub seal adjustment diagram.
- 5. Start and stop wheel several times to confirm seal adjustment and to confirm belt is tracking properly on wheel rim (approximately 6.4 mm [1/4"] from outer edge of rim).

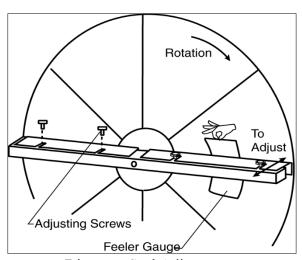

Diameter Seal Adjustment

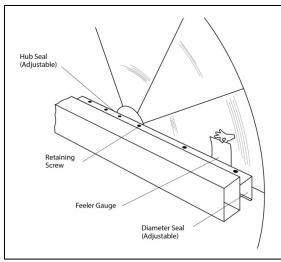

Hub Seal Adjustment

Controls

A variety of controls and electrical accessories may be provided with the equipment. Identify the controls on each unit by consulting appropriate submittal, or order documents, and operate according to the control manufacturer's instructions. If you cannot locate installation, operation, or maintenance information for the specific controls, then contact your sales representative, or the control manufacturer for assistance.



Do not alter factory wiring. Deviation from the supplied wiring diagram will void all warranties, and may result in equipment damage or personal injury. Contact the factory with wiring discrepancies.

Aluminum Wheel Cleaning

See general energy recovering cleaning section for how often to clean.

To clean, gain access to the aluminum energy recovery wheel then use the following methods:

- Use a brush or vacuum cleaner to remove small materials.
- Use compressed air at a distance of at least 0.6 m (2 ft) from the wheel. Too much pressure can easily damage the aluminum media.
- First remove the energy recovery wheel from the unit. Then use water at a distance of at least 0.6 m (2 ft) from the wheel. Do not use detergents. Keep temperature below 25°C (77°F). Tightly cover all electric parts and bearings while used pressurized water. Remove excess water before reinstalling the wheel.

Polymer Energy Recovery Cleaning

To clean, gain access to the polymer energy recovery wheel, remove the segments, then use the following methods:

- Soak in the solution until grease and tar deposits are loosened (Note: some staining of the desiccant may remain and is not harmful to performance).
- Before removing, rapidly run finger across surface of segment to separate polymer strips for better cleaning action.
- Rinse dirty solution from segment and remove excess water before reinstalling in wheel.

A CAUTION

Do not use acid based cleaners, aromatic solvents, steam or temperatures in excess of 170°F; damage to the wheel may occur!

Polymer Wheel Segment Installation & Replacement

An uneven number of segments in the wheel will cause the wheel to accelerate in rotation. Minimize wheel imbalance and unwanted rotation during service by installing or

removing opposing segments for even weight distribution. Failure to maintain control of the wheel rotation while removing or installing all segments could cause severe injury to fingers or hands. Always close and secure segment retaining latches before rotating wheel.


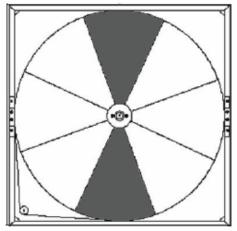


Figure 30 - Wheel Segment Removal Pattern


Wheel segments are secured to the wheel frame by a Segment Retainer which pivots on the wheel rim and is held in place by Segment Retaining Latches.

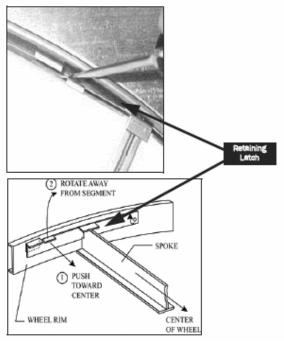

Segment Retainer

To install wheel segments, follow the steps below. Reverse procedure for segment removal.

- 1. Disconnect power from the wheel.
- 2. Gain access to the wheel and slide wheel frame out of cabinet.
- 3. Unlock two segment retainers (one on each side of the selected segment opening.
- 4. With the embedded stiffener facing the motor side, insert the nose of the segment between the hub plates.

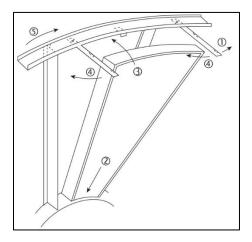

Segment Installation

- 5. Holding segment by the two outer corners, press the segment towards the center of the wheel and inwards against the spoke flanges. If hand pressure does not fully seat the segment, insert the flat tip of a screw driver between the wheel rim and outer corners of the segment and apply downward force while guiding the segment into place.
- 6. Close and latch each Segment Retainer under Segment Retaining Catch.
- 7. Slowly rotate the wheel 180°. Install the second segment opposite the first for counterbalance. Rotate the two installed segments 90° to balance the wheel while the third segment is installed. Rotate the wheel 180° again to install the fourth segment opposite the third. Repeat this sequence with the remaining four segments.

Polymer Wheel Air Seals

Four adjustable diameter seals are provided on each cassette to minimize transfer of air between the counter flowing airstreams.

To adjust diameter seals, loosen diameter seal adjusting screws and back seals away from wheel surface. Rotate wheel clockwise until two opposing spokes are hidden behind the bearing support beam. Using a folded piece of paper as a feeler gauge, position paper between the wheel surface and diameter seals.

Adjust seals towards wheel surface until a slight friction on the feeler gauge (paper) is detected when gauge is moved along the length of the spoke. Retighten adjusting screws and recheck clearance with "feeler" gauge.

Polymer Wheel Drive Components

The wheel drive motor bearings are prelubricated and no further lubrication is necessary.

The wheel drive pulley is secured to the drive motor shaft by a combination of either a key or D slot and set screw.

The set screw is secured with removable locktite to prevent loosening. Annually confirm set screw is secure. The wheel drive belt is a urethane stretch belt designed to provide constant tension through the life of the belt. No adjustment is required. Inspect the drive belt annually for proper tracking and tension. A properly tensioned belt will turn the wheel immediately after power is applied with no visible slippage during startup.

Polymer Wheel Drive Motor and Pulley Replacement

- 1. Disconnect power to wheel drive motor.
- 2. Remove belt from pulley and position temporarily around wheel rim.
- 3. Loosen set screw in wheel drive pulley using a hex head wrench and remove pulley from motor drive shaft.
- 4. While supporting weight of drive motor in one hand, loosen and remove (4) mounting bolts.
- 5. Install replacement motor with hardware kit supplied.
- 6. Install pulley to dimension as shown and secure set screw to drive shaft.
- 7. Stretch belt over pulley and engage in groove.
- 8. Follow start-up procedure.

Polymer Wheel Belt Replacement


- 1. Obtain access to the pulley side bearing access plate if bearing access plates are provided. Remove two bearing access plate retaining screws and the access plate.
- 2. Using hexagonal wrench, loosen set screw in bearing locking collar. Using light hammer and drift (in drift pin hole) tap collar in the direction of wheel rotation to unlock collar. Remove collar.
- 3. Using socket wrench with extension, remove two nuts which secure bearing housing to the bearing support beam. Slide bearing from shaft. If not removable by hand, use bearing puller.
- 4. Form a small loop of belt and pass it through the hole in the bearing support beam. Grasp the belt at the wheel hub and pull the entire belt down.

Note: Slight hand pressure against wheel rim will lift weight of wheel from inner race of bearing to assist bearing removal and installation.

A CAUTION

Protect hands and belt from possible sharp edges of hole in Bearing Support Beam.

- 5. Loop the trailing end of the belt over the shaft (belt is partially through the opening).
- 6. Reinstall the bearing onto the wheel shaft, being careful to engage the two locating pins into the holes in the bearing support beam. Secure the bearing with two self-locking nuts.
- 7. Install the belts around the wheel and pulley according to the instructions provided with the belt.
- 8. Reinstall diameter seals or hub seal and tighten retaining screws. Rotate wheel in clockwise direction to determine that wheel rotates freely with slight drag on seals.
- 9. Reinstall bearing locking collar. Rotate collar by hand in the direction the wheel rotates (see label provided on each cassette for wheel rotation).
- 10. Lock in position by tapping drift pin hole with hammer and drift. Secure in position by tightening set screw.
- 11. Reinstall Bearing Access Cover.
- 12. Apply power to wheel and ensure that the wheel rotates freely without interference.

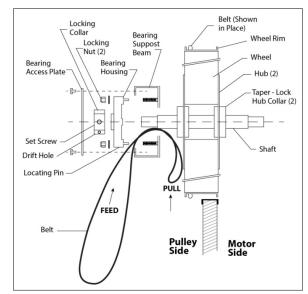

Belt Replacement

Energy Recovery Wheel General Cleaning Routine maintenance of the Energy Recovery Wheel includes periodic cleaning of the Energy Recovery Wheel as well as inspection of the Air Seals and Wheel Drive Components.

A CAUTION

Disconnect electrical power before servicing energy recovery cassette. Always keep hands away from bearing support beam when installing or removing segments. Failure to do so could result in severe injury to fingers or hand.

Cleaning the energy transfer media will help maintain optimal performance. The frequency of cleaning is largely dependent on the application and air quality. Use ASHRAE's Classes of Air categories, to create a routine cleaning schedule.

Class 1 air has low contaminant concentration with inoffensive odor and sensory irritation intensity.

Class 2 air has moderate contaminant concentration, with mildly offensive odors or sensory-irritation intensity.

Class 3 air has significant contaminant concentration and significant offensive odor or sensory-irritation intensity.

Class 4 air has highly objectionable fumes or gases and potentially contains dangerous particles, bio-aerosols, or gases at a concentration high enough to be considered harmful, not suitable for recirculation or transfer to any other space.

Class of Air	Examples	Cleaning Frequency	
Class 1 Clean Air	OfficesClassroomsAssembly roomsChurches	Every 8-10 years	
Class 2 Moderately Clean Air	 Restrooms Swimming pools Dining rooms Locker rooms Warehouse Dorms 	Every 4-6 years	
Class 3 Dirty Air	 Kitchens Dry cleaners Beauty salons Laboratories Pet shops 	Every 1-2 years	
Class 4 Contaminated Air	Paint spray boothsLaboratory fume exhaustKitchen grease exhaust	Do not use in this application	

The energy recovery wheel is "self-cleaning" with respect to dry particles due to its laminar flow characteristics. Smaller particles pass through; larger particles land on the surface and are blown clear as the flow direction is reversed. Any material that builds up on the face of the wheel can be removed with a brush or vacuum. The primary need for cleaning is to remove oil based aerosols that have condensed on energy transfer surfaces.

A characteristic of all dry desiccants, such films can close off micron sized pores at the surface of the desiccant material, reducing the efficiency by which the desiccant can adsorb and desorb moisture and also build up so as to reduce airflow.

In a reasonably clean indoor environment such as a school or office building, measurable reductions of airflow or loss of sensible (temperature) effectiveness may not occur for several years. Measurable changes

in latent energy (water vapor) transfer can occur in shorter periods of time in applications such as moderate occupant smoking or cooking facilities. In applications experiencing unusually high levels of occupant smoking or oil based aerosols such as industrial applications involving the ventilation of machine shop areas for example, annual washing of energy transfer may be necessary to maintain latent transfer efficiency. Proper cleaning of the energy recovery wheel will restore latent effectiveness to near original performance.

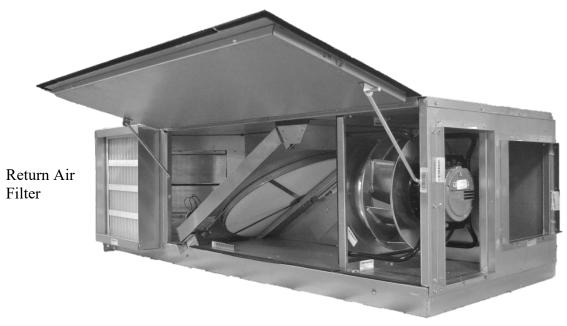


Figure 31 - H3 A or B Cabinet Energy Recovery Wheel H3 size A & B return air filters - access through top and bottom of the filter box.

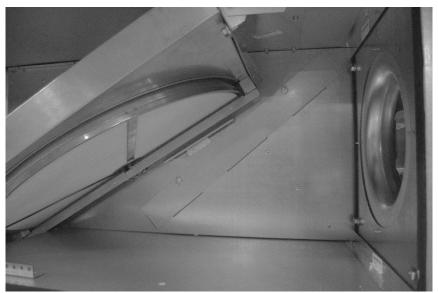


Figure 32 - H3 A or B Cabinet Outside Air Filter Access
H3 size A & B outside air filters - access through removing the sheet metal piece shown above.



Figure 33 - H3 C Cabinet Energy Recovery Wheel



H3 size C return air filters - access through top and left side of the filter box.



Figure 34 - H3 C Cabinet Outside Air Filter Access

H3 size C outside air filters - access through removing the sheet metal piece shown above, and removing another sheet metal piece once inside.



Figure 35 - H3 D or E Cabinet Energy Recovery Wheel H3 size D or E return air filters & outside air filters - access by removing the energy recovery wheel access panel.

Gas and Electric Heating

The unit is designed to heat a given amount of air while operating. If this amount of air is greatly reduced, approximately 1/3 during the heating season, the electric heating coil may overheat, and may cut the heater off entirely by action of the safety high temperature limit devices which are factory mounted at the heat exchanger and supply fan areas.

Adjust airflow after installation to obtain an air temperature rise within the range specified on the unit rating plate at the required external static pressure.

The tested minimum and maximum range of static pressure for the H3 is 0.4 - 5.6 mmHg [electric is 0.2 - 3.0 in. w.c]. The maximum supply air temperature is 60° C (140° F). The minimum allowable air temperature entering the gas heater is -40° C (-40° F).

Table 24 - Electric and Gas Heating Capacities

	Electric Heat Capacity		Gas Heat Capacity
	kW (230V, 460V)	kW (208V)	MBH
$\mathbf{A} = Heat A$	7.0	5.3	
$\mathbf{B} = Heat B$	14.0	10.5	
$\mathbf{C} = Heat \ C$	21.0	15.8	50 MBH
$\mathbf{D} = Heat D$	28.0	21.0	
$\mathbf{E} = Heat E$	35.0	26.3	
$\mathbf{F} = Heat F$	42.0	31.5	
G = Heat G	49.0	37.0	90 MBH
$\mathbf{H} = Heat H$	56.0	42.0	100 MBH
$\mathbf{J} = Heat J$	63.0	47.3	125 MBH
$\mathbf{K} = Heat K$	70.0	52.5	135 MBH
L = Heat L			150 MBH
$\mathbf{M} = Heat M$	84.0	63.0	180 MBH
N = Heat N			225 MBH
$\mathbf{P} = Heat P$			200 MBH
$\mathbf{Q} = Heat Q$			250 MBH
$\mathbf{R} = Heat R$			360 MBH
S = Heat S			400 MBH
T = Heat T			300 MBH

Gas Heating

A WARNING

FOR YOUR SAFETY

Read the entire gas heating installation section of this manual before beginning installation of the gas heating section.

If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

Unit Location and Clearances

- 1. Be sure unit is located with respect to building construction and other equipment to provide ready access and clearance to access panels or doors that must be opened to permit adjustment and servicing of the heating module.
- 2. The heating unit provided is listed for installation on the positive side of the circulating air blower only.
- 3. Locate unit to insure an adequate supply of fresh air to replace air used in the combustion and ventilation process.
- 4. Do not install exhaust vent where flue products can be drawn into adjacent building openings such as windows, doors, or fresh air intakes. Minimize the number of elbows or turns in vent pipe.
- 5. Do not install unit where it may exposed to potentially explosive or flammable vapors.
- 6. Do not locate unit in areas where corrosive vapors (such as chlorinated, halogenated, or acidic) are present in the atmosphere or can be mixed with combustion air entering heater.

Gas-Fired Heating

The Heatco gas-fired duct furnace is designed to heat a given amount of air while operating. Adjust airflow after installation to obtain an air temperature rise within the range specified on the unit rating plate at the required external static pressure.

For all installation, operation, and maintenance information, refer to the Heatco IOM.

Model / Rated	Min. Rise	Max.
Input		Rise
HDG050		
HDG100		
HDG125	30	90
HDG200		
HDA150		
HDA200	30	100
HDA250	30	100
HDA400		
HDB225	30	90
HDB300	30	90
EMG090		
EMG180	30	100
EMA180		
EMA225	30	100
EMA360		

Input

The correct heat capacity of the furnace is controlled by the burner orifices and the gas manifold pressure. The manifold pressure is factory set but must be checked at the time of start-up.

The unit's nameplate input rate value is calculated based on the altitude where the unit was shipped. Units installed at an elevation less than 610 meters (2000 feet) above sea level require no derating. At 610 meters (2000 feet) above sea level, a 4% derate adjustment must be applied to the standard input rate. For every additional 305 meters (1000 feet), there is an additional 4% derate adjustment.

For example, at 914 meters (3000 feet) above sea level, the derate adjustment for elevation would be 8%, resulting in a new heat exchanger rate of 92% of the standard input rate listed.

Piping Supports

Gas supply piping must be supported directly at the connection to the unit and at intervals listed in the following table with metal straps, blocks, or hooks. Piping must not be strained or bent.

Table 25 - Gas Piping Supports (Metric)

Pipe Size (mm)	Support Intervals
12.7 to 19.1	Every 1.8 m
19.1 to 25.4	Every 2.4 m
44.5 or Larger (Horizontal)	Every 3 m
31.8 or Larger	Every Floor

Table 26 - Gas Piping Supports (Imperial)

Pipe Size	Support Intervals	
1/2" to 3/4"	Every 6 ft	
3/4" to 1"	Every 8 ft	
1-3/4" or Larger	Every 10 ft	
(Horizontal)		
1-1/4" or Larger	Every Floor	
(Vertical)	Every Proof	

Leak Testing

All components of gas supply system, including manual shut off valves and the piping in the interior of the unit, must be leak tested with a soap solution before operating the appliance and at least on an annual basis thereafter.

A WARNING

Gas pressure to appliance controls must never exceed 14" w.c. (1/2 psi)

- 1. When pressure testing at 1/2 psi or less, close the manual shutoff valve on the appliance before testing.
- 2. When pressure testing gas supply line at 1/2 psi or higher, close manual gas valve and disconnect heater from supply line to be tested. Cap or plug the supply line.

A WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

A DANGER

LEAK CHECK GAS PIPE

The gas pipe in the unit shall be checked for leaks before operation and startup. Unit must not be placed in operation until a leak check has been conducted for all gas piping connections. All connections shall be checked for leaks annually after installation. Gas leaks could result in fire, explosion, or other hazardous situations.

A CAUTION

Some soaps used for leak detection can be corrosive to certain metals. Rinse piping thoroughly after leak test has been completed.

Phase and Brownout Protection Module



The DPM is a Digital Phase Monitor that monitors line voltages from 200VAC to 240VAC 1¢ and 200VAC to 600VAC 3¢. The DPM is 50/60 Hz self-sensing. DPM must be wired according to unit specific wiring diagram include in the control compartment

When the DPM is connected to the line voltage, it will monitor the line and if everything is within the setup parameters, the output contacts will be activated. If the line voltages fall outside the setup parameters, the output relay will be de-energized after the trip delay.

Once the line voltages recover, the DPM will re-energize the output relay after the restart time delay. All settings and the last 4 faults are retained, even if there is a complete loss of power.

UV Lights

Some units include UV lights for airstream disinfection. The UV fixture is installed directly downstream of cooling coil. Door interlock switches are provided with this option.

UV lamps ship loose in the vestibule and require installation during startup. Useful lamp life shall be 9000 hours (minimum) with no more than a 15% output loss at the end of the lamps life. Use AAON Part # R68850 for lamp replacement.

A WARNING

UV LIGHTS

Never expose eyes or skin to UVC light from any source, as personal injury may result. Wear gloves, face shield/glasses (per ANSI Z87.1) and cover all exposed skin.

DPM Setup Procedure

With the supply voltage active to the module, you can setup all of the DPM's settings without the line voltage connected.

To change the setpoint parameters use the right arrow key to advance forward through the setpoint parameters and the left arrow to backup if needed. When each parameter is displayed use the up/down keys to change and set the parameter.

After adjustments are made or if no adjustments are made it will take 2 to 4 minutes before the DPM energizes the output relay unless there is an out of tolerance issue with the incoming line voltage.

Default Set-up

Line Voltage460VAC, $3\emptyset$ Over & Undervoltage $\pm 10\%$ Trip Time Delay5 SecondsRe-Start Time Delay2 MinutesPhase Imbalance5%

Screens

Manufacturer's Screen

R-K Electronics DPM v0.0.00

Average Voltage Screen

VAvg Imb Hz 460 0 60 off

Default – the default screen shows the real time voltage detected in each of the 3 phases:

A-B B-C C-A 460 459 461 ON

Voltage Selection Screen (Vertical Format) Default = 460V, 3Ø

1Ø; 200, 1Ø; 208, 220. 10; 230, 10; 240. 1Ø: 200, 3Ø; 208, 3Ø; 220, 3Ø; 230, 3Ø; 240, 3Ø; 380, 3Ø; 415, 3Ø; 440, 3Ø; 460. 3Ø: 480 3Ø; 575, 3Ø; 600, 3Ø;

Over/Under voltage Percentage Screen (Vertical Format) Default = 10%

7% 8% 9% 10% 11% 12% 13% 14% & 15%

Trip Time Delay Screen (Vertical Format) Default = 5 sec

2S, 3S, 4S, 5S, 6S, 27S, 8S, 9S & 10S

Re-Start Time Delay Screen (Vertical Format) Default = 2 sec

Manual, 2S, 3S, 4S, 5S, 6S, 7S, 8S, 9S, 10S, 30S, 1M, 2M, 3M & 4M

Phase Imbalance Percentage Screen (Vertical Format) Default = 5%

3% 4% 5% 6% 7% 8% 9% & 10%

Fault Screen (Vertical Format)

"0" most recent faults, "1" previous fault "2" third oldest fault & "3" fourth oldest fault.

Fault Words:

"Voltage High"

(There is no voltage sensed on 3-L1/S)

(Average line voltage is less than selected Undervoltage Percentage)

(Average line voltage is more than selected Overvoltage Percentage)

"Imbalance" (One phase is lower than the average voltage by more than the Imbalance

percentage)

"Phase Loss (One phase is more than 30% below the Line Voltage selection)

"Bad Rotation" (The phase rotation sequence is reversed)

"Bad Freq" (Line frequency out of allowable range of 45 to 65 Hz)

Filter Replacement

Monthly filter inspection is required to maintain optimum unit efficiency.

A WARNING

Electric shock hazard. Shut off all electrical power to the unit to avoid shock hazard or injury from rotating parts.

It is strongly recommended that filter media be replaced monthly. Filters are located upstream of the evaporator coil. Open access panel and pull filters straight out to inspect all of the filters. Replace filters with the size indicated on each filter. Arrow on the replacement filters must point towards the blower. Units with an energy recovery wheel with have additional filters. See the Filter replacement section under the energy recover wheel section for more information.

Replacement Parts

Parts for AAON equipment may be obtained from your local representative https://www.aaon.com/find-a-rep. When ordering parts, reference the unit serial number and part number.

AAON

Warranty, Service and Parts Department 203 Gum Springs Rd.Longview, TX 75602 Ph: (918) 382-6450 techsupport@AAON.com www.AAON.com

Note: Before calling, technician must have model and serial number of the unit available for the service department to help answer questions regarding the unit.

Decommissioning

Before decommissioning unit, ensure you are familiar with the unit and its operation. Only individuals qualified for handling refrigerant may remove charge from the unit. Unit must be isolated electrically before beginning any decommissioning work. Proper PPE is required

Ensure any equipment that may be needed for handling refrigerant cylinders safely is available. Equipment and cylinders used for recovery must be in good working order and comply with appropriate standards.

Operate recovery machine in accordance with the instructions. Remove refrigerant from all parts of the refrigeration system. On heat pumps, refrigerant must be recovered from discharge, suction and common liquid lines.

Weigh out refrigerant when removing to ensure that all refrigerant is removed and cylinders are not overfilled. Place refrigerant cylinder on scales before beginning recovery process. Do not exceed maximum pressure of cylinder.

When recovery is completed, remove all cylinders containing recovered refrigerant from the site. Ensure all isolation valves on equipment are closed and all warning decals are still visible on unit. Label the unit as having been decommissioned and date and sign label.

Warranty: Refer to the Limited Warranty Certificate for the unit warranty details. Contact your AAON representative for a unit specific copy of the certificate for your serial number.



Limited Warranty Certificate

GENERAL CONDITIONS

AAON Coil Products, Inc. (hereinafter referred to as "ACP") warrants this ACP equipment, as identified hereon, to be free of defects in material and workmanship under normal use, service, and maintenance. Our obligations under this warranty must be limited to repairing or replacing the defective part, or parts, which in our judgment show evidence of such defects. ACP is not liable for labor charges and other costs incurred for removing, shipping, handling or transporting defective part, or parts, or for shipping, handling, transporting, or installing repaired or replacement part, or parts

The limited warranty is effective one (1) year from date of **original installation**, or eighteen (18) months from date of original shipment from the factory, whichever occurs first and covers all parts and components in this ACP equipment excluding air filters, belts, refrigerant moisture driers, and lost refrigerant, which are not included in any part of this limited warranty. The replacement part, or parts, assume only the unused portion of the original limited warranty and are shipped f.o.b. from the factory and freight prepaid by the factory.

The limited warranty is effective for products manufactured at the Tulsa, Oklahoma or Longview, Texas facility.

THIS LIMITED WARRANTY ONLY APPLIES WHEN THE ORIGINAL MODEL NUMBER AND SERIAL NUMBER OF THE ACP UNIT ARE GIVEN AT TIME OF REQUEST FOR REPLACEMENT PART, OR PARTS. DEFECTIVE PART, OR PARTS, MUST BE RETURNED PREPAID, WITH ITS ASSIGNED RETURN MATERIAL TAG, WITHIN FOURTEEN (14) DAYS OF RECEIPT OF THE REPLACEMENT PART, OR PARTS.

EXTENDED LIMITED WARRANTY ON COMPRESSORS INCLUDED IN SINGLE PACKAGE EQUIPMENT (NOT INCLUDING CHILLERS); OPTIONAL ON OTHER EQUIPMENT

For the second through the fifth year from date of **shipment**, we further agree to repair or replace the fully hermetic compressor, at our option, for the **original purchase-user only**. The repaired or replacement fully hermetic compressor will be supplied f.o.b. the factory, freight **prepaid and add**, providing the defective fully hermetic compressor is returned **prepaid by the customer**, and is proven to be inoperative due to defects in materials or workmanship. This extended limited warranty covers **only** the fully hermetic compressor and **does not include** any labor charges, or other additional costs incurred for removing, shipping, handling, transporting, or replacing the defective fully hermetic compressor. It also **does not include** additional costs incurred for shipping, handling, or transporting of electric controls such as relays, capacitors, pressure controls, or fan-motor assemblies, condensers, receivers, etc, which carry the standard **one-year limited warranty**.

EXTENDED LIMITED WARRANTY OF M2/V3/H3 SERIES GAS FIRED HEAT EXCHANGERS

For the second through the tenth year from date of original installation, we further warrant the steel heat exchanger against failure due to defects in materials and workmanship for the original purchaser-user only, in accordance with the following: For the first five (5) years from date of shipment, we agree to repair or replace the heat exchanger, at our option, for the original purchaser-user only; during the sixth year, we will charge 50% of the current trade price for repaired or replacement steel heat exchanger, as the case may be, during the seventh year, 60%, during the eighth year, 70% during the ninth year, 80% and during the tenth year, once

In all cases, the repaired or replacement heat exchanger will be supplied fo.b. our factory, freight prepaid, providing the defective heat exchanger is returned **prepaid**, and if it is proved to be inoperative due to defects in materials and workmanship. This extended limited warranty covers **only** the heat exchanger and **does not include** labor charges, or other costs incurred for removing, shipping, handling, transporting, or installing repaired replacement heat exchanger. This extend limited warranty **does not apply** where the furnace has been operated in an atmosphere contaminated by chlorine, fluorine, or any other damaging chemical compounds.

FOR OPTIONAL FIVE YEAR EXTENDED LIMITED WARRANTY OF COIL COATING

For the second through fifth year from date of shipment, we further warrant the coating of e-coated coils on the equipment against failure due to defects in materials and workmanship for the original purchaser-user only. Coil cleaning, maintenance, and record keeping must be followed according to the unit Installation, Operation and Maintenance Manual to maintain warranty.

OTHER CONDITIONS

This warranty does not cover any ACP unit or part thereof which has been subject to accident, negligence, damages in transit, misuse or abuse, or which has been tampered with or altered in any way, or which has not been installed operated serviced and maintained in accordance with our instructions, or which has been installed outside of the Continental United States or Canada, or on which the serial number or identification number has been altered defaced, or removed. ACP will not be responsible for failure of the unit to start due to voltage conditions, blown fuses, open circuit breakers, or other damages due to the inadequacy or interruption of electric service.

This warranty **does not cover** equipment containing a water-to-refrigerant heat exchanger for any damage resulting from freezing, fouling, corrosion or clogging.

ACP must not be liable for any default or delay in performance hereunder, caused by a contingency beyond its control, including governmental restrictions or restraint, strikes, short or reduced supply of raw materials or parts, floods, winds, fire, lightning strikes, or any other acts of God.



Limited Warranty Certificate

DISCLAIMERS OF WARRANTIES

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR OTHER WARRANTY OF QUALITY, WHETHER EXPRESS OR IMPLIED, EXCEPT OF TITLE AND AGAINST PATENT INFRINGEMENT, CORRECTION OF NON-CONFORMITIES ARE LIMITED TO REPAIR OR REPLACEMENT OF THE DEFECTIVE PART OR PARTS, AT SELLER'S OPTION, WHICH MUST CONSTITUTE FULFILLMENT OF ALL TORT OR OTHERWISE IT IS EXPRESSLY UNDERSTOOD THAT ACP MUST NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES. ACP MUST NOT UNDER ANY CIRCUMSTANCES BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, SUCH AS, BUT NOT LIMITED TO DAMAGES OR LOSS OF OTHER PROPERTY OR EQUIPMENT, LOSS OF PROFITS OR REVENUE, COST OF CAPITAL, COST OF PURCHASED OR REPLACEMENT GOODS, OR CLAIMS OF BUYER OR USER FOR SERVICE INTERRUPTIONS. THE REMEDIES OF THE BUYER SET FORTH HEREIN ARE EXCLUSIVE, AND THE LIABILITY OF ACP WITH RESPECT TO ANY CONTRACT, OR ANYTHING DONE IN CONNECTION THEREWITH SUCH AS THE PERFORMANCE OR BREACH THEREFORE, OR FROM THE MANUFACTURE, SALE, DELIVERY, RESALE, INSTALLATION, OR USE OF ANY GOODS COVERED BY OR FURNISHED UNDER THIS CONTRACT WHETHER ARISING OUT OF CONTRACT, NEGLIGENCE, STRICT TORT, OR UNDER ANY WARRANTY, OR OTHERWISE, MUST NOT EXCEPT AS EXPRESSLY PROVIDED HEREIN, EXCEED THE PRICE OF THE GOODS UPON WHICH SUCH LIABILITY IS BASED.

WITH RESPECT TO THE GOODS SOLD, THE BUYER HEREBY WAIVES ALL LIABILITY ARISING FROM STATUTE, LAW, STRICT LIABILITY IN TORT, OR OTHERWISE, INCLUDING WITHOUT LIMITATION ANY OBLIGATION OF ACP WITH RESPECT TO CONSEQUENTIAL OR INCIDENTAL DAMAGES AND WHETHER OR NOT OCCASIONED BY ACP NEGLIGENCE. TIME LIMIT ON COMMENCING LEGAL ACTIONS: AN ACTION FOR BREACH OF THIS CONTRACT FOR GOOD SOLD OR ANY OTHER ACTION OTHERWISE ARISING OUT OF THIS CONTRACT, MUST BE COMMENCED WITHIN ONE (1) YEAR FROM THE DATE, THE RIGHT, CLAIM, DEMAND OR CAUSE OF ACTION MUST FIRST OCCUR, OR BE BARRED FOREVER.

SEVERABILITY

IF ANY PROVISION OR CAUSE OF THIS CONTRACT OR APPLICATION THEREOF TO ANY PERSON OR CIRCUMSTANCES IS HELD INVALID OR UNCONSCIONABLE SUCH INVALIDITY OR UNCONSCIONABILITY MUST NOT AFFECT OTHER PROVISIONS OR APPLICATIONS OF THE CONTRACT WHICH CAN BE GIVEN EFFECT WITHOUT THE INVALID OR UNCONSCIONABLE PROVISIONS OF THE CONTRACT ARE DECLARED BE SEVERABLE.

EQUIPMENT INFO	RMATION (REQUIRE	D)					
Job Name:	ck or tap here to	Sales Order Number:	Click or tap here to enter text.	Unit Tag:	Click or tap here to enter text	Date of Shipment:	Click or tap here to enter text.
Serial Number:	Click or tap here to enter	Unit Model Number:	r tap here to e	enter text.			

Filter Information

Table 27 - H3 Series A Cabinet Unit Filters

Feature 6B	Qty. Size (cm) [in.]	Туре
0	No Pre Filters	
A	(1) 40.6 x 63.5 x 5.1 [16 x 25 x 2]	Pleated MERV 8
В		Pleated MERV 8
С	(1) 40.6 x 63.5 x 10.2	Pleated MERV 11
D	[16 x 25 x 4]	Pleated MERV 13
Е		Pleated MERV 14
F		Pleated MERV 8 and Pleated MERV 8
G	(1) 40.6 x 63.5 x 5.1 and (1) 40.6 x 63.5 x 10.2	Pleated MERV 8 and Pleated MERV 11
Н	[16 x 25 x 2 and 16 x 25 x 4]	Pleated MERV 8 and Pleated MERV 13
J		Pleated MERV 8 and Pleated MERV 14

Table 28 - H3 Series B Cabinet Unit Filters

Feature 6B	Qty. Size (cm) [in.]	Туре
0	No Pre Filters	
A	(2) 40.6 x 50.8 x 5.1 [16 x 20 x 2]	Pleated MERV 8
В		Pleated MERV 8
С	(2) 40.6 x 50.8 x 10.2	Pleated MERV 11
D	[16 x 20 x 4]	Pleated MERV 13
Е		Pleated MERV 14
F		Pleated MERV 8 and Pleated MERV 8
G	(2) 40.6 x 50.8 x 5.1 and (2) 40.6 x 50.8 x 10.2	Pleated MERV 8 and Pleated MERV 11
Н	[16 x 20 x 2 and 16 x 20 x 4]	Pleated MERV 8 and Pleated MERV 13
J		Pleated MERV 8 and Pleated MERV 14

Table 29 - H3 Series C Cabinet Unit Filters

Feature 6B	Qty. Size (cm) [in.]	Туре
0	No Pre Filters	
A	(2) 50.8 x 50.8 x 5.1 and (1) 40.6 x 50.8 x 5.1	Pleated MERV 8
B C	[20 x 20 x 2 and 16 x 20 x 2] (2) 50.8 x 50.8 x 10.2 and (1) 40.6 x 50.8 x 10.2	Pleated MERV 8 Pleated MERV 11
D	(1) 1010 112010 111012	Pleated MERV 13
Е	[20 x 20 x 4 and 16 x 20 x 4]	Pleated MERV 14
F	(2) 50.8 x 50.8 x 5.1 and (1) 40.6 x 50.8 x 5.1	Pleated MERV 8 and Pleated MERV 8
G	and (2) 50.8 x 50.8 x 10.2 and	Pleated MERV 8 and Pleated MERV 11
Н	(1) 40.6 x 50.8 x 10.2	Pleated MERV 8 and Pleated MERV 13
Л	[20 x 20 x 2 and 16 x 20 x 2] and [20 x 20 x 4 and 16 x 20 x 4]	Pleated MERV 8 and Pleated MERV 14

Table 30 - H3 Series D Cabinet Unit Filters

Feature 6B	Qty. Size (cm) [in.]	Туре
0	No Pre Filters	
A	(1) 50.8 x 50.8 x 5.1 and (4) 40.6 x 50.8 x 5.1	Pleated MERV 8
	[20 x 20 x 2 and 16 x 20 x 2]	71 11 (777)
В	(1) 50.8 x 50.8 x 10.2 and	Pleated MERV 8
C	(4) 40.6 x 50.8 x 10.2	Pleated MERV 11
D		Pleated MERV 13
E	[20 x 20 x 4 and 16 x 20 x 4]	Pleated MERV 14
F	(1) 50.8 x 50.8 x 5.1 and (4) 40.6 x 50.8 x 5.1	Pleated MERV 8 and Pleated MERV 8
G	and (1) 50.8 x 50.8 x 10.2 and	Pleated MERV 8 and Pleated MERV 11
Н	(4) 40.6 x 50.8 x 10.2	Pleated MERV 8 and Pleated MERV 13
J	[20 x 20 x 2 and 16 x 20 x 2] and [20 x 20 x 4 and 16 x 20 x 4]	Pleated MERV 8 and Pleated MERV 14

Table 31 - H3 Series E Cabinet Unit Filters

Feature 6B	Qty. Size (cm) [in.]	Туре
0	No Pre Filters	
A	(6) 40.6 x 63.5 x 5.1 [16 x 25 x 2]	Pleated MERV 8
В		Pleated MERV 8
С	(6) 40.6 x 63.5 x 10.2	Pleated MERV 11
D	[16 x 25 x 4]	Pleated MERV 13
Е		Pleated MERV 14
F		Pleated MERV 8 and Pleated MERV 8
G	(6) 40.6 x 63.5 x 5.1 and (6) 40.6 x 63.5 x 10.2	Pleated MERV 8 and Pleated MERV 11
Н	[16 x 25 x 2 and 16 x 25 x 4]	Pleated MERV 8 and Pleated MERV 13
J		Pleated MERV 8 and Pleated MERV 14

Table 32 - H3 Series A Cabinet Final Filters

Feature 6C	Qty. Size (cm) [in.]	Туре
0	No Final Filters	
A	(1) 40.6 x 63.5 x 5.1 [16 x 25 x 2]	Pleated MERV 8
В	(1) 40 6 = 62.5 = 20.5	Cartridge MERV 11
С	(1) 40.6 x 63.5 x 30.5 [16 x 25 x 12]	Cartridge MERV 13
D	[10 X 23 X 12]	Cartridge MERV 14
Е	(1) 40.6 x 63.5 x 5.1 and	Pleated MERV 8 and Cartridge MERV 11
F	40.6 x 63.5 x 30.5	Pleated MERV 8 and Cartridge MERV 13
G	[16 x 25 x 2 and 16 x 25 x 12]	Pleated MERV 8 and Cartridge MERV 14

Table 33 - H3 Series B Cabinet Final Filters

Feature 6C	Qty. Size (cm) [in.]	Туре
0	No Final Filters	
A	(2) 40.6 x 50.8 x 5.1 [16 x 20 x 2]	Pleated MERV 8
В	(2) 40 6 y 50 8 y 20 5	Cartridge MERV 11
С	(2) 40.6 x 50.8 x 30.5 [16 x 20 x 12]	Cartridge MERV 13
D	[10 X 20 X 12]	Cartridge MERV 14
E	(2) 40.6 x 50.8 x 5.1 and	Pleated MERV 8 and Cartridge MERV 11
F	(2) 40.6 x 50.8 x 30.5	Pleated MERV 8 and Cartridge MERV 13
G	[16 x 20 x 2 and 16 x 20 x 12]	Pleated MERV 8 and Cartridge MERV 14

Table 34 - H3 Series C Cabinet Final Filters

Feature 6C	Qty. Size (cm) [in.]	Туре
0	No Final Filters	
A	(2) 50.8 x 50.8 x 5.1 and (1) 40.6 x 50.8 x 5.1	Pleated MERV 8
	[20 x 20 x 2 and 16 x 20 x 2]	
В	(2) 50.8 x 50.8 x 30.5 and	Cartridge MERV 11
C	(1) 40.6 x 50.8 x 30.5	Cartridge MERV 13
D	[20 x 20 x12 and 16 x 20 x 12]	Cartridge MERV 14
Е	(2) 50.8 x 50.8 x 5.1 and (1) 40.6 x 50.8 x 5.1	Pleated MERV 8 and Cartridge MERV 11
F	and (2) 50.8 x 50.8 x 30.5 and	Pleated MERV 8 and Cartridge MERV 13
G	(1) 40.6 x 50.8 x 30.5 [20 x 20 x 2 and 16 x 20 x 2] and [20 x 20 x 12 and 16 x 20 x 12]	Pleated MERV 8 and Cartridge MERV 14

Table 35 - H3 Series D Cabinet Final Filters

Feature 6C	Qty. Size (cm) [in.]	Type
0	No Final Filters	
A	(4) 50.8 x 50.8 x 5.1 [20 x 20 x 2]	Pleated MERV 8
В	(4) 50 8 4 50 8 4 20 5	Cartridge MERV 11
C	(4) 50.8 x 50.8 x 30.5 [20 x 20 x 12]	Cartridge MERV 13
D	[20 x 20 x 12]	Cartridge MERV 14
E	(4) 50.8 x 50.8 x 5.1 and	Pleated MERV 8 and Cartridge MERV 11
F	(4) 50.8 x 50.8 x 30.5	Pleated MERV 8 and Cartridge MERV 13
G	[20 x 20 x 2 and 20 x 20 x 12]	Pleated MERV 8 and Cartridge MERV 14

Table 36 - H3 Series E Cabinet Final Filters

Feature 6C	Qty. Size (cm) [in.]	Type
0	No Final Filters	
A	(6) 40.6 x 63.5 x 5.1 [16 x 25 x 2]	Pleated MERV 8
В	(6) 10 6 y 62 5 y 20 5	Cartridge MERV 11
С	(6) 40.6 x 63.5 x 30.5 [16 x 25 x 12]	Cartridge MERV 13
D	[10 x 23 x 12]	Cartridge MERV 14
Е	(6) 40.6 x 63.5 x 5.1 and	Pleated MERV 8 and Cartridge MERV 11
F	(6) 40.6 x 63.5 x 30.5	Pleated MERV 8 and Cartridge MERV 13
G	[16 x 25 x 2 and 16 x 25 x 12]	Pleated MERV 8 and Cartridge MERV 14

Table 37 - H3 Series Energy Recovery OA Filters (Feature $13 \neq 0$)

Table 57 - 115 Series Energy Recovery OAT Inters (Teature 15 + 0)			
Unit Size	Qty. Size (cm) [in.]	Type	
A	(1) 70 x 30.5 x 5.1 [24 x 12 x 2]	Pleated MERV 8	
В	(1) 50.8 x 63.5 x 5.1 [20 x 25 x 2]	Pleated MERV 8	
С	(2) 70 x 70 x 5.1 [24 x 24 x 2]	Pleated MERV 8	
D	(4) 40.6 x 50.8 x 5.1 (1) 50.8 x 50.8 x 5.1 [16 x 20 x 2] [20 x 20 x 2]	Pleated MERV 8	
Е	(6) 40.6 x 63.5 x 5.1 [16 x 25 x 2]	Pleated MERV 8	

Table 38 - H3 Series Energy Recovery RA Filters (Feature $13 \neq 0$)

Unit Size	Qty. Size (cm) [in.]	Туре
A	(1) 40.6 x 50.8 x 5.1 [16 x 20 x 2]	Pleated MERV 8
В	(1) 50.8 x 63.5 x 5.1 [20 x 25 x 2]	Pleated MERV 8
С	(2) 50.8 x 63.5 x 5.1 [20 x 25 x 2]	Pleated MERV 8
D	(4) 40.6 x 50.8 x 5.1 (1) 50.8 x 50.8 x 5.1 [16 x 20 x 2] [20 x 20 x 2]	Pleated MERV 8
Е	(6) 40.6 x 63.5 x 5.1 [16 x 25 x 2]	Pleated MERV 8

Refrigerant Piping Diagrams

See the matching Condensing Unit IOM for Piping Diagrams

Appendix A – Unit Safety Hierarchy



Figure 36 Unit Safety Hierarchy

Default (A2L Priority)

Units will ship with A2L sequences at the highest priority. This may activate the indoor blower in the event of an A2L leak even if Building Smoke Controls or Nonsmoke safeties interrupt the 24V/120V safety circuit. The terminal block labeled 'Hierarchy Control' will control the priority.

The jumper will connect 'Com' and 'A2L' for A2L priority.

 


Figure 37 A2L Priority Jumper

Building Smoke Control Priority

Units will have the option to shift the Unit Safety Hierarchy in the field. To shift the priority, turn power off to the unit and move the jumper to 'Com' and 'BSC' on the 'Hierarchy Control' terminals.

 


Figure 38 Building Smoke Control Priority
Jumper

A WARNING

Using this alternative wiring method will shift the unit safety priority toward building smoke control. Only move this jumper if required by local codes. Once the jumper is moved, building smoke control may override A2L.

Example Scenario

If priority is given to Building Smoke Controls, and simultaneously both A2L and any of the Building Smoke Controls goes into alarm, the 24V/120V safety circuit will shut down the unit and A2L mitigation will not take place.

Locating the "Hierarchy Control" LVTB
Locate the low voltage control section
Identify the 'Hierarchy Control' label by the
(3) terminals labeled "BSC", "COM",
"A2L"

H3 Series Startup Form

Job Name:	Date:
Address:	
Model Number:	
	Tag:
Startup Contractor:	
Address:	
P	Phone:
Pre Startup Checklist	
Installing contractor must verify the following items.	
1. Is there any visible shipping damage?	☐Yes ☐No
2. Is the unit level?	☐Yes ☐No
3. Are the unit clearances adequate for service and operation?	☐Yes ☐No
4. Do all access doors open freely and are the handles operational?	☐Yes ☐No
5. Have all shipping braces been removed?	☐Yes ☐No
6. Have all electrical connections been tested for tightness?	☐Yes ☐No
7. Does the electrical service correspond to the unit nameplate?	☐Yes ☐No
8. On 208/230V units, has transformer tap been checked?	☐Yes ☐No
9. Has overcurrent protection been installed to match the unit nameplate requirement?	Yes No
10. Have all set screws on the fans been tightened?	☐Yes ☐No
11. Do all fans rotate freely?	☐Yes ☐No
12. Does the field water piping to the unit appear to be correct per design parameters?	¹
13. Is all copper tubing isolated so that it does not rub?	☐Yes ☐No
14. Have the damper assemblies been inspected?	☐Yes ☐No
15. Are air filters installed with proper orientation?	☐Yes ☐No
16. Have condensate drain and p-trap been connected?	☐Yes ☐No
17. Is the TXV sensing bulb in the correct location?	☐Yes ☐No
18. Does the TXV sensing bulb have proper thermal contact and is properly insulated?	☐Yes ☐No

19. Are all ship- unit drawing	er [□Yes □No						
20. Is the actual refrigerant charge of the largest circuit in accordance with the required conditioned floor area according to Table 17?								
			openings unobstr				☐Yes ☐No	
22. Are marking	gs, decals, a	and w	arnings on unit c	learly visible?			☐Yes ☐No	
23. Are all dam	aged or ille	gible	markings and wa	arnings replaced	1?		☐Yes ☐No	
24. Has the funct	tionality of t	he Re	frigerant Detection	n System been ve	rified??		□Yes□No	
Ambient Tempe	erature							
Ambient Dry B	ulb Temper	rature	e°C/°F	Ambient Wet B	ulb Tem	peratu	ure°C/°F	
Voltage								
L1-L2	L2-L3	3	L1-L3	L1-Ground	L2-G	round	L3-Ground	
Supply Fan Ass	embly							
Align	ment \square		Check Ro	otation	Namej	plate A	Amps	
Number	hp	L1	Volts/Amps	L2 Volts/Amp	os	L3 V	3 Volts/Amps	
1								
2								
VFD Frequency				VAV Controls	3			
Power Exhaust	Fan Assen	ıbly						
Alignment			Check Rotation		Namepl	ate Aı	mps	
Number	hp	L1	Volts/Amps	L2 Volts/Amp	S	L3 V	olts/Amps	
1								
2								
VFD Frequency VAV Controls								
Energy Recovery Wheel Assembly								
Wheels Spin Freely Check Rotation FLA								
Number	hp	L1	Volts/Amps	L2 Volts/Amp	os	L3 V	olts/Amps	
1								
2.								

Dampers

OA Operation Check	Damper Wiring Check	Gears Check				
RA Operation Check	Damper Wiring Check	Gears Check				
EA Operation Check	Damper Wiring Check	Gears Check				
Damper Actuator Type:						
Economizer Changeover Type and Operation:						

Refrigeration System 1 - Cooling Mode

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge		•	•	N/A	N/A
Suction				N/A	
Liquid					N/A

Refrigeration System 2 - Cooling Mode

9	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge				N/A	N/A
Suction				N/A	
Liquid					N/A

Refrigeration System 3 - Cooling Mode

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge		_		N/A	N/A
Suction				N/A	
Liquid					N/A

Refrigeration System 4 - Cooling Mode

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge			_	N/A	N/A
Suction				N/A	
Liquid					N/A

Compressors/DX Cooling

Check Rotation								
	L1	L2	L3	Head	Suction	Crankcase		
Number	Volts/Amps	Volts/Amps	Volts/Amps	Pressure	Pressure	Heater		
	_	_	_	KPA/PSIG	KPA/PSIG	Amps		
1								
2								
3								
4								

Air-Cooled Condenser Fans

Alignment		Check Rotation		Na	Nameplate Amps	
Number	hp	L1 Vo	olts/Amps	L2 Volts/Amps		L3 Volts/Amps
1						
2						
3						
4						

Refrigeration System 1 - Heating Mode (Heat Pump Only)

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge		_	_	N/A	N/A
Suction				N/A	
Liquid					N/A

Refrigeration System 2 - Heating Mode (Heat Pump Only)

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge		Temperature	Temperature	N/A	N/A
Suction				N/A	
Liquid					N/A

Refrigeration System 3 - Heating Mode (Heat Pump Only)

	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge		_		N/A	N/A
Suction				N/A	
Liquid					N/A

Refrigeration System 4 - Heating Mode (Heat Pump Only)

	<u>•</u>				
	Pressure	Saturated Temperature	Line Temperature	Sub-cooling	Superheat
Discharge				N/A	N/A
Suction				N/A	
Liquid					N/A

1.	Has the entire system been flushed and pressure checked?	☐Yes ☐No
2.	Has the entire system been filled with fluid?	☐Yes ☐No
3.	Has air been bled from the heat exchangers and piping?	□Yes □No
4.	Is the glycol the proper type and concentration (N/A if water)?	☐Yes ☐No
5.	Is there a minimum load of 50% of the design load?	□Yes □No
6.	Has the water piping been insulated?	☐Yes ☐No
7.	What is the freeze point of the glycol (N/A if water)?	

Electric Heating

Stages_		Limit Lockout	Aux. Limit Lockout 🗌
Stage	Amps	Stage	e Amps
1		5	
2		6	
3		7	
4		8	

A2L Mitigation Board

1.	Does each port (sensor 1-3) have a male connector plugged in on	☐ Yes ☐ No
	both the Cabinet and Airstream board?	
2.	Do the compressor(s) and gas heat operation shut off when the	☐ Yes ☐ No
	Cabinet Board is in the alarm state?	
3.	Does the unit operate normally except compressor and gas heat	Yes No
	operation when the Cabinet Board is in the alarm state?	
4.	Do the compressor(s) shut off and fan(s) stay on when the Airstream	Yes No
	Board is in the alarm state?	
5.	Does non-compressor or gas heating/cooling stay on when both A2L	Yes No
	Mitigation boards are in the alarm state?	

Maintenance Log

This log must be kept with the unit. It is the responsibility of the owner and/or maintenance/service contractor to document any service, repair or adjustments. AAON Service and Warranty Departments are available to advise and provide phone help for proper operation and replacement parts. The responsibility for proper startup, maintenance and servicing of the equipment falls to the owner and qualified licensed technician.

Entry Date	Action Taken	Name/Tel.

Maintenance Log (E-Coated Coil)

AAON E-COATED COIL MAINTENANCE RECORD

) Date	on		r Potable Water Chlorides se Frontwash Rinse Removed												
Installation Date	Unit Location	Customer	Potable Water Backwash Rinse												
			Approved Cleaner Used												
			Coil Cleaned												
			Surface Debris Removed												
ite	**		Ambient Temp (°F)												
Installation Site	Unit Model#	Unit Serial #	Year 20	Jan	Feb	Mar	Apr	May	Jun	lut	Aug	Sep	0ct	Nov	Dec

illar particulate without harming the coated surfaces. The following cleaning agents have

llar par						
, greasy residue, lint and sim	PART NUMBER		G074480 / 80406	or	V82540	G074490 / 80408
nave been approved for use on AACM E-Coated coils to remove moto, mildew, dust, soot, greasy residue, incrand similar part	RESELLER	Rectorseal	2601 Spenwick Drive, Houston, Texas	77055	(P): 713-263-8001	20.00
lave been approved for use on AAON E-Co	CLEANING AGENT		GulfClean "" Coil Cleaner	or	Enviro-Coil Cleaner	GulfClean Salt Reducer"

RECOMMENDED CHLORIDE REMOVER Rectorseal 2601 Spenwick Drive, Houston, Texas 77055 (P): 713-263-8001

Literature Change History

September 2022

New H3 Series IOM.

May 2023

Added metric conversions equivalents in text and tables. Added new warning labels. Added safety statements. Added KAIC tables for fuse sizing. Removed gas heating information.

October 2023

Added statement 1 about V3 clearances tables. Added they must consider combustible and non-combustible surfaces. Add statement about PARTIAL UNIT AIR CONDITIONERS in section after warning boxes. Added statement in electric heat section about the tested min and max static pressures are between 0.2 - 4.0 inH2O.

April 2024

Additional warnings added. Text added to installation section about proper ventilation requirements. Minimum Floor Area for charge table added. Added "Refrigerant Detection System" for new mitigation board for A2L refrigerant. Additional checklist items added to Startup form. Sentence added to storage section in regards to ASHRAE 15 requirements. Added section about proper Refrigerant removal and Evacuation.

July 2024

Added text for UV lights and lamp replacement part number. Added text to the RDS section about the "COMP" relay if paired to a condensing unit.

August 2024

Added process of Decommissioning the unit. Added text to General Information stating the maximum installation elevation is 11,500 ft.

September 2024

Added details to the RDS text for the mitigation board operation.

October 2024

Created 454B part number. Added plenum fan gap tolerances to supply fan section.

January 2025

Updated decommissioning section. Updated RDS section, updated startup form. Updated Warnings and caution section.

September 2025

Updated Heating section to reflect Heatco products. Updated Features B1,B2, 1A, 1B, 1C, 3, 8, 15, 19; added Unit Safety Hierarchy Appendix



AAON 203 Gum Springs Rd. Longview, TX 75602-1721 www.AAON.com

H3 Series UL60335
Installation, Operation &
Maintenance
G164850 Rev. C · 250916

Factory Technical Support: 918-382-6450

Note: Before calling Technical Support, please have the model and serial number of the unit available.

Parts: For replacement parts, please contact your local AAON Representative.

It is the intent of AAON to provide accurate and current product information. However, in the interest of product improvement, AAON reserves the right to change pricing, specifications, and/or design of its product without notice, obligation, or liability.

Copyright © AAON, all rights reserved throughout the world. $AAON^{\text{@}}$ and $AAONAIRE^{\text{@}}$ are registered trademarks of AAON, Inc., Tulsa, OK.