

USB Serial Converter and Serial Port Driver

Installation Instructions:

Step 1: Download the USB Driver software file by *double-clicking* on the link “USB Driver Setup.zip file for installing USB drivers for all WattMaster Products.”

Step 2: *Click <Open>* when asked to save or open the file.

Step 3: Extract or run (**double-click**) USB Driver Setup.exe.

Step 4: Once you unzip the file, the *WattMaster USB Driver Installation Window* will appear. Click **<Install>**. This will unzip the driver installation files to C:\Temp\Wattmaster USB Drivers.

Step 5: *Click your <Start>* button and then *click, <computer>*.

Step 6: *Double-click* Local Disk (C:). Then *double-click* the Temp folder.

Step 7: *Double-click* the WattMaster USB Drivers folder. Click on the folder that pertains to your specific USB device and Windows version and then *double-click* the USBInstaller.exe program.

NOTE: On Prism 2 Version 4.5.0 and higher, the Prism Help Window will display your operating system at the top of the window – either 32 bit or 64 bit.

For example, if you are using one of the newer devices, you would *click* on the folder USBLinkNewSS0073-CommLink5-PTLinkII-AllWin-OS. Then, if you are using Windows 7 or 8, *click* on CP210xVCPInstaller_64_Bit.exe. If you are using an older version of Windows, you would *click* on CP210xVCPInstaller_32_Bit.exe.

Step 8: *Click <Begin Install>* and the installation program will walk you through the rest of the steps. The program might prompt you to remove old USB drivers from your computer. *Click <Yes>* if so. Once installation is complete, you will need to reboot your computer to have the new settings take effect.

Step 9: With successful USB driver installation, you can now connect your USB device.